



iZone Navi Climate Control System
C265K

Scan the following QR code to get step-by-step instructions on how to install the system or refer to the steps below.




supportdesk@izone.com.au
+61 8 6556 6415

Controlling sensor option 1:
RETURN AIR CONTROL

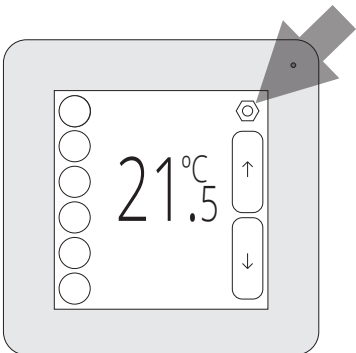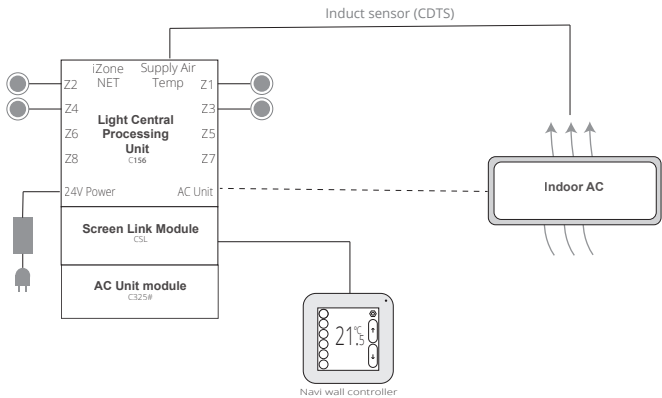


From the **Home** screen, select the **Settings** cog in the top right corner.

Enter your installer code when prompted. If you don't have an installer code, register as an installer (www.izone.com.au > SMART INSTALLER > Register) or use the default installer code 926383.

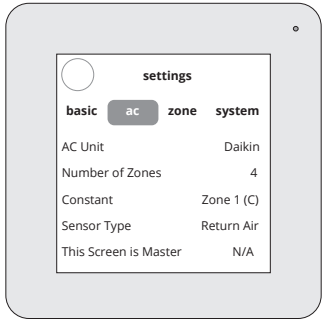

Open the **AC** tab and tap the value of the setting you want to change.

- **AC Unit:** Automatically detects the AC brand when the C325# module is connected
- **Number of Zones:** Select between 0-8 zones.
- **Constant:** Choose 'No Constant' when a fixed constant has been installed (no zone damper) OR select the zone you want to nominate as the constant.
- **Sensor Type:** Return Air
- **This Screen is Master:** N/A

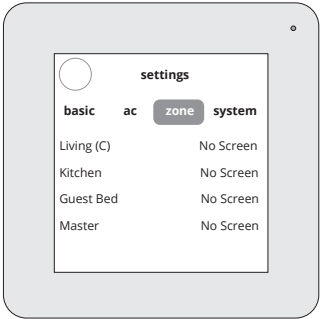


Open the **Zone** tab and tap on the name of the zone. Select from a list of predefined zone names or change the zone name from the iZone Home mobile application.

The zone sensor options should be configured as **No Screen**.


Controlling sensor option 2:
MASTER CONTROL

Wiring diagram
(see RETURN AIR above)

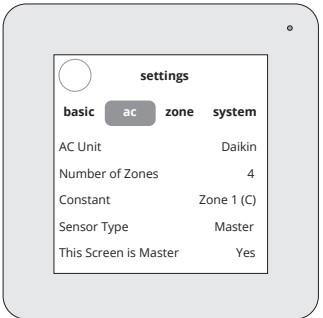



From the **Home** screen, select the **Settings** cog in the top right corner. Open the AC tab and tap the value of the setting you want to change. Enter your installer code when prompted. If you don't have an installer code, register as an installer (www.izone.com.au > SMART INSTALLER > Register) or use the default installer code 926383.

- **AC Unit:** Automatically detects the AC brand when the C325# module is connected
- **Number of Zones:** Select between 0-8 zones.
- **Constant:** Choose 'No Constant' when a fixed constant has been installed (no zone damper) OR select the zone you want to nominate as the constant.
- **Sensor Type:** Master
- **This Screen is Master:** Select Yes on the Navi wall controller that must serve as the master sensor

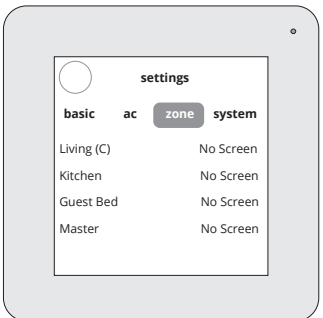


Open the **Zone** tab and tap on the name of the zone. Select from a list of predefined zone names or change the zone name from the iZone Home mobile application.

Controlling sensor option 3:
ZONE CONTROL

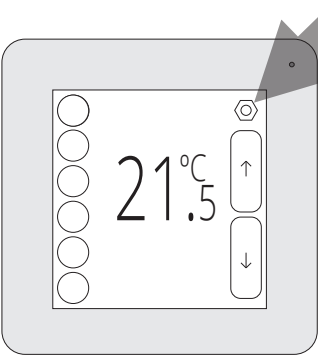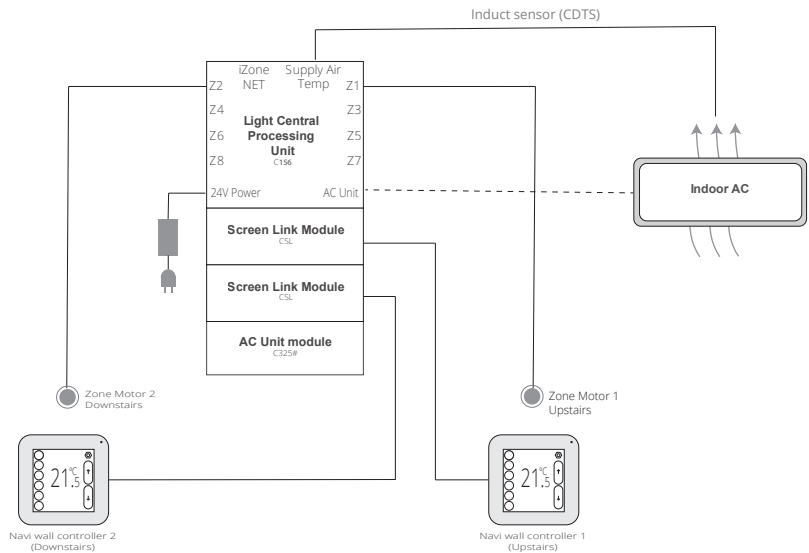


From the **Home** screen, select the **Settings** cog in the top right corner.

Enter your installer code when prompted. If you don't have an installer code, register as an installer (www.izone.com.au > SMART INSTALLER > Register) or use the default installer code 926383.

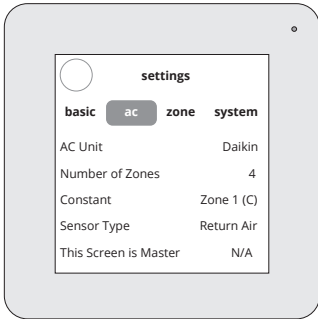

Open the **AC** tab and tap the value of the setting you want to change.

- **AC Unit:** Automatically detects the AC brand when the C325# module is connected
- **Number of Zones:** Select between 0-8 zones.
- **Constant:** Choose 'No Constant' when a fixed constant has been installed (no zone damper) OR select the zone you want to nominate as the constant.
- **Sensor Type:** Zones
- **This Screen is Master:** N/A

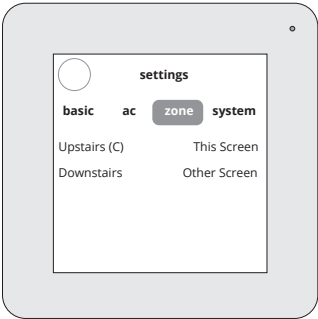

Go to the Navi wall controller located in the first zone.

- From the Home screen, tap the Settings icon (cog) in the top-right corner.
- Select the Zone tab.
- Next to the first zone, tap No Screen to change the setting to This Screen. (Note: Tapping "This Screen" again will toggle it back to "No Screen" if needed.

Go to the Navi wall controller in the second zone and repeat this process for second zone. Repeat for each subsequent zone.