



**Installation, Configuration & User Manual
for**

iZone 400 to 435

Air Conditioning Control Systems

Need this manual in a larger format? Download a copy

www.izone.com.au

Airstream Pty Ltd reserves the right to change or modify the design, specifications, software, hardware, firmware or Apps at any time without prior written or oral notice. Images and functions in this manual should be considered as indicative only and may differ from the actual iZone touch screen or Apps

Table of contents

Section	Description	Page No.
Forward		8-9
1.0 Design Considerations		10
1.1	Designing the correct constant zone	10-11
1.2	Fixed ducted constant and standard electronic constant	12
1.3	Dedicated electronic constant and bypass electronic constant	13
2.0 Installation		14
2.1	iZone Naked 400 — Wiring layout for up to 8 zones	14
2.2	iZone Naked 400 —Wiring layout for up to 14 to zones	15
2.3	iZone Naked 405 — Wiring layout for up to 8 zones	16
2.4	iZone Naked 405 —Wiring layout for up to 14 to zones	17
2.5	iZone Naked 410 — Wiring layout for up to 8 zones	18
2.6	iZone Naked 410 —Wiring layout for up to 14 to zones	19
2.7	iZone Naked 415 — Wiring layout for up to 8 zones	20
2.8	iZone Naked 415 —Wiring layout for up to 14 zones	21
2.9	iZone Nano 420 — Wiring layout for up to 8 zones	22
2.10	iZone Nano 420 —Wiring layout for up to 14 zones	23
2.11	iZone Nano 425 — Wiring layout for up to 8 zones	24
2.12	iZone Nano 425 —Wiring layout for up to 14 zones	25
2.13	iZone Nano 430 — Wiring layout for up to 8 zones	26
2.14	iZone Nano 430 —Wiring layout for up to 14 zones	27

Table of contents

Section	Description	Page No.
2.0 Installation (Cont.)		
2.15	iZone Nexus 435 — Wiring layout for up to 8 zones	28
2.16	iZone Nexus 435 —Wiring layout for up to 14 zones	29
2.17	Stand alone VAV system for a typical 4 zone system	30
2.18	Optional equipment for wireless temperature controlled zones	31
2.19	Optional equipment for wired temperature sensors	32
2.20	Optional equipment for iSense temperature and occupancy controlled zones	33
2.21	Optional equipment for colour touch screen temperature controlled zones	34
2.22	Example of different types of temperature sensors and controllers on a single system	35
2.23	Optional equipment for running multiple systems from a single iZone Nexus touch screen	36
2.24	Option equipment for wired WiFi control of system	37
2.25	Option equipment for wireless WiFi control of system	38
2.26	iZone 415 to 435 — Optional equipment for iSave addition (up to 6 zones)	39
2.27	iZone 415 to 435 —Optional equipment for iSave addition (7 to 12 zones)	40
2.28	Optional equipment for Ethernet Home Automation connection	41
2.29	Integrated iZone A/C, Lights, Garden & Security	42
2.30	iZone wiring connection to AC units	43
2.30.1	iZone wiring connection to Actron units	44
2.30.2	iZone wiring connection to Braemar & Gree units	45-48
2.30.3	iZone wiring connection to Haier units	49
2.30.4	iZone wiring connection to Hitachi units	50
2.30.5	iZone wiring connection to iZone units	51

Table of contents

Section	Description	Page No.
2.0 Installation (Cont.)		
2.30.6	iZone wiring connection to Kaden units	52
2.30.7	iZone wiring connection to Kelvinator units	53
2.30.8	iZone wiring connection to LG units	54-55
2.30.9	iZone wiring connection to Midea units	56
2.30.10	iZone wiring connection to Rinnai units	57
2.30.11	iZone wiring connection to Samsung units	58
2.30.12	iZone wiring connection to Temperzone units	59
2.30.13	iZone wiring connection to York units	60
2.31	iZone wiring connection to Universal Control Module	61
2.31.1	Universal Control Module—Gas heating thermostat only	62
2.31.2	Universal Control Module—1 stage gas heating + 1 x fan speed	63
2.31.3	Universal Control Module—1 stage gas heating + 1 stage cooling + 1 x fan speed	64
2.31.4	Universal Control Module—2 stage gas heating + 1 stage cooling + 1 x fan speed	65
2.31.5	Universal Control Module—2 stage gas heating + 2 stage cooling + 1 x fan speed	66
2.31.6	Universal Control Module—1 stage reverse cycle heat pump + 1 x fan speed	67
2.31.7	Universal Control Module—1 stage reverse cycle heat pump + 3 x fan speed	68
2.31.8	Universal Control Module—1 stage reverse cycle heat pump + auxiliary heating + 1 x fan speed	69
2.31.9	Universal Control Module—2 stage reverse cycle heat pump + auxiliary heating + 1 x fan speed	70
2.32	General installation instructions	71
3.0 System initialisation		72
3.1	During initialisation	73

Table of contents

Section	Description	Page No.
	3.2 Change screen orientation & type of graphic style from Classic / Portrait	74
	3.3 Change screen orientation & type of graphic style from Modern / Portrait	75
4.0	System Configuration	76
4.1	Configuration main menu	77
4.2	Zone setup	78-79
4.2.1	Sensor configuration	80
4.2.2	Pairing and configuring iZone RF sensors	81
4.2.3	Sensor calibration	82
4.2.4	iSense controller configuration	83
4.3	AC unit configuration	84
4.3.1	Fan auto configuration	85
4.3.2	Fan auto zone area setup	86
4.3.3	Master / Slave setup	87
4.4	System options (Display, Taglines, Filter Maintenance, Locks, Non Standard Damper Motors)	88-89
4.5	WiFi bridge configuration	90
4.5.1	Manual IP configuration	91
4.5.2	WiFi connection	92
4.5.3	Smart phone and tablet configuration—System requirements	93
4.5.3	Smart phone and tablet configuration—Equipment required and Configuration	94
4.5.3	Smart phone and tablet configuration—Using you App	95
4.6	Home automation integration	96
4.7	iZone Naked 400 remote (Zone only) — Configuration	97
4.8	iZone Naked 410 remote— Configuration	98

Table of contents

Section	Description	Page No.
5.0	User Manual	99
5.1	iZone 400 & 405 home screen	99
5.2	iZone 410—435 home screen	100
5.3	iZone AC unit control	101
5.4	Zone control	102
5.5	Edit zone names and settings	103
5.6	Adjusting temperature controlled zones	104
5.7	Zone airflow summary	105
5.8	Changing zone airflows	106
5.9	Favourites	107
5.10	Assigning and editing favourites	108
5.11	Schedules	109
5.12	Setting and editing a schedule	110
5.13	Setting the time	111
5.14	Changing the home screen colour	112
5.15	iSense controller	113
5.16	iZone Naked 400 remote control (Zone only)	114
5.17	iZone Naked 410 remote control	115
6.0	Warranty registration	116
6.1	Airstream product warranty policy	117
7.0	Further assistance	118

This page has been intentionally left blank for your notes

Forward

Congratulations on the purchase of your iZone air conditioning control system.


iZone has been developed in Australia to provide affordable, reliable, automated control of your home or office air conditioning.

iZone is a scalable control system that can provide basic air-side zoning all the way up to fully integrated air conditioning unit control with individual room temperature control, occupancy sensing, lighting control, security, garden reticulation and power management.

You can begin your iZone journey with a basic system then add to it as funds become available without the need to replace what you have already purchased.

The iZone family is shown on the diagram below. Please check with your contractor which parts are available in your area.

Forward

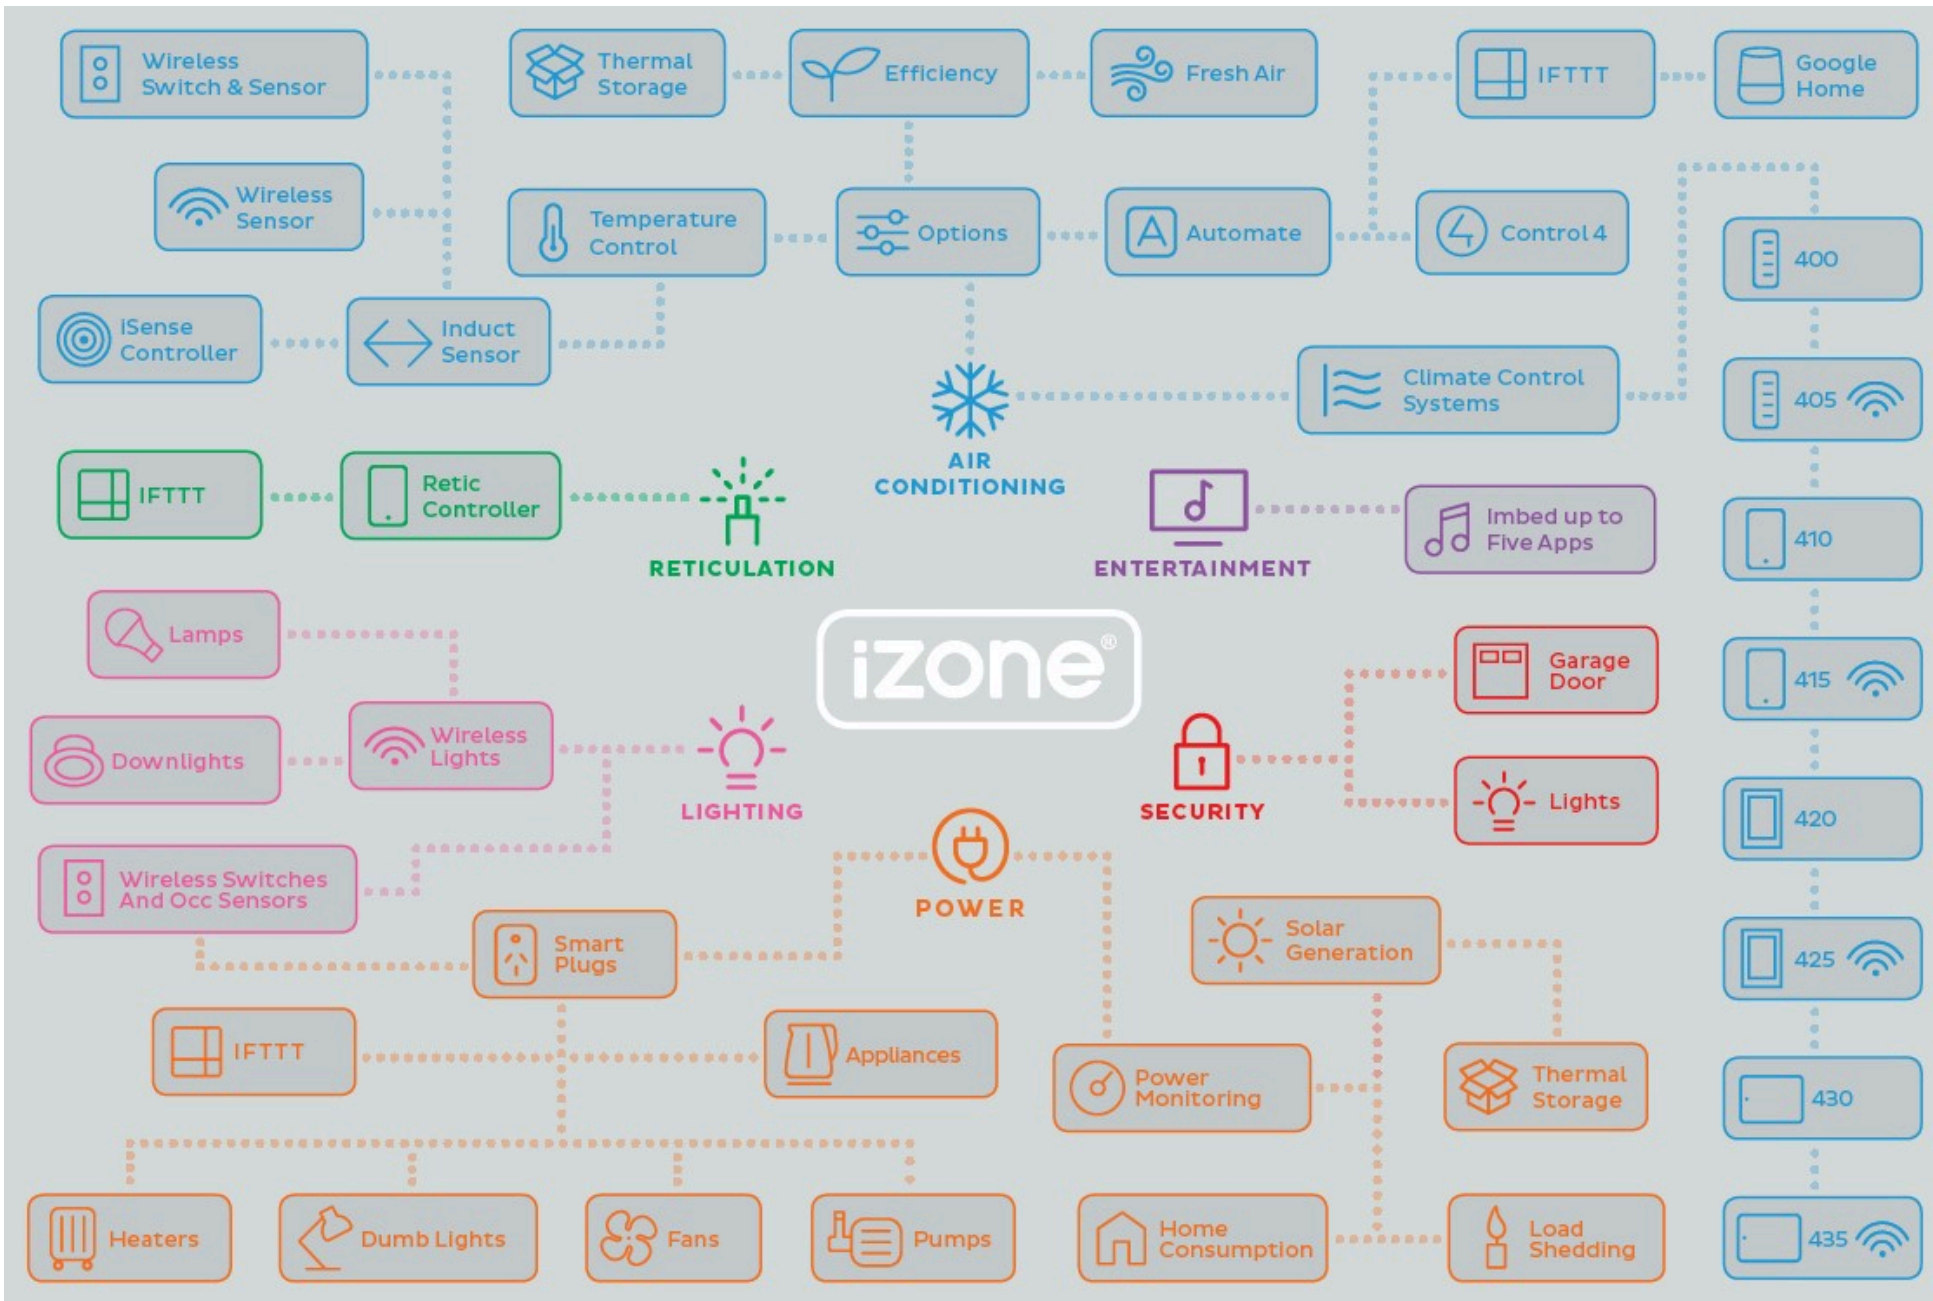

1.0 Design consideration

1.1 Designing the correct constant zone

All ducted air conditioning systems should have a percentage of air passing over the indoor coil at all times. This is a safety mechanism to protect the ductwork and the AC unit. If all the zone dampers in a system are closed then flexible duct could split or be blown off the spigots, or the indoor coil could ice up. It is much less likely for the coils to ice up on modern AC units as they have in-built safety controls to prevent this occurring, but it is still good practice to ensure airflow across the coil.

There are several ways of achieving this when designing a ducted air conditioning system.

i. Fixed ducted constant zone

This is a relatively old fashioned way of achieving constant airflow across the coil. It requires the system to be designed with one zone that has no zone damper fitted to it. This is normally the main living area in the home or a common area in an office building. The downside with this configuration is that air will always be delivered to this area regardless of whether it is occupied or not. This reduces the diversity of the system and may necessitate a larger AC unit to be installed, thereby increasing both the capital and running costs of the system. In addition to this noise to this constant zone may increase when all other zones are closed. (See Fig C01 below)

ii. Electronic constant zone

This option requires the system to be designed with one zone that has a zone motor fitted to it, which will automatically open if all other zones are closed. With electronic constants there are two options available as follows:

a. Standard electronic constant zone

Typically a zone damper would be fitted to the main living area in the home or a common area in an office building. This zone can be used like any other zone but will be automatically overridden open if required by the system to maintain the minimum airflow over the indoor coil. With an iZone system you can select as many zones as you need to be electronic constants and they will activate and deactivate progressively as required. While superior to i. (Fixed ducted constant zone), it does have a number of shortcomings. Most of the time the conditions in the standard electronic zone will be satisfactory however when required to operate to relieve pressure, conditions (temperature) in this zone will drift and may become uncomfortable. Individual room temperature control cannot be fitted to a standard electronic zone. Noise from the outlet may be higher when the electronic constant is operating (See Fig C02)

1.1 Designing the correct constant zone (cont)

below)

b. Dedicated electronic constant zone

In this option an additional zone is installed into the system serving an unoccupied area such as a stairwell, passage or entry. This zone is left in the closed position and will only open if required by the system. With an iZone system you can select as many dedicated zones as you need. The benefit of the dedicated electronic constant zone is that all habitable areas can have individual temperature control and if the electronic constant is required to operate it will not affect the comfort of the occupants. The downside of this type of electronic constant is that conditions in the corridor or stairwell may feel mildly uncomfortable while transiting through them and the outlet in this area may generate some noise. (See Fig C03 below)

iii. Bypass electronic constant zone

In this option an additional zone is installed into the system looping from the supply air side of the A/C fan coil unit to the return air side of the A/C fan coil unit. This bypass zone is left in the closed position and will only open if required by the system. The benefit of the Bypass electronic constant zone is that all habitable areas can have individual temperature control and if the electronic constant is required to operate it will not affect the comfort of the occupants. No common areas are affected by the operation of the bypass constant and there is no increase in noise when the bypass is operating. In addition to this, the use of the bypass option increases the system efficiency as any conditioned air is kept within the system reducing the load on the AC unit and assisting to cycle the AC unit off earlier. (If set up to control from the units return air sensor).

We recommend that all systems with individual zone temperature control are designed and configured with a bypass electronic constant zone and where possible control the A/C unit from “Zones”. (See Fig C04 below).

1.2 Fixed ducted constant and standard electronic constant

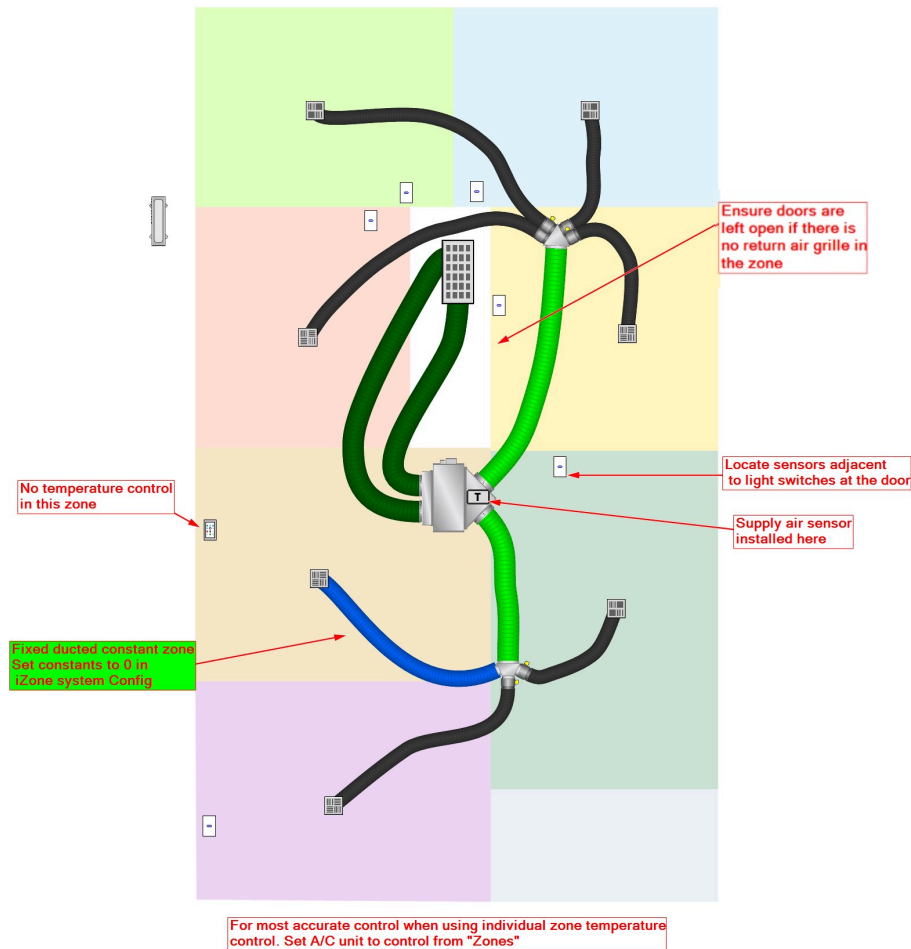


Fig C01—Fixed Ducted Constant

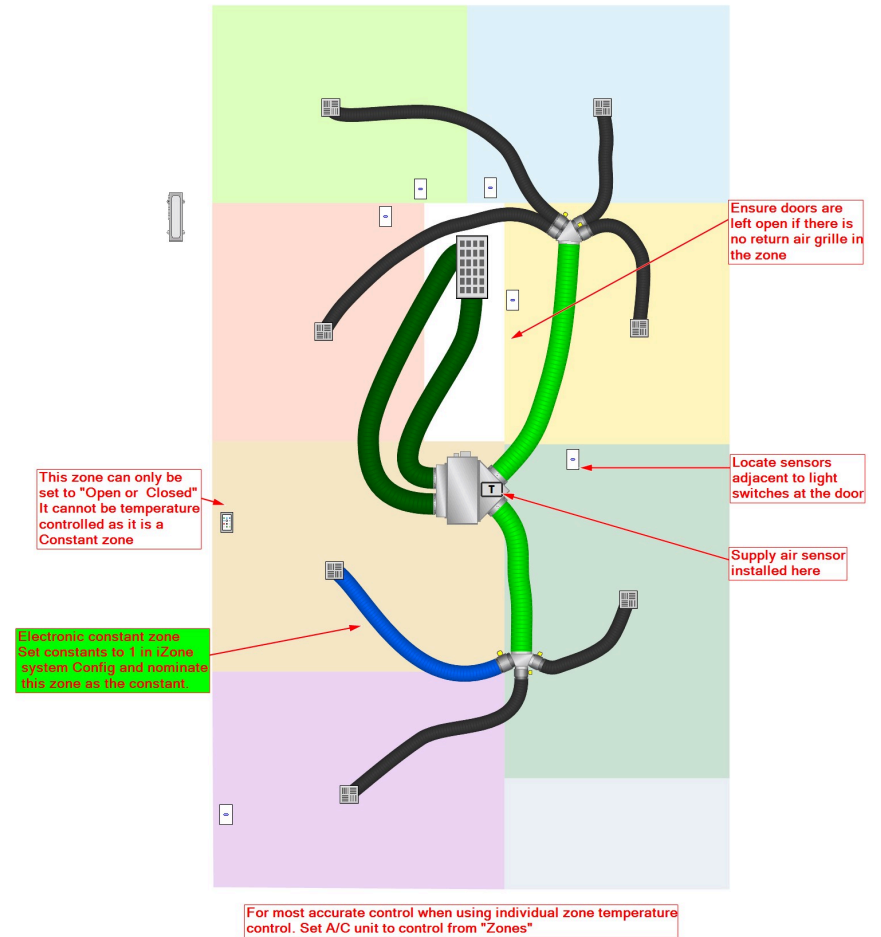


Fig C02—Standard Electronic Constant

1.3 Dedicated electronic constant & bypass electronic constant

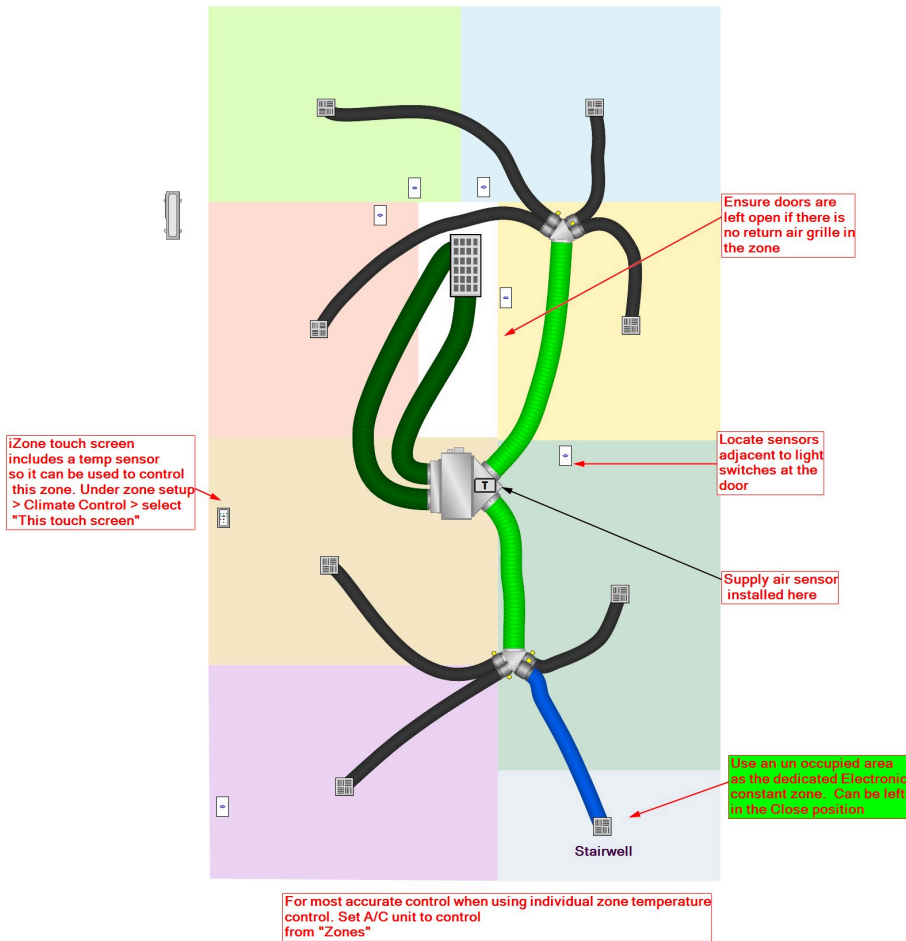


Fig C03—Dedicated Electronic Constant


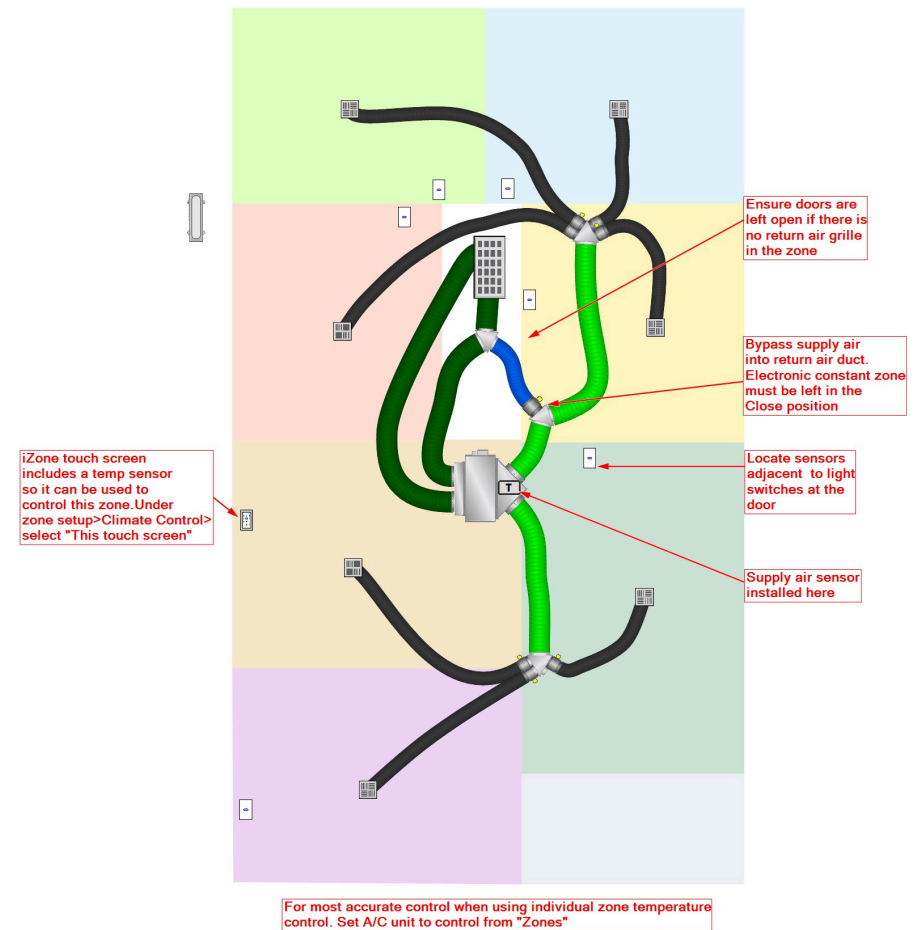



Fig C04—Bypass Electronic Constant

2.0 Installation


2.1 iZone Naked 400 - Wiring layout for up to 8 zones

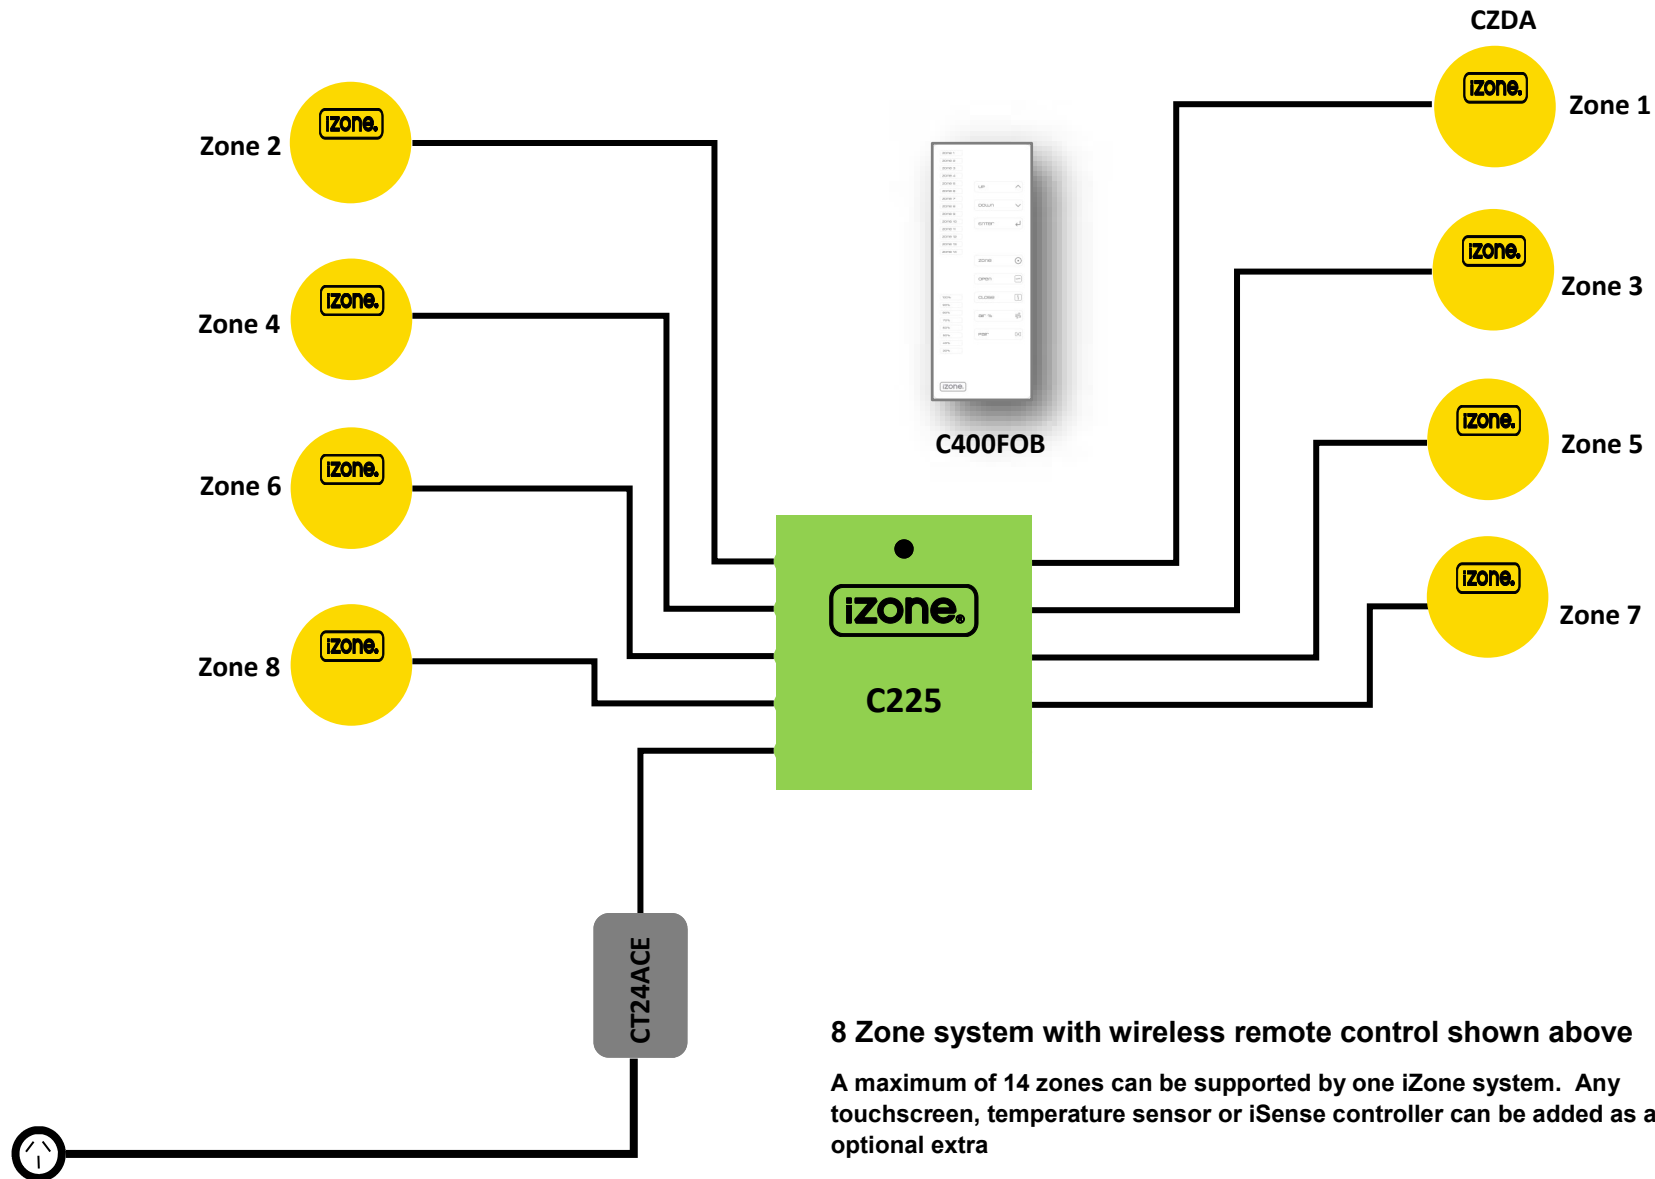


2.2 iZone Naked 400 - Wiring layout for up to 14 zones

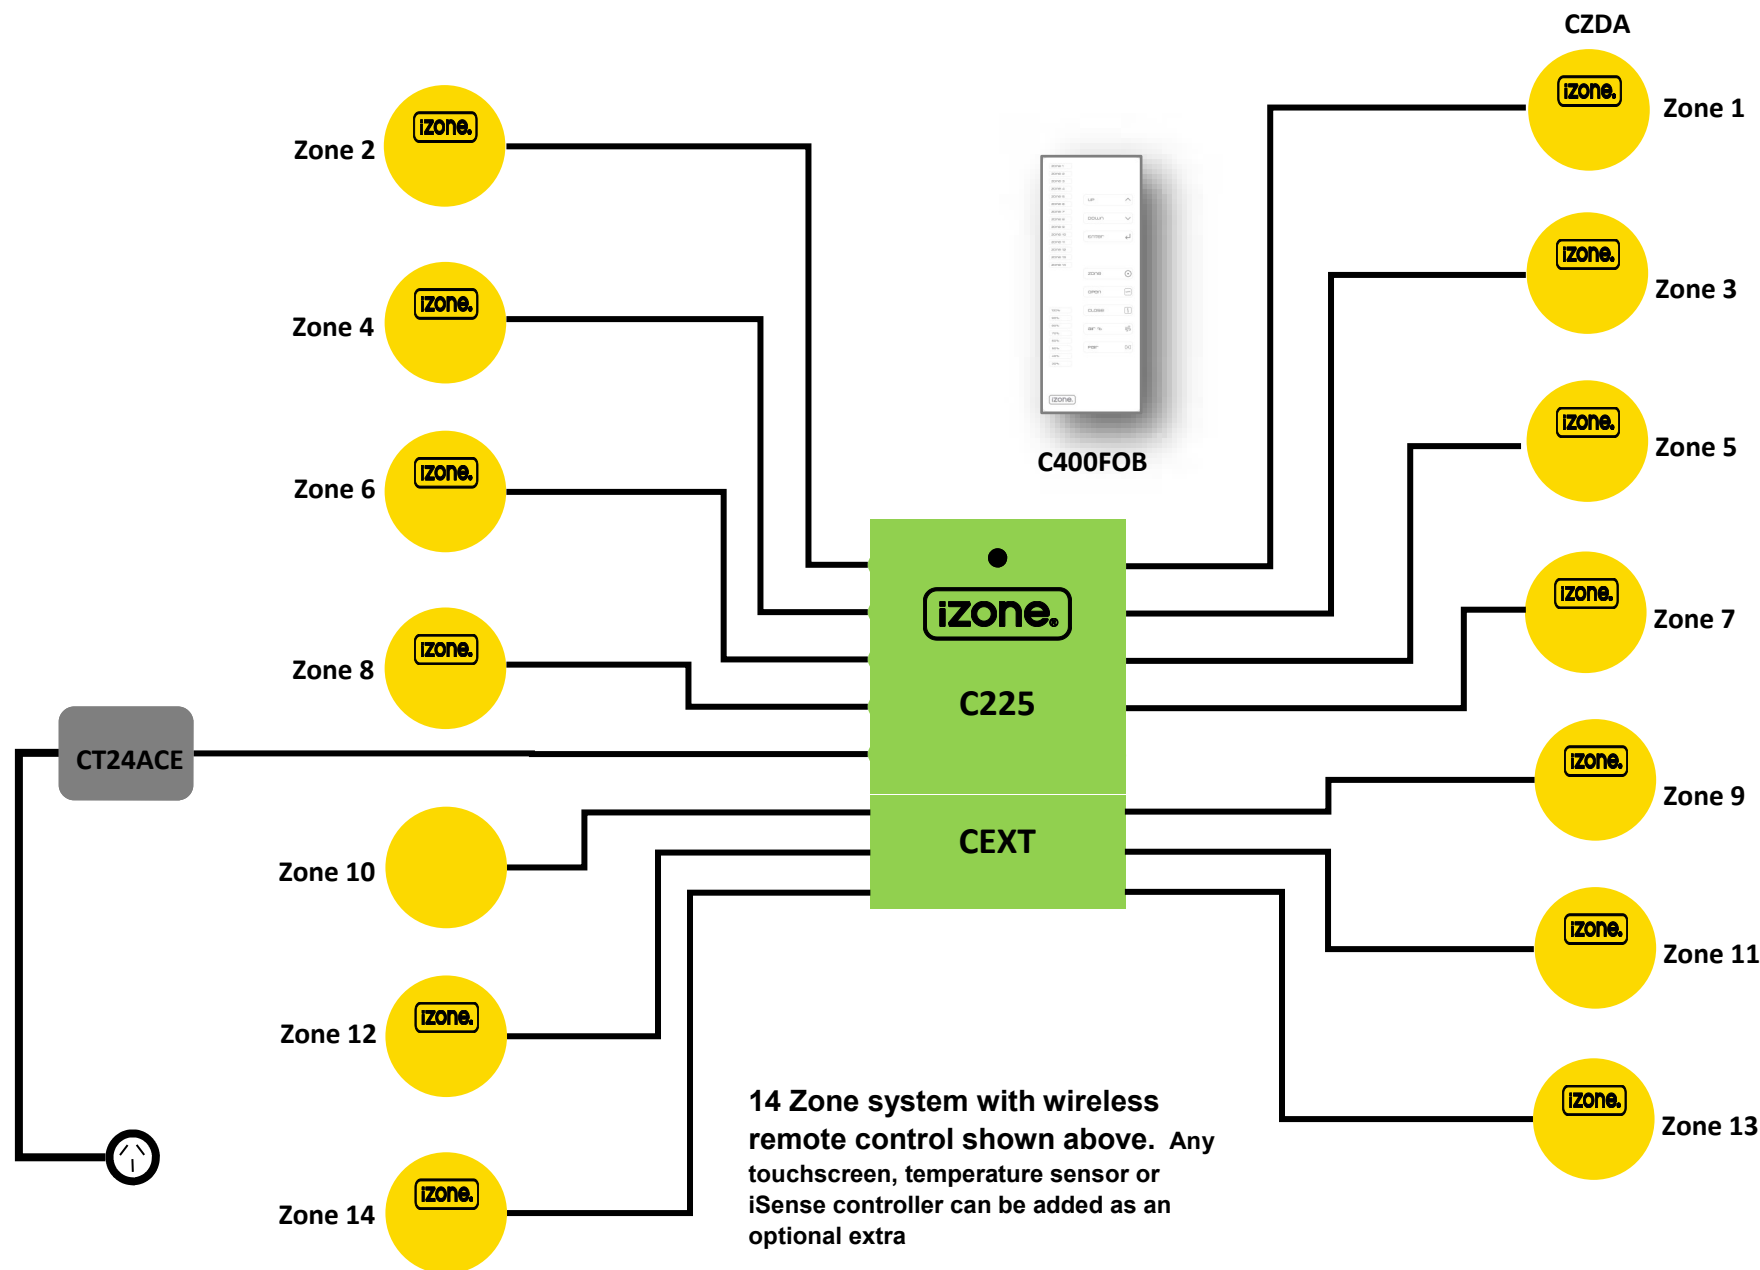


2.3 iZone Naked 405 - Wiring layout for up to 8 zones

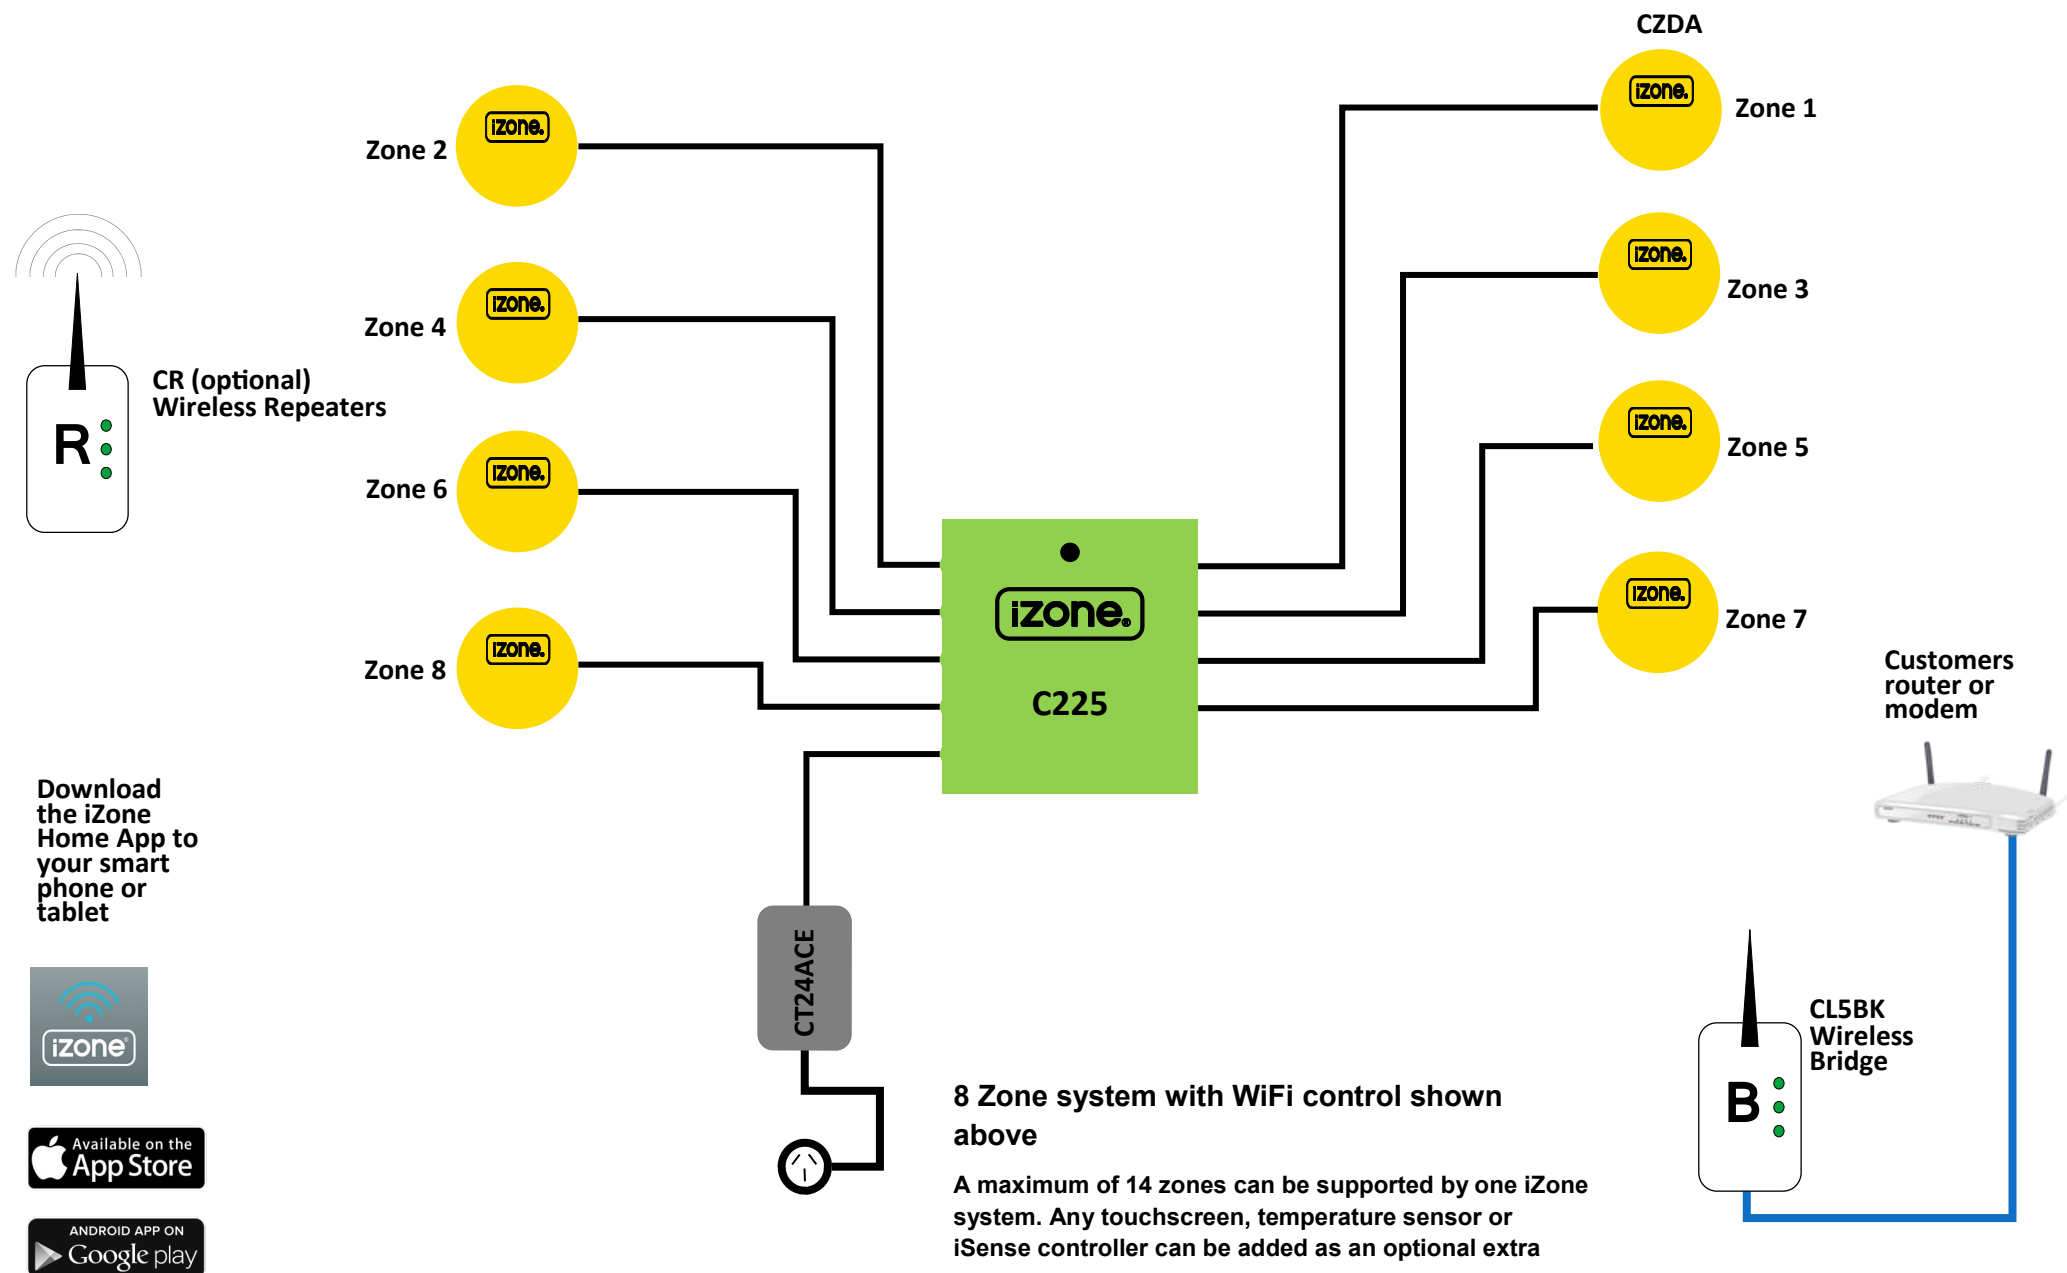


2.4 iZone Naked 405 - Wiring layout for up to 14 zones

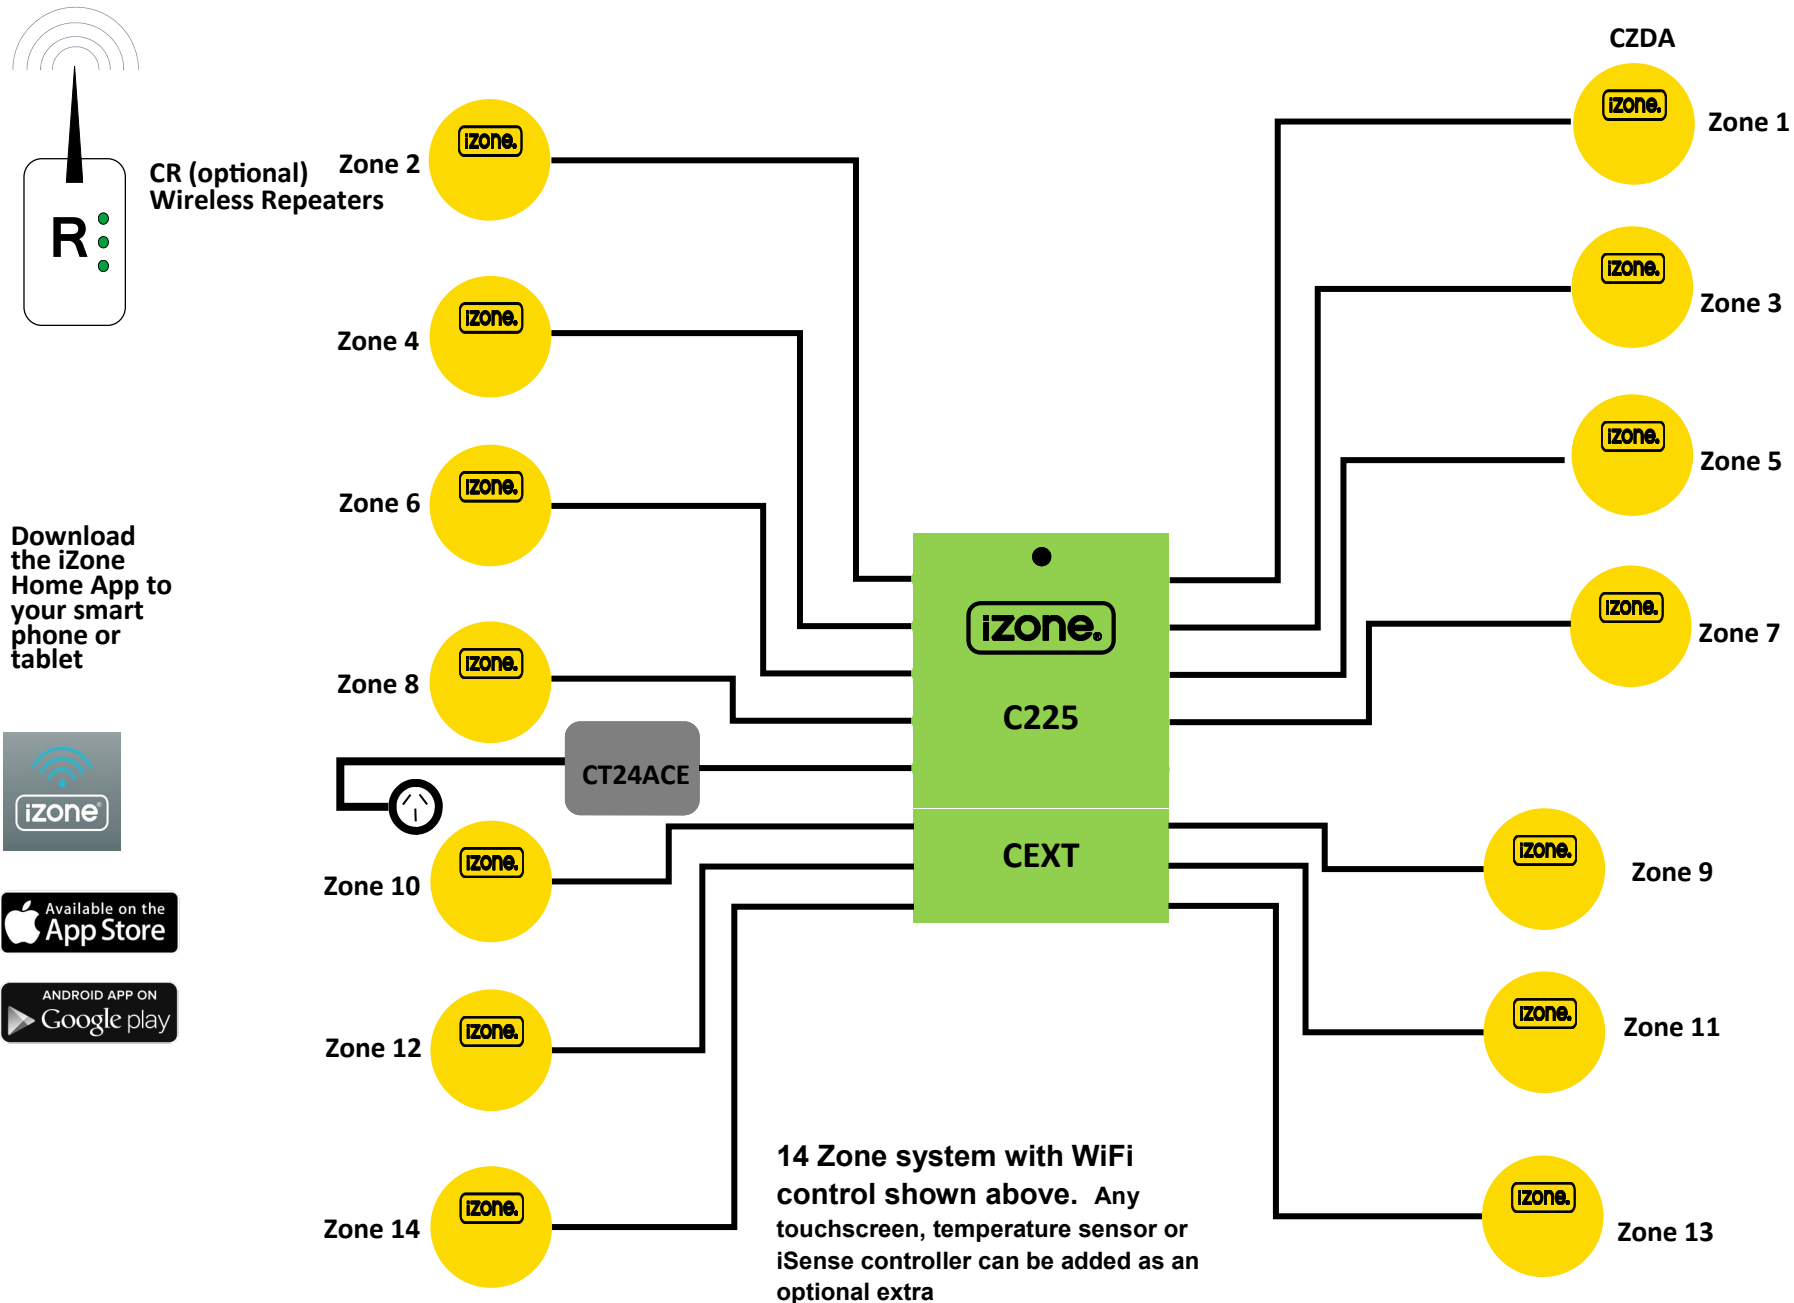


2.5 iZone Naked 410 - Wiring layout for up to 8 zones

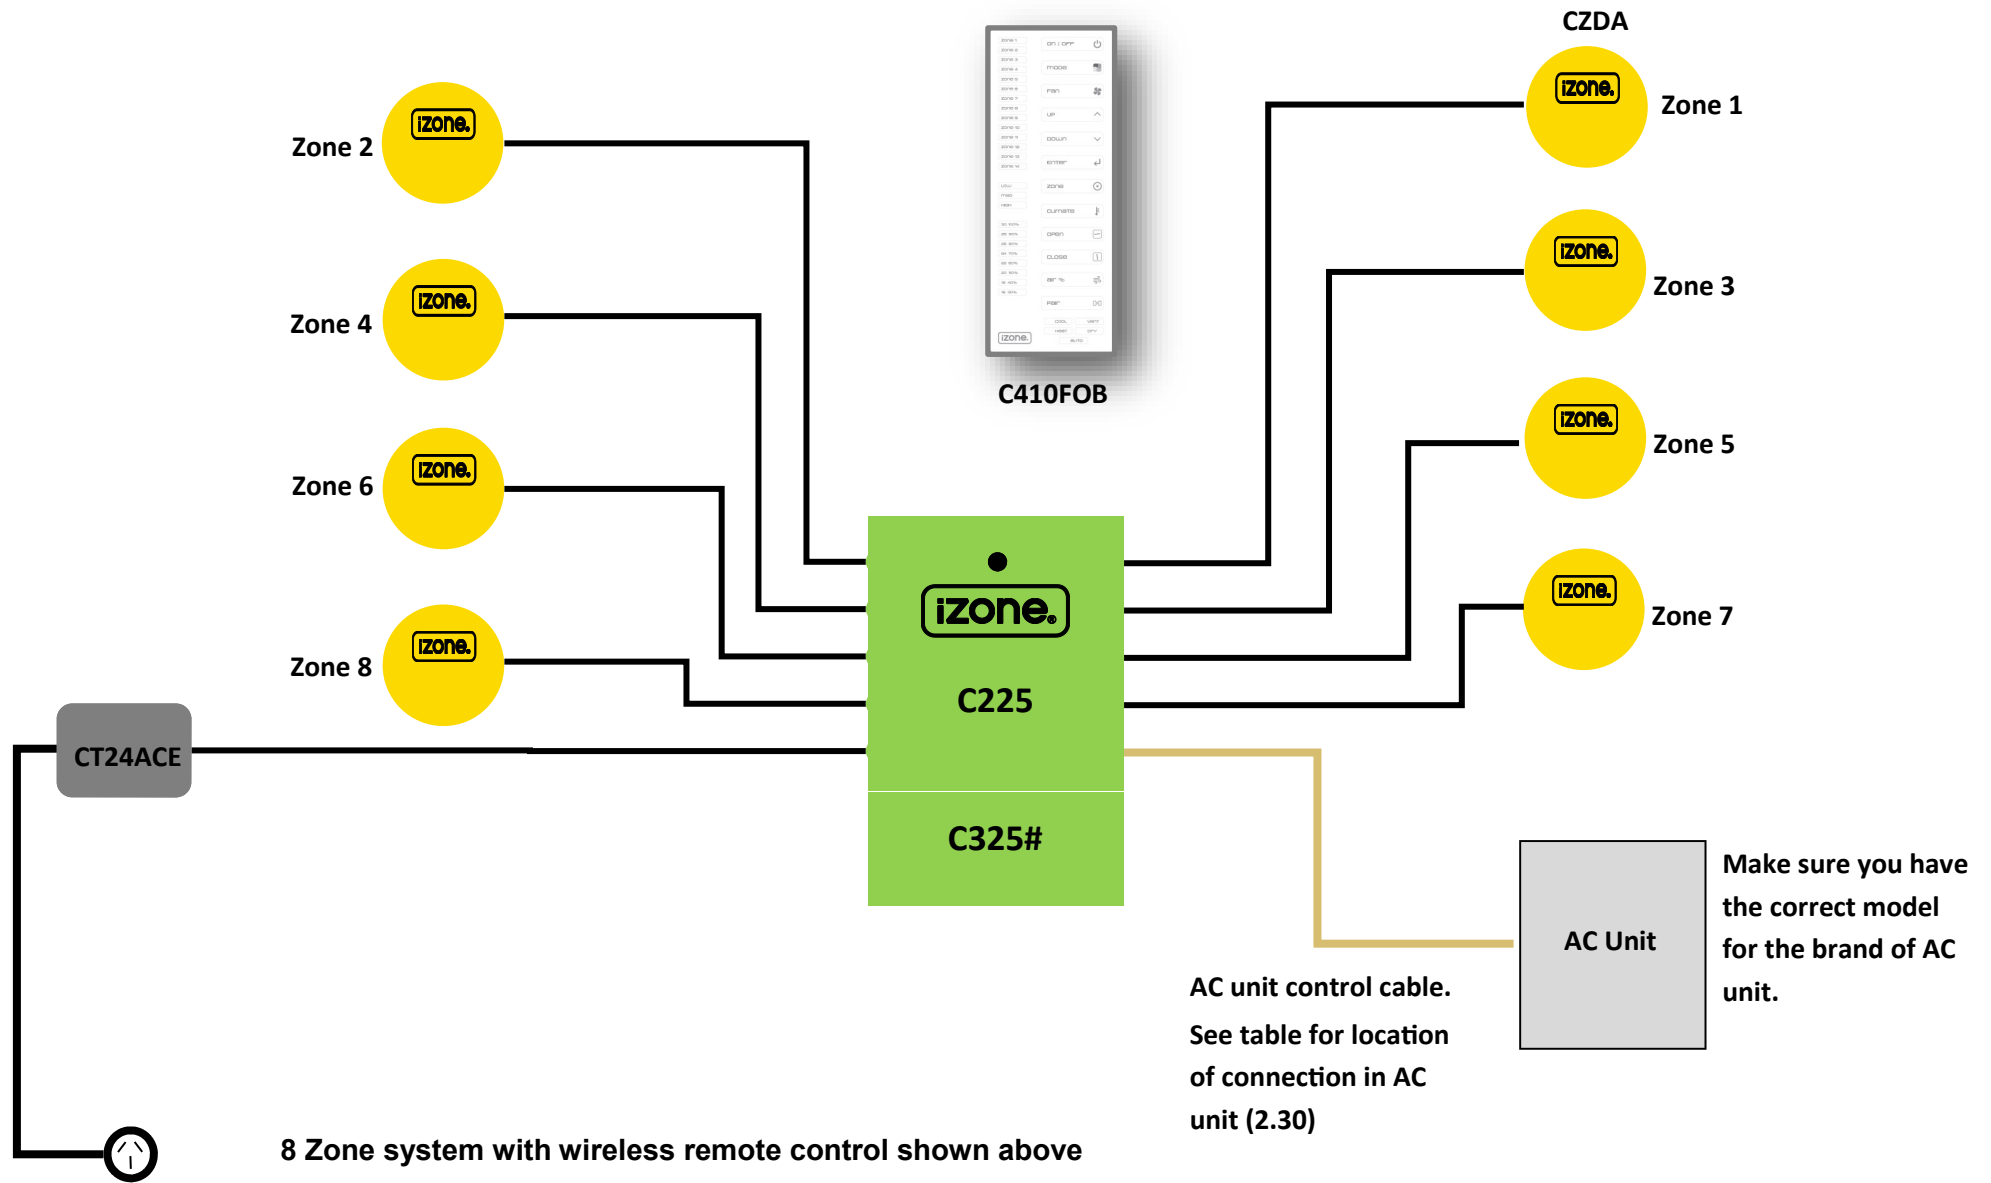


2.6 iZone Naked 410 - Wiring layout for up to 14 zones

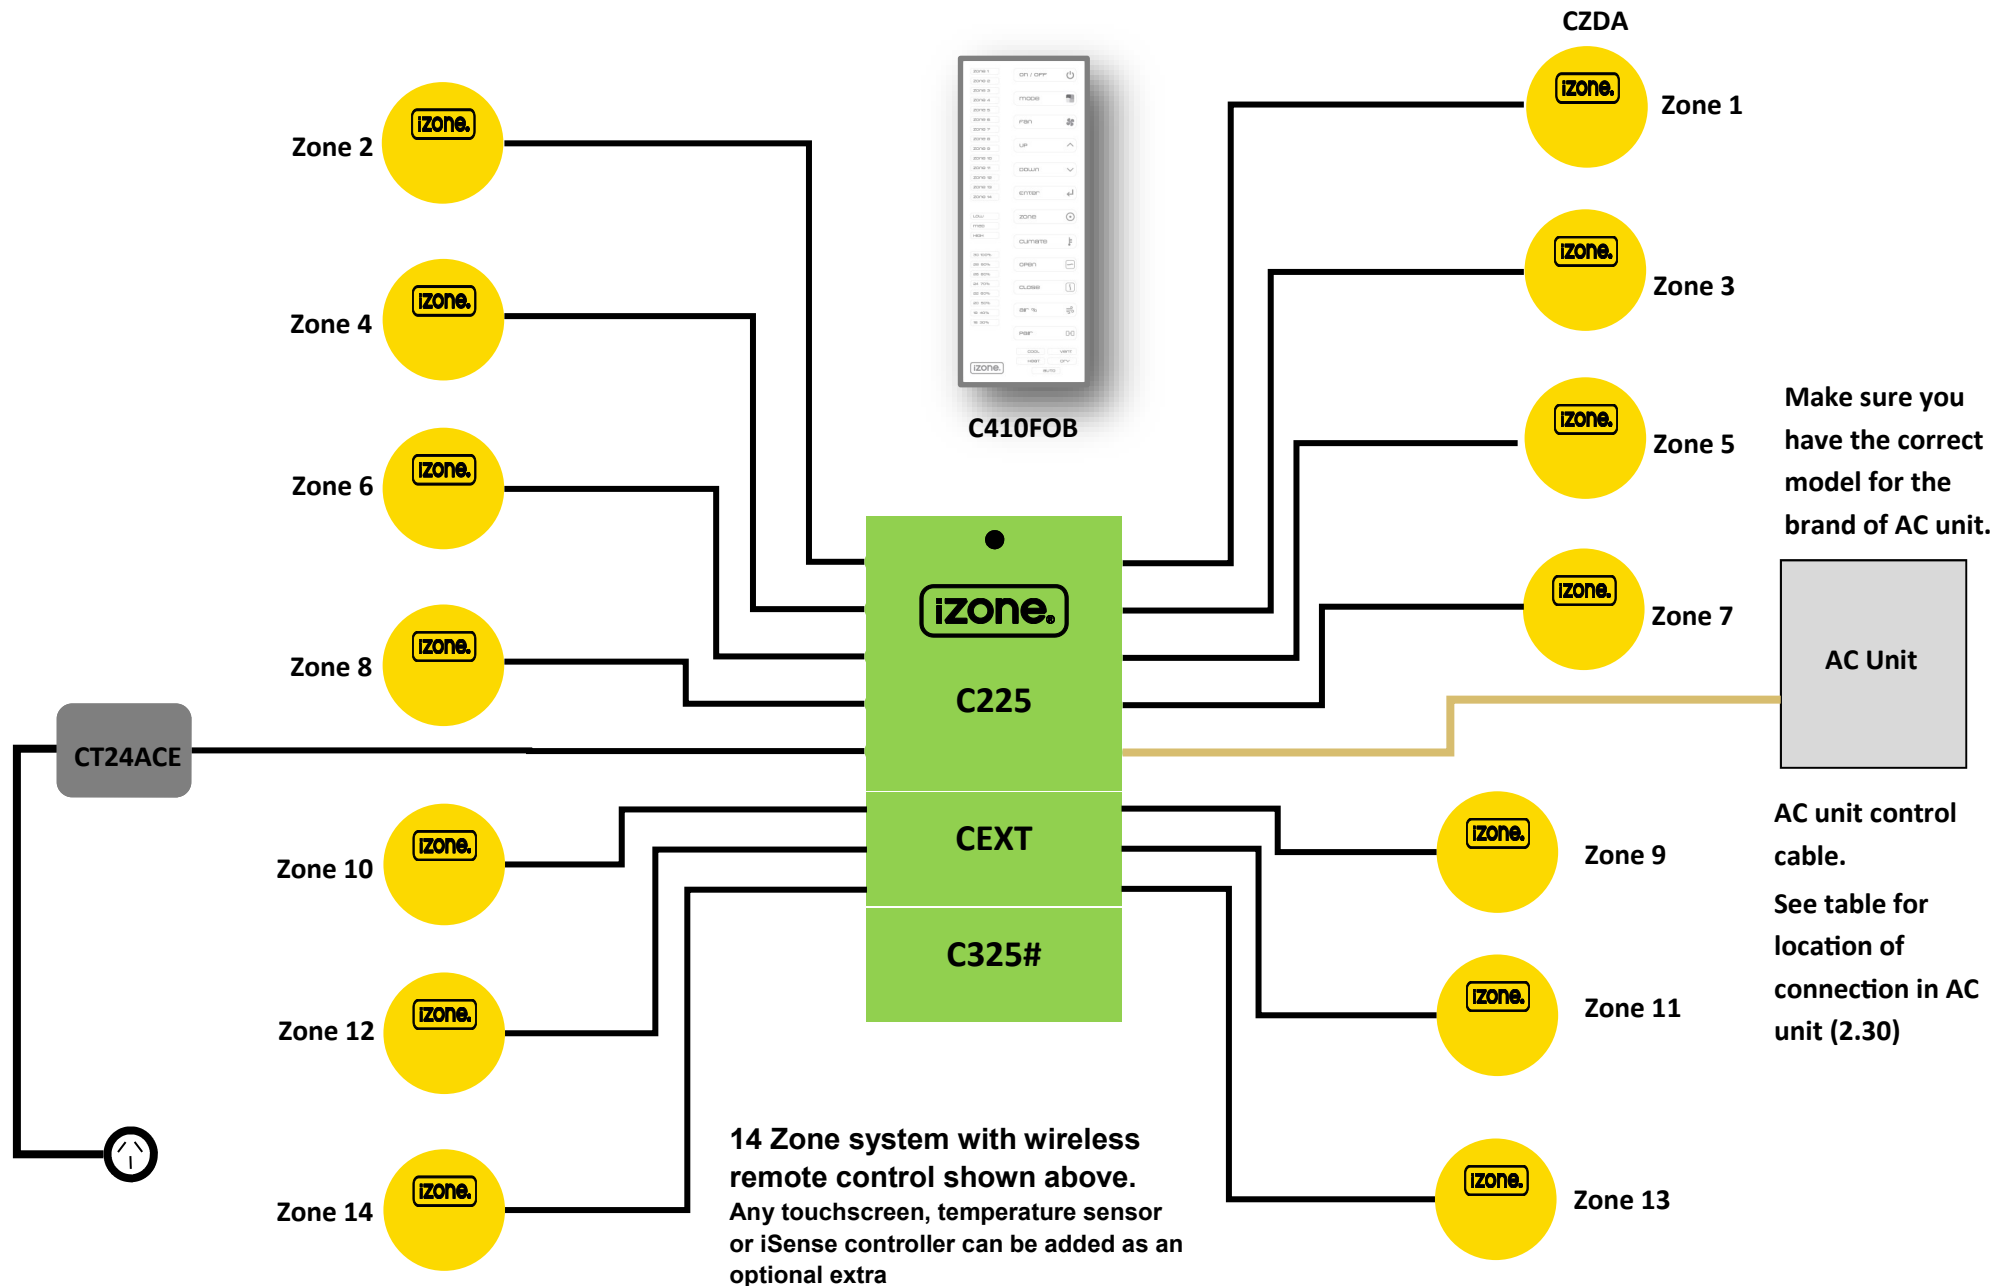


2.7 iZone Naked 415 - Wiring layout for up to 8 zones

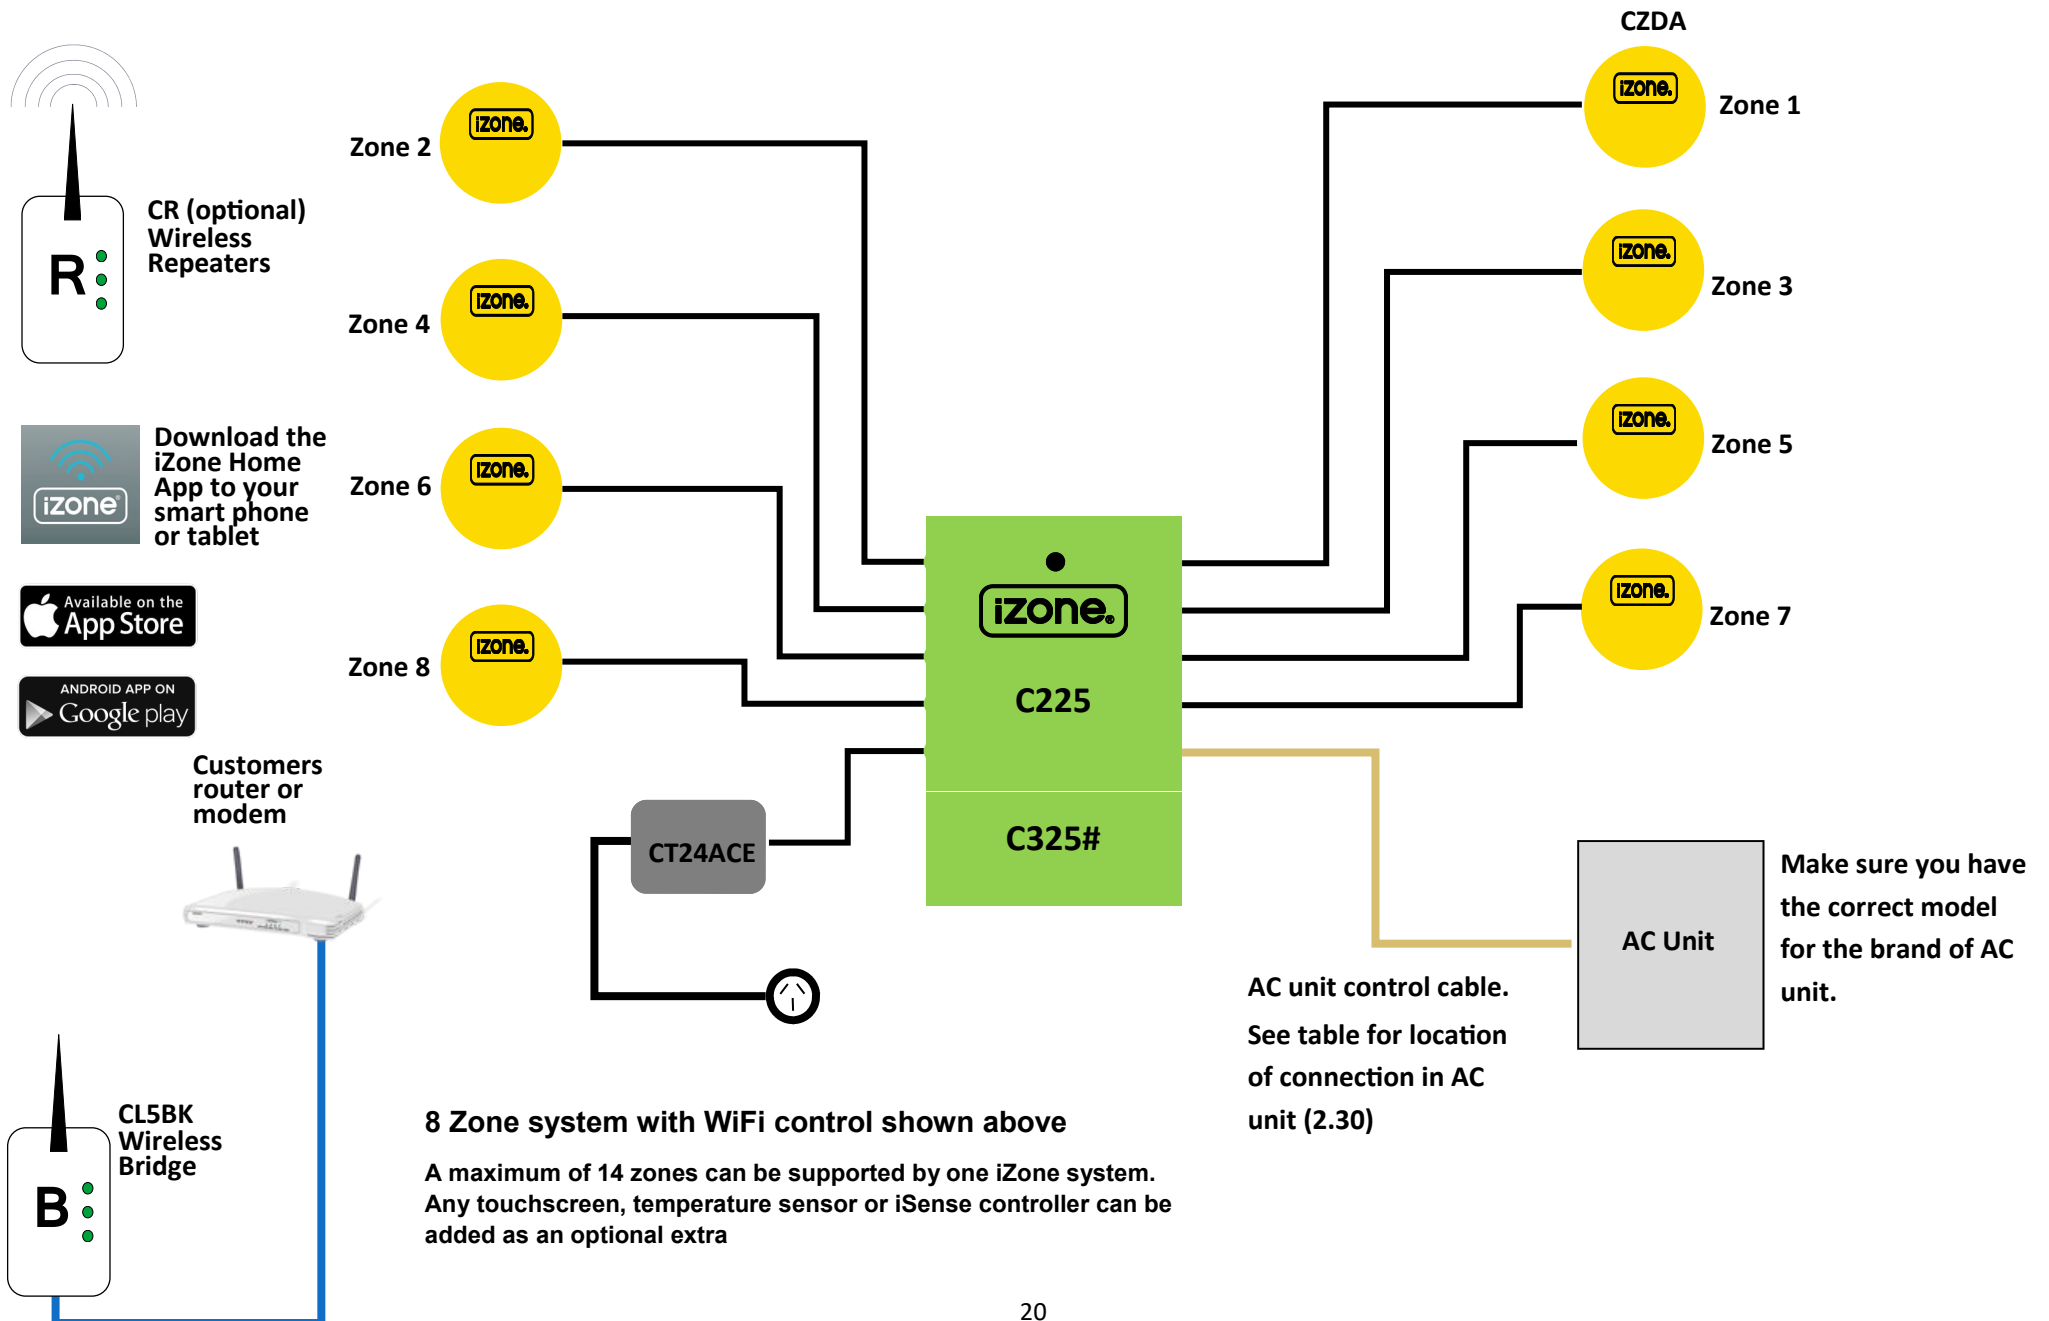


2.8 iZone Naked 415 - Wiring layout for up to 14 zones

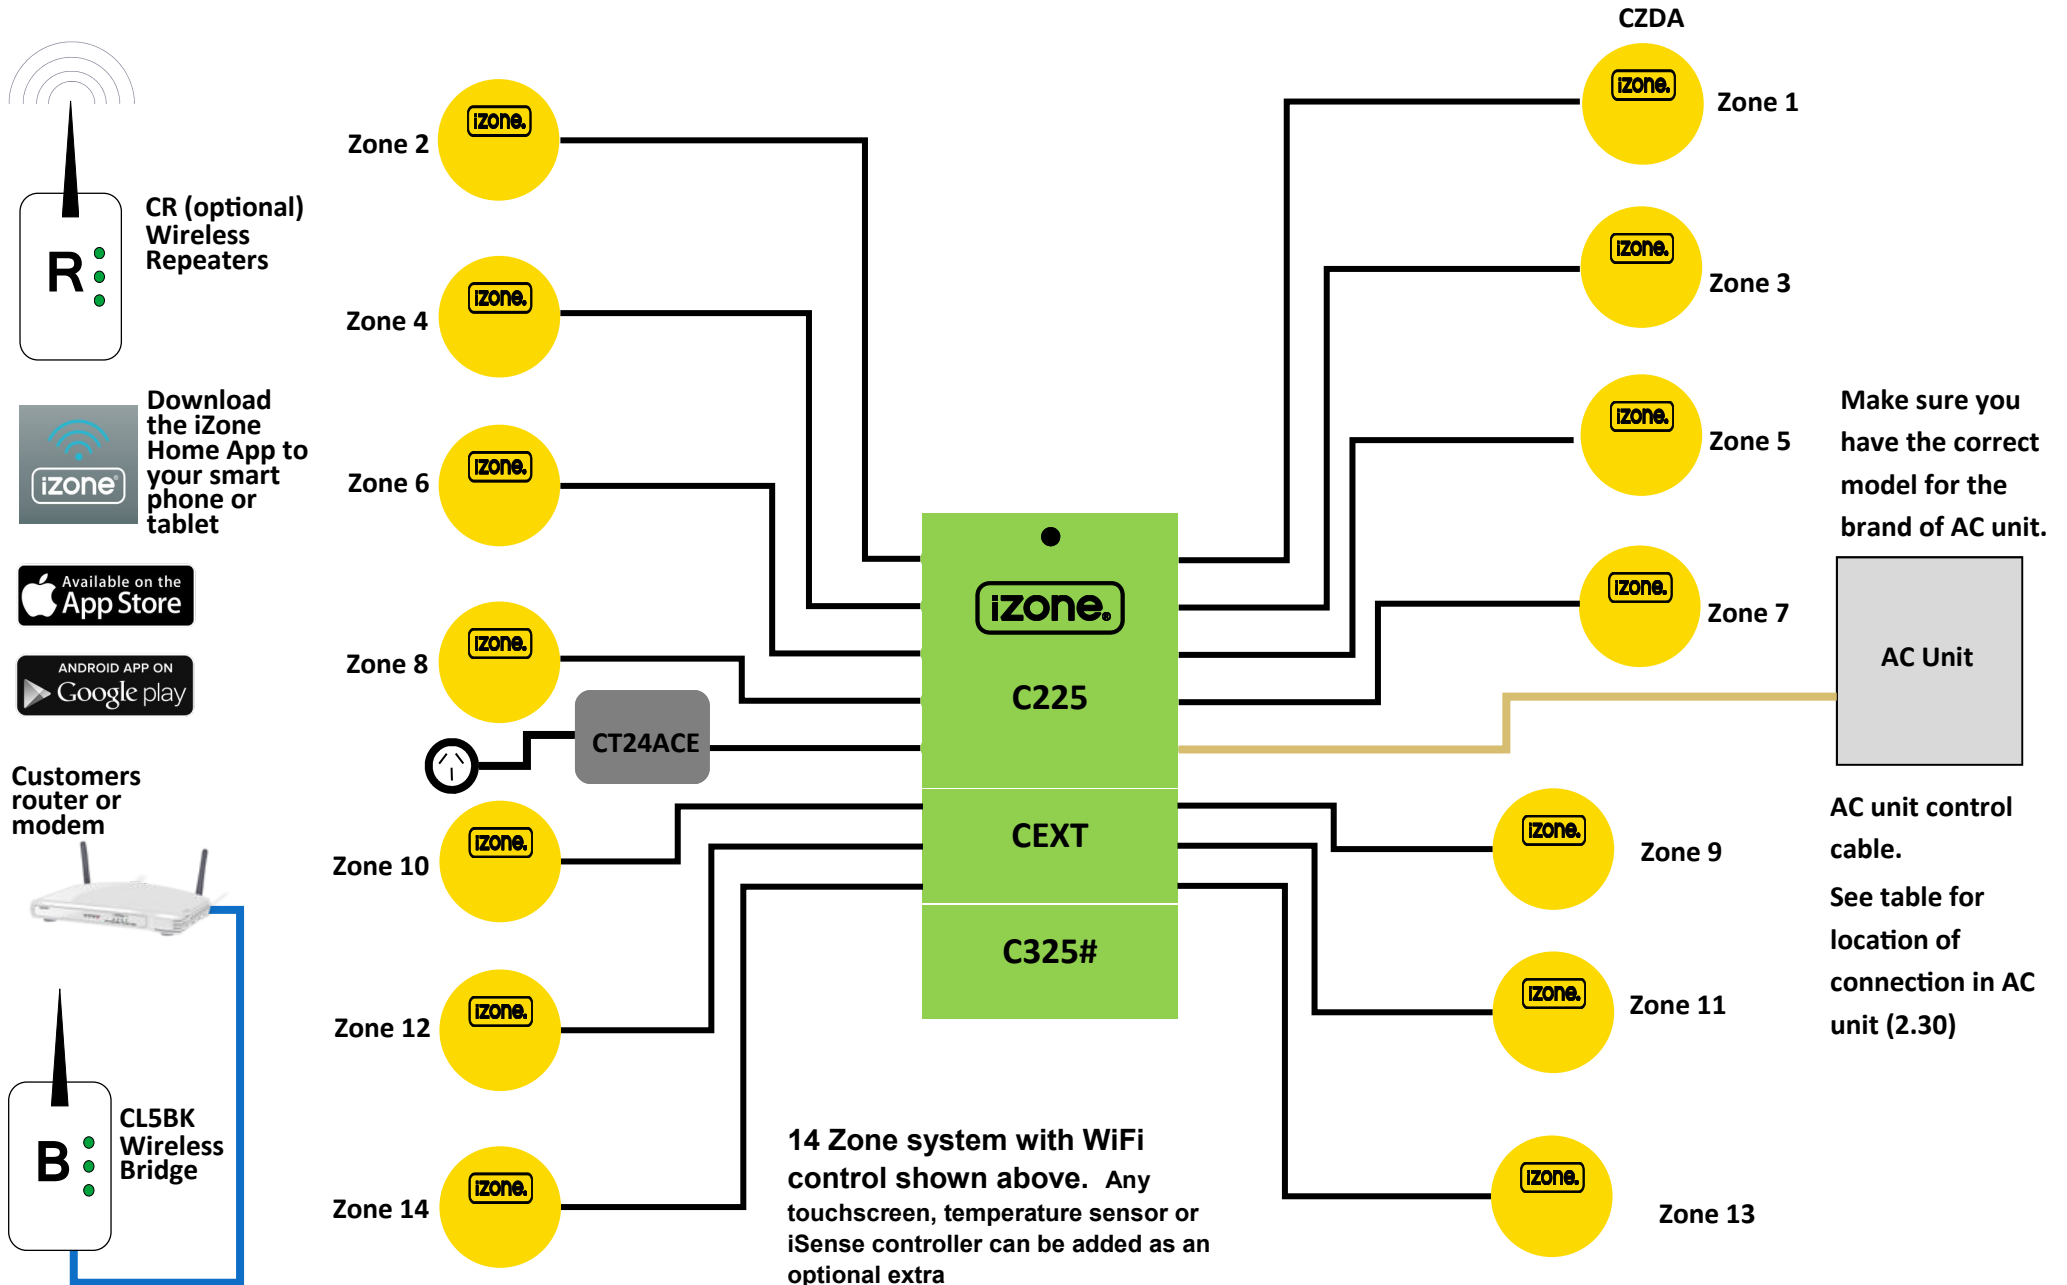


2.9 iZone Nano 420 - Wiring layout for up to 8 zones

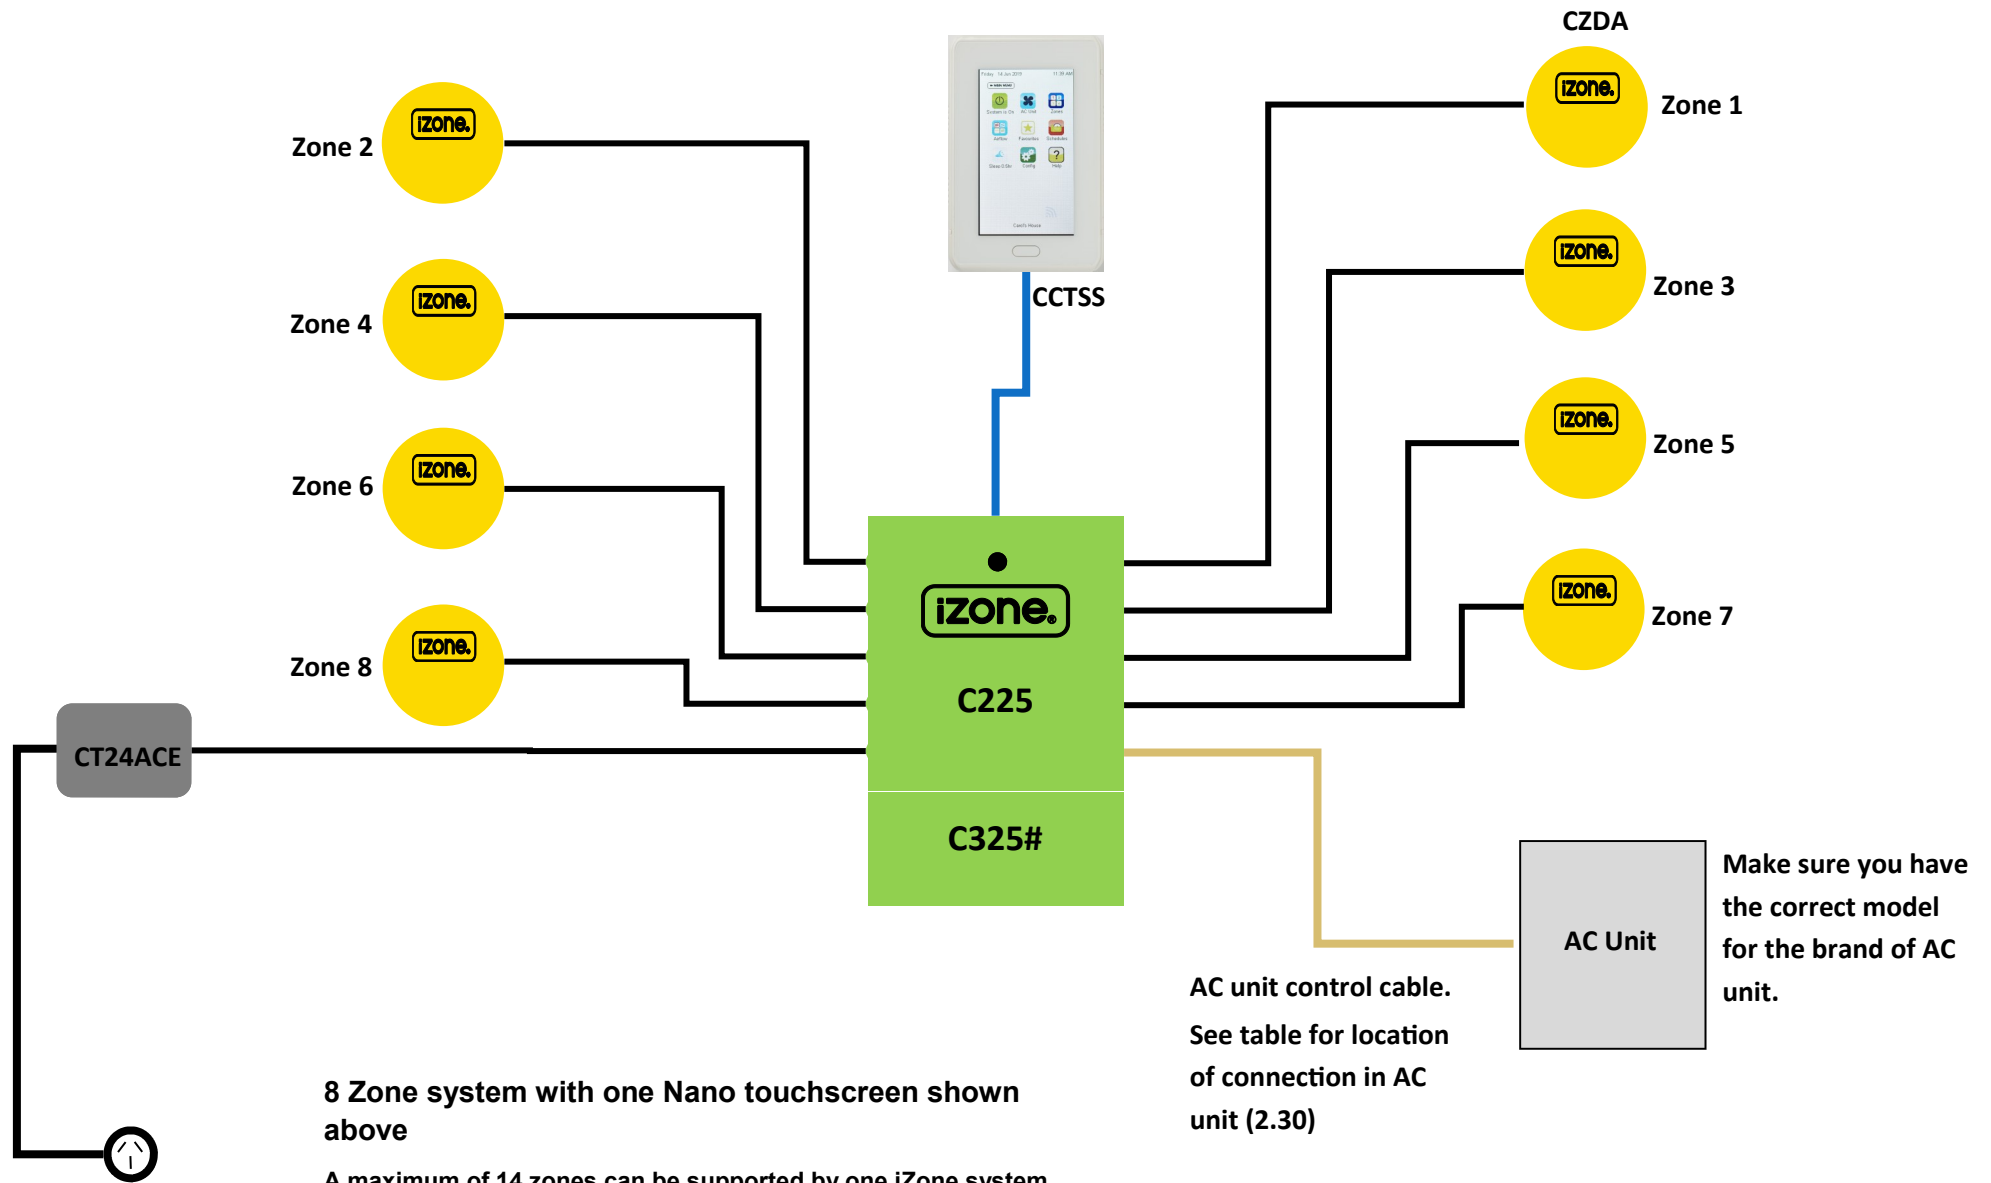


2.10 iZone Nano 420 - Wiring layout for up to 14 zones

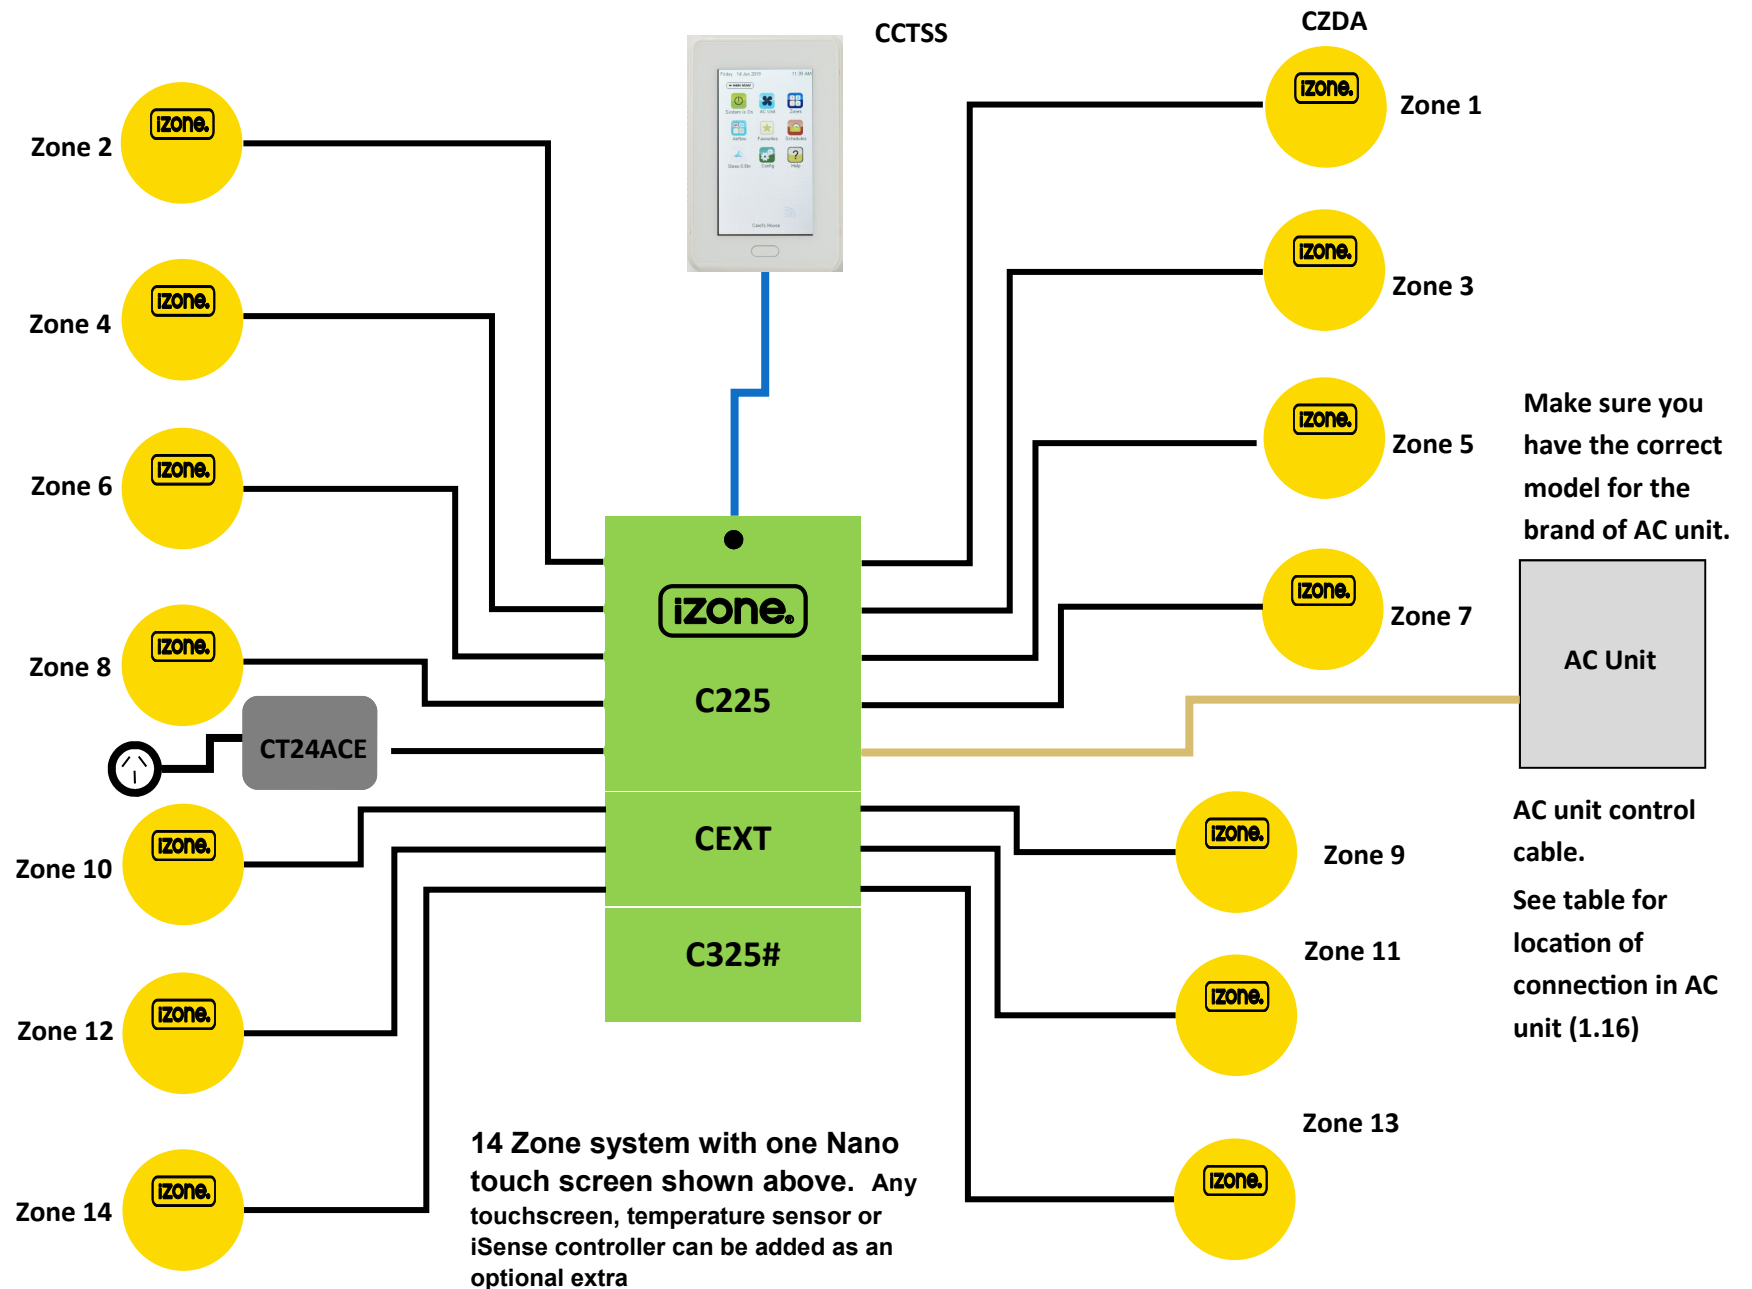


2.11 iZone Nano 425 - Wiring layout up to 8 zones

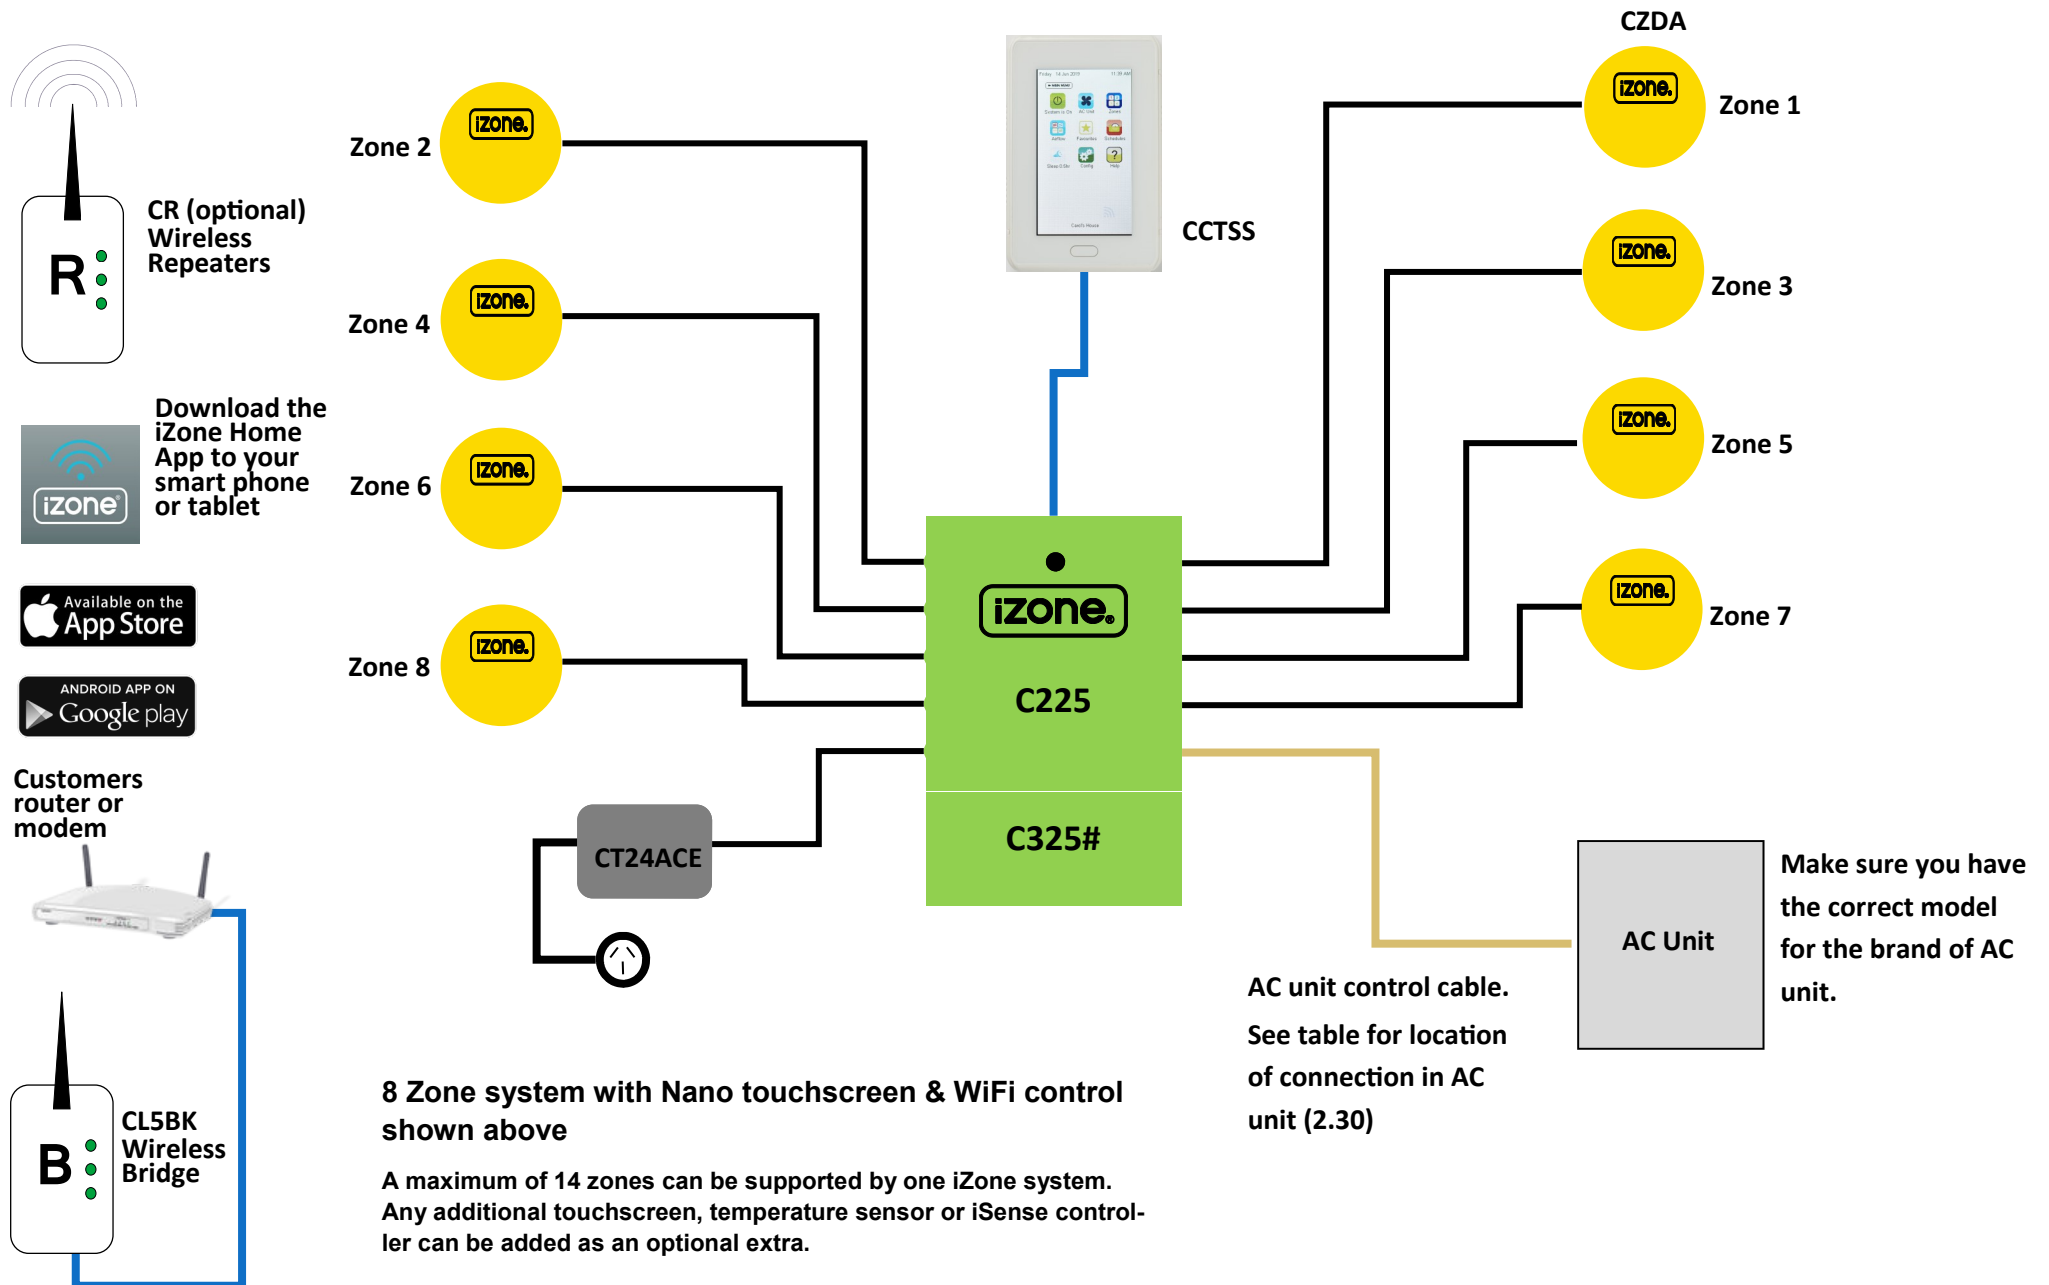

2.12 iZone Nano 425 - Wiring layout for up to 14 zones

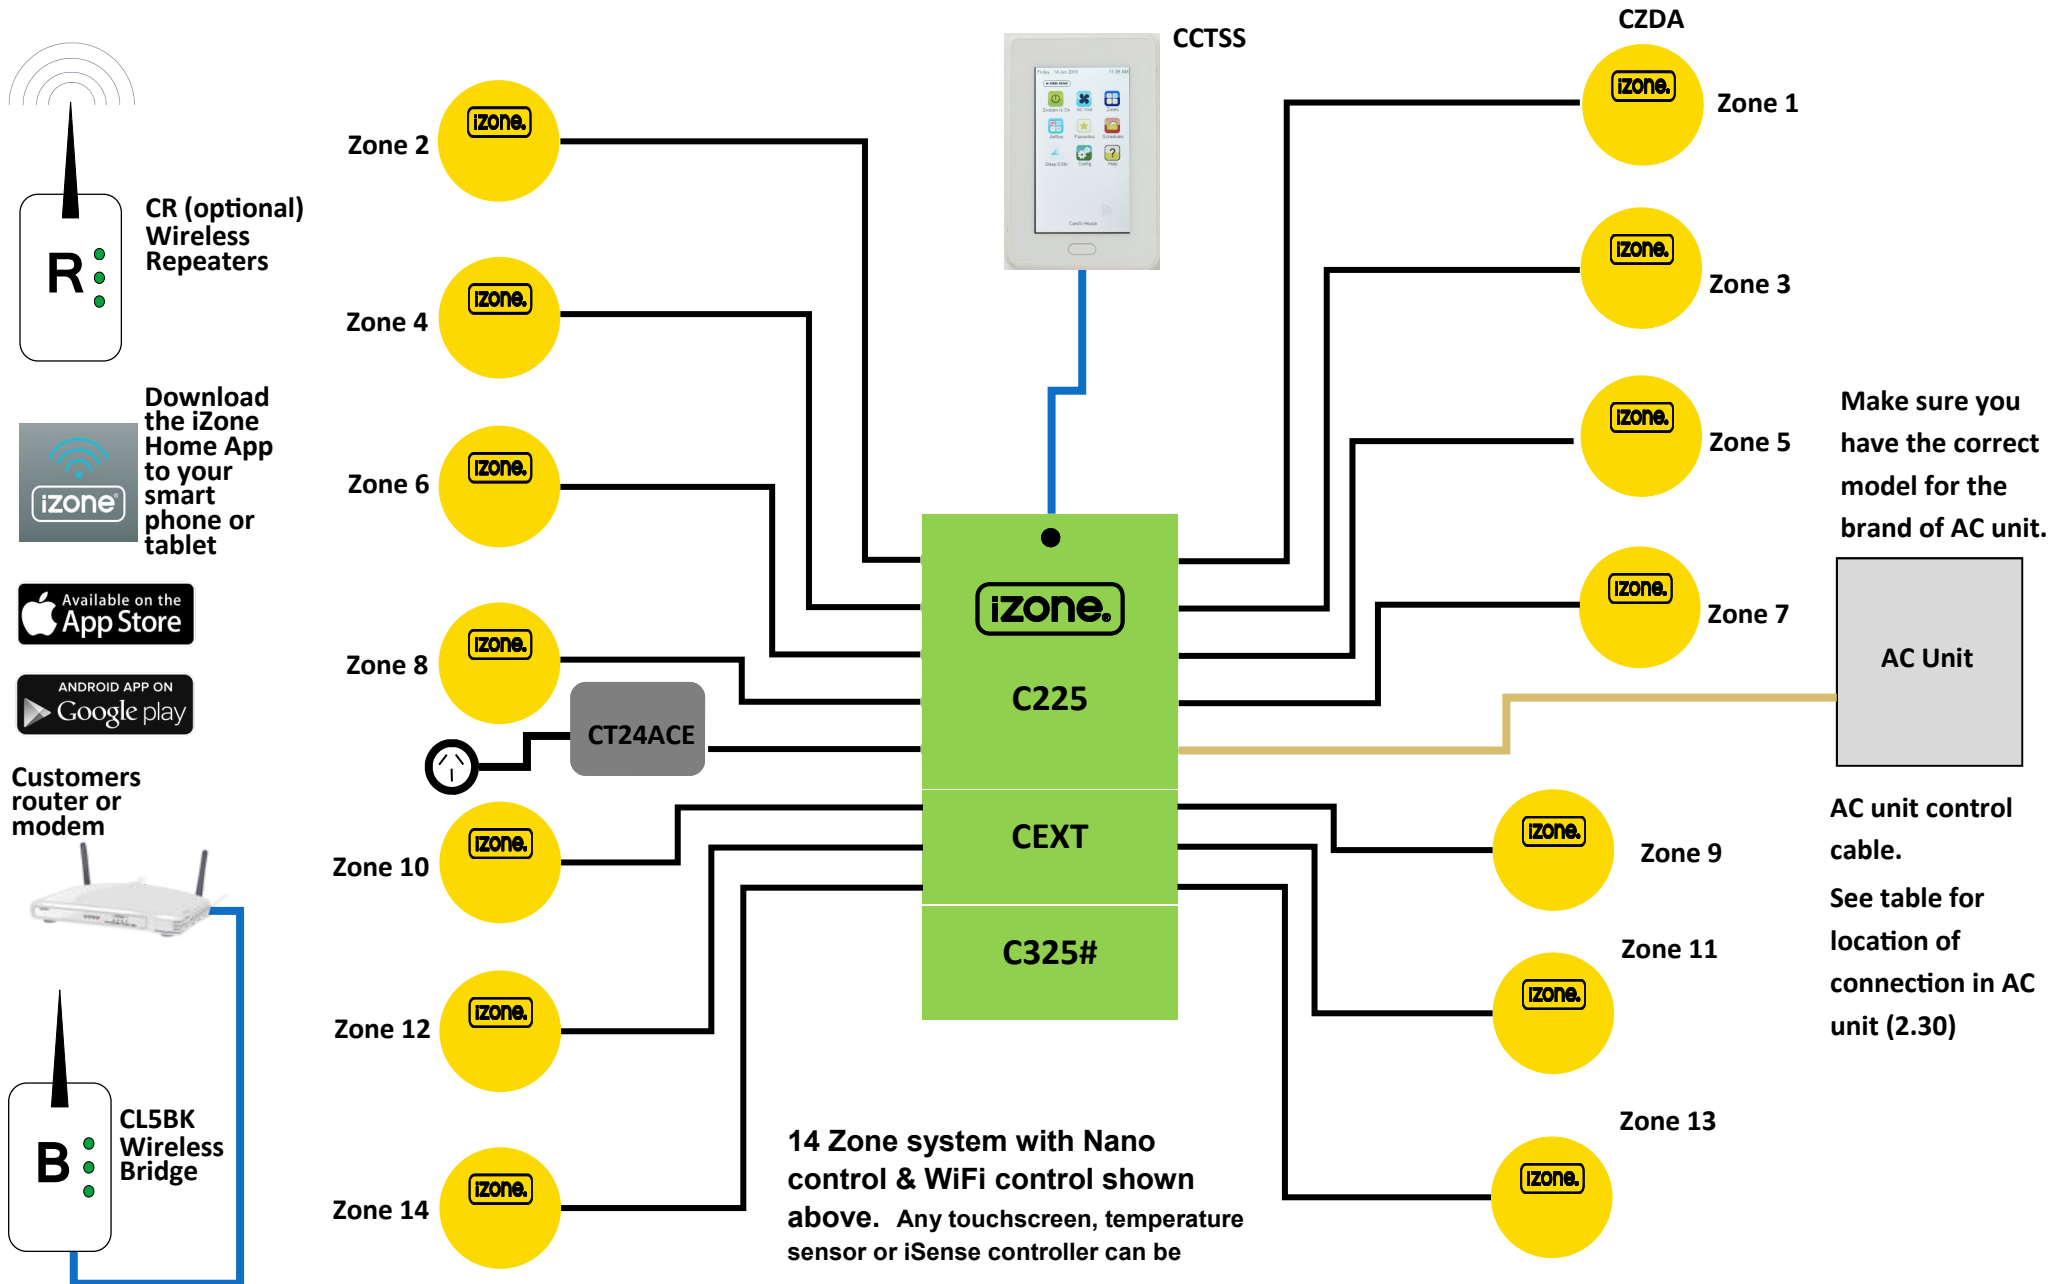


2.13 iZone Nexus 430 - Wiring layout up to 8 zones

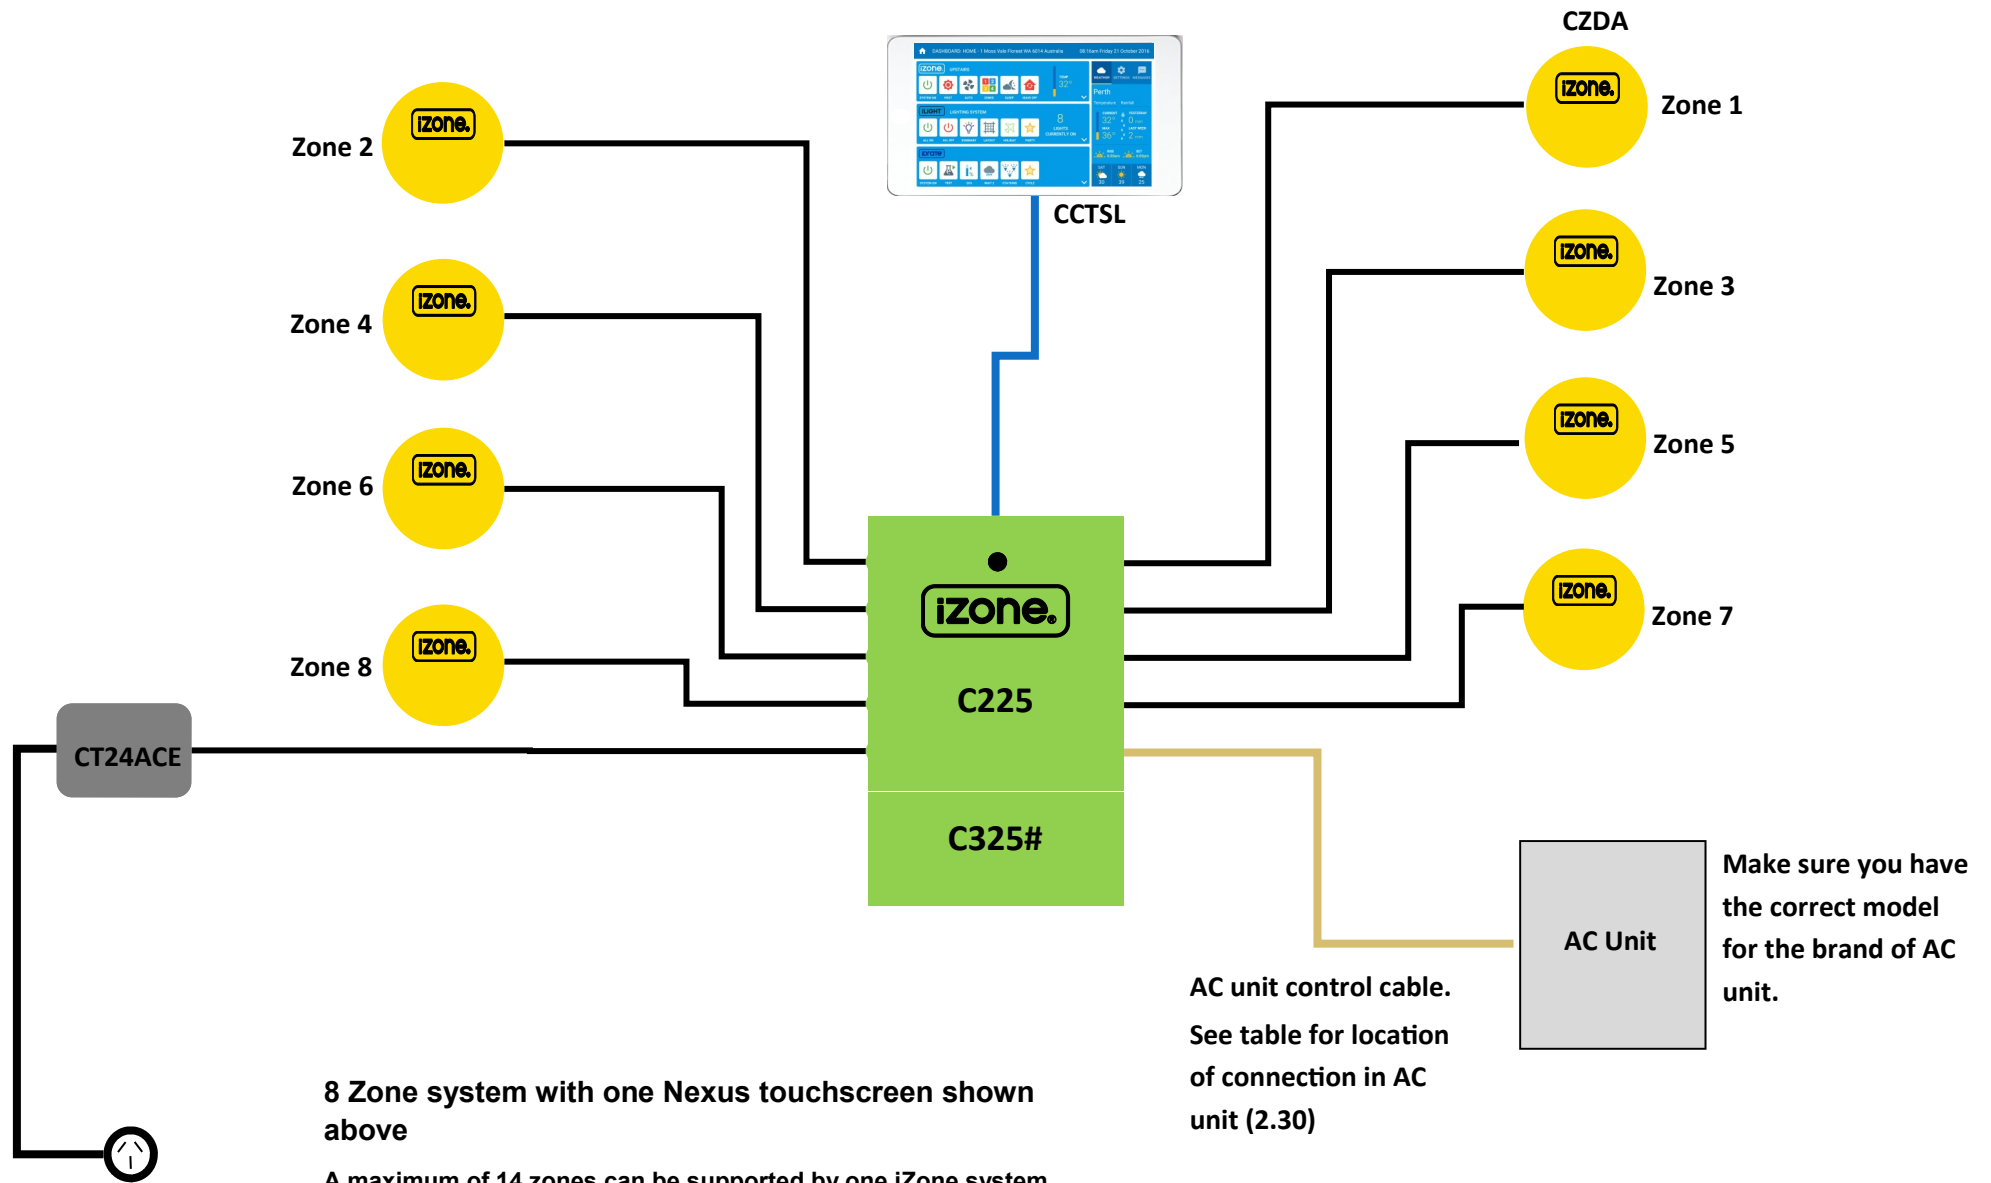


8 Zone system with one Nexus touchscreen shown above

A maximum of 14 zones can be supported by one iZone system. Any additional touchscreen, temperature sensor or iSense controller can be added as an optional extra.


2.14 iZone Nexus 430 - Wiring layout for up to 14 zones

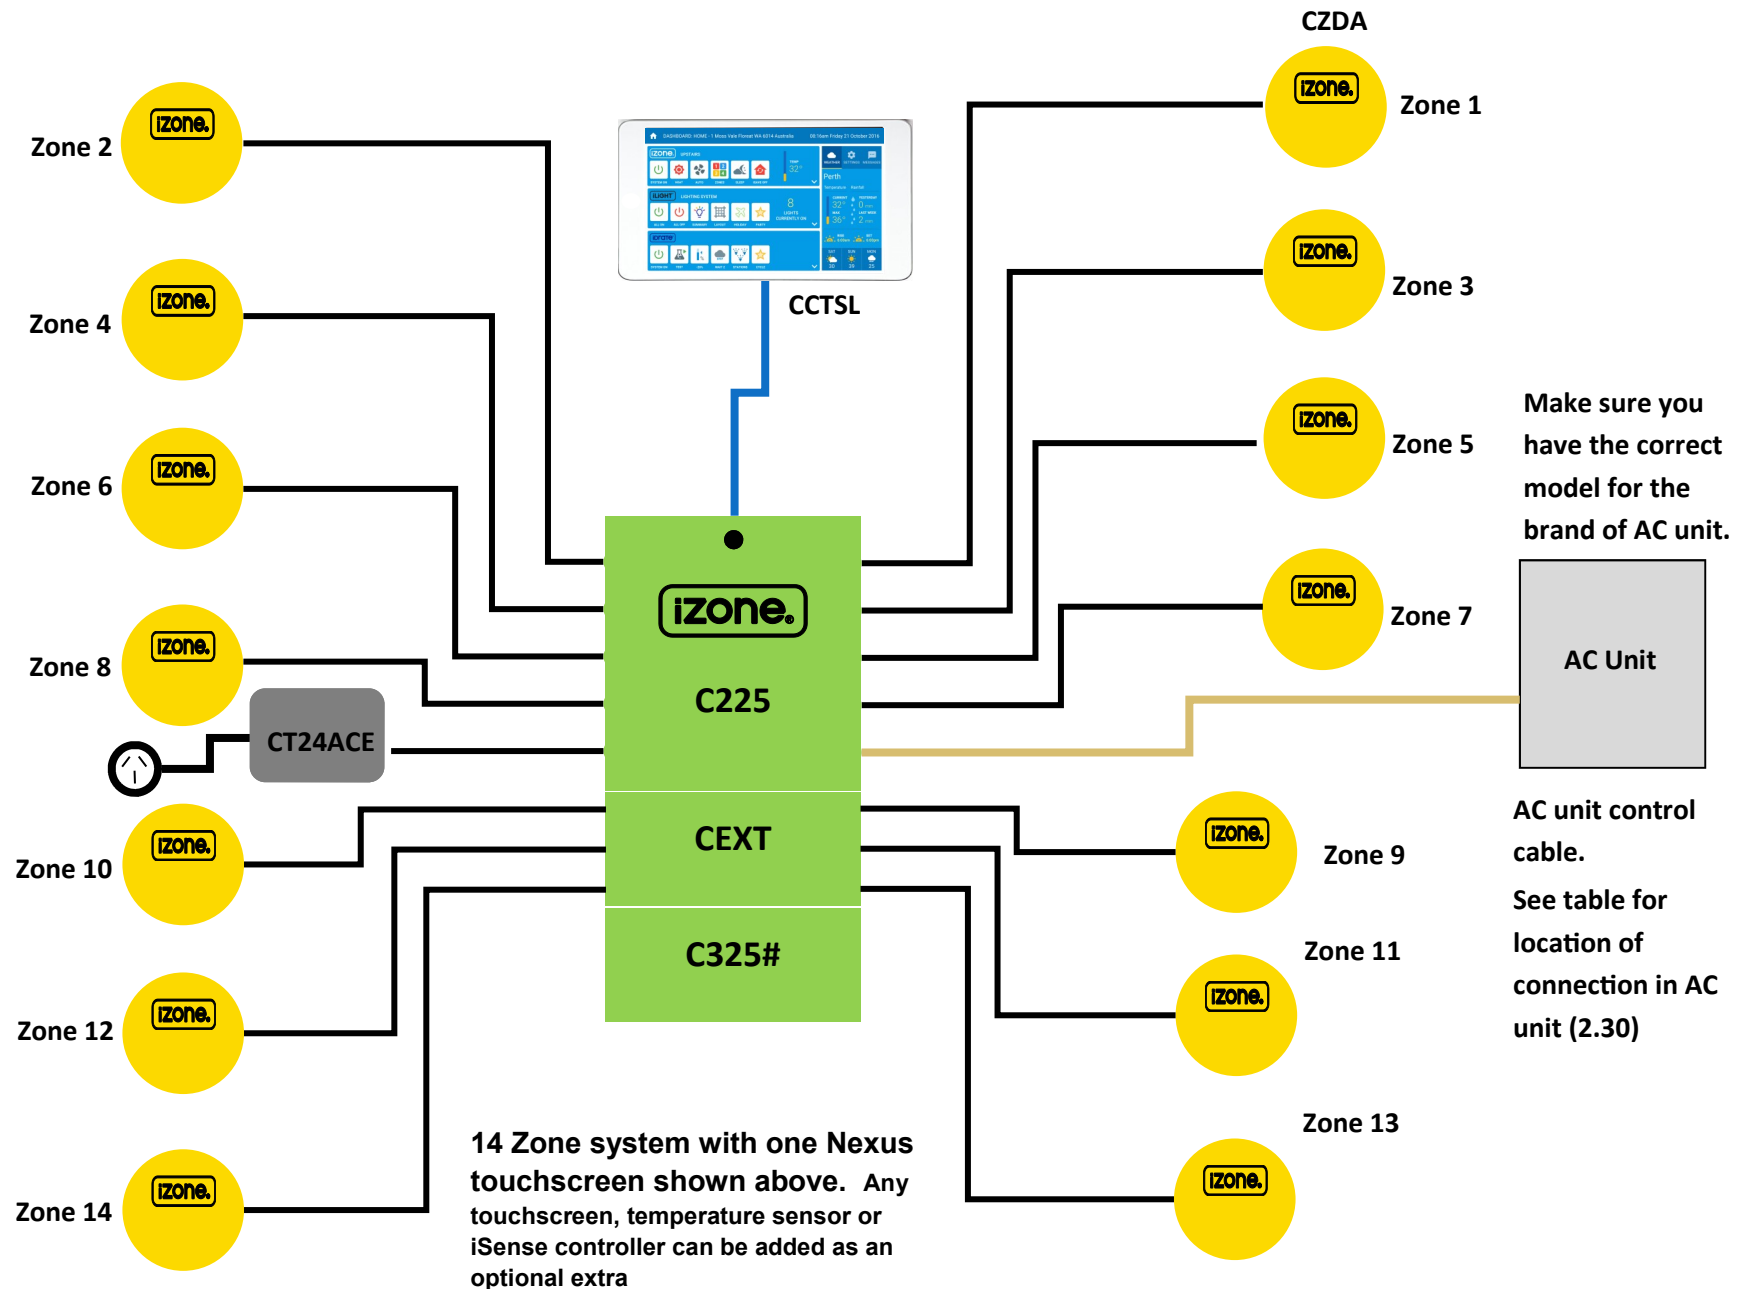


2.15 iZone Nexus 435 - Wiring layout up to 8 zones

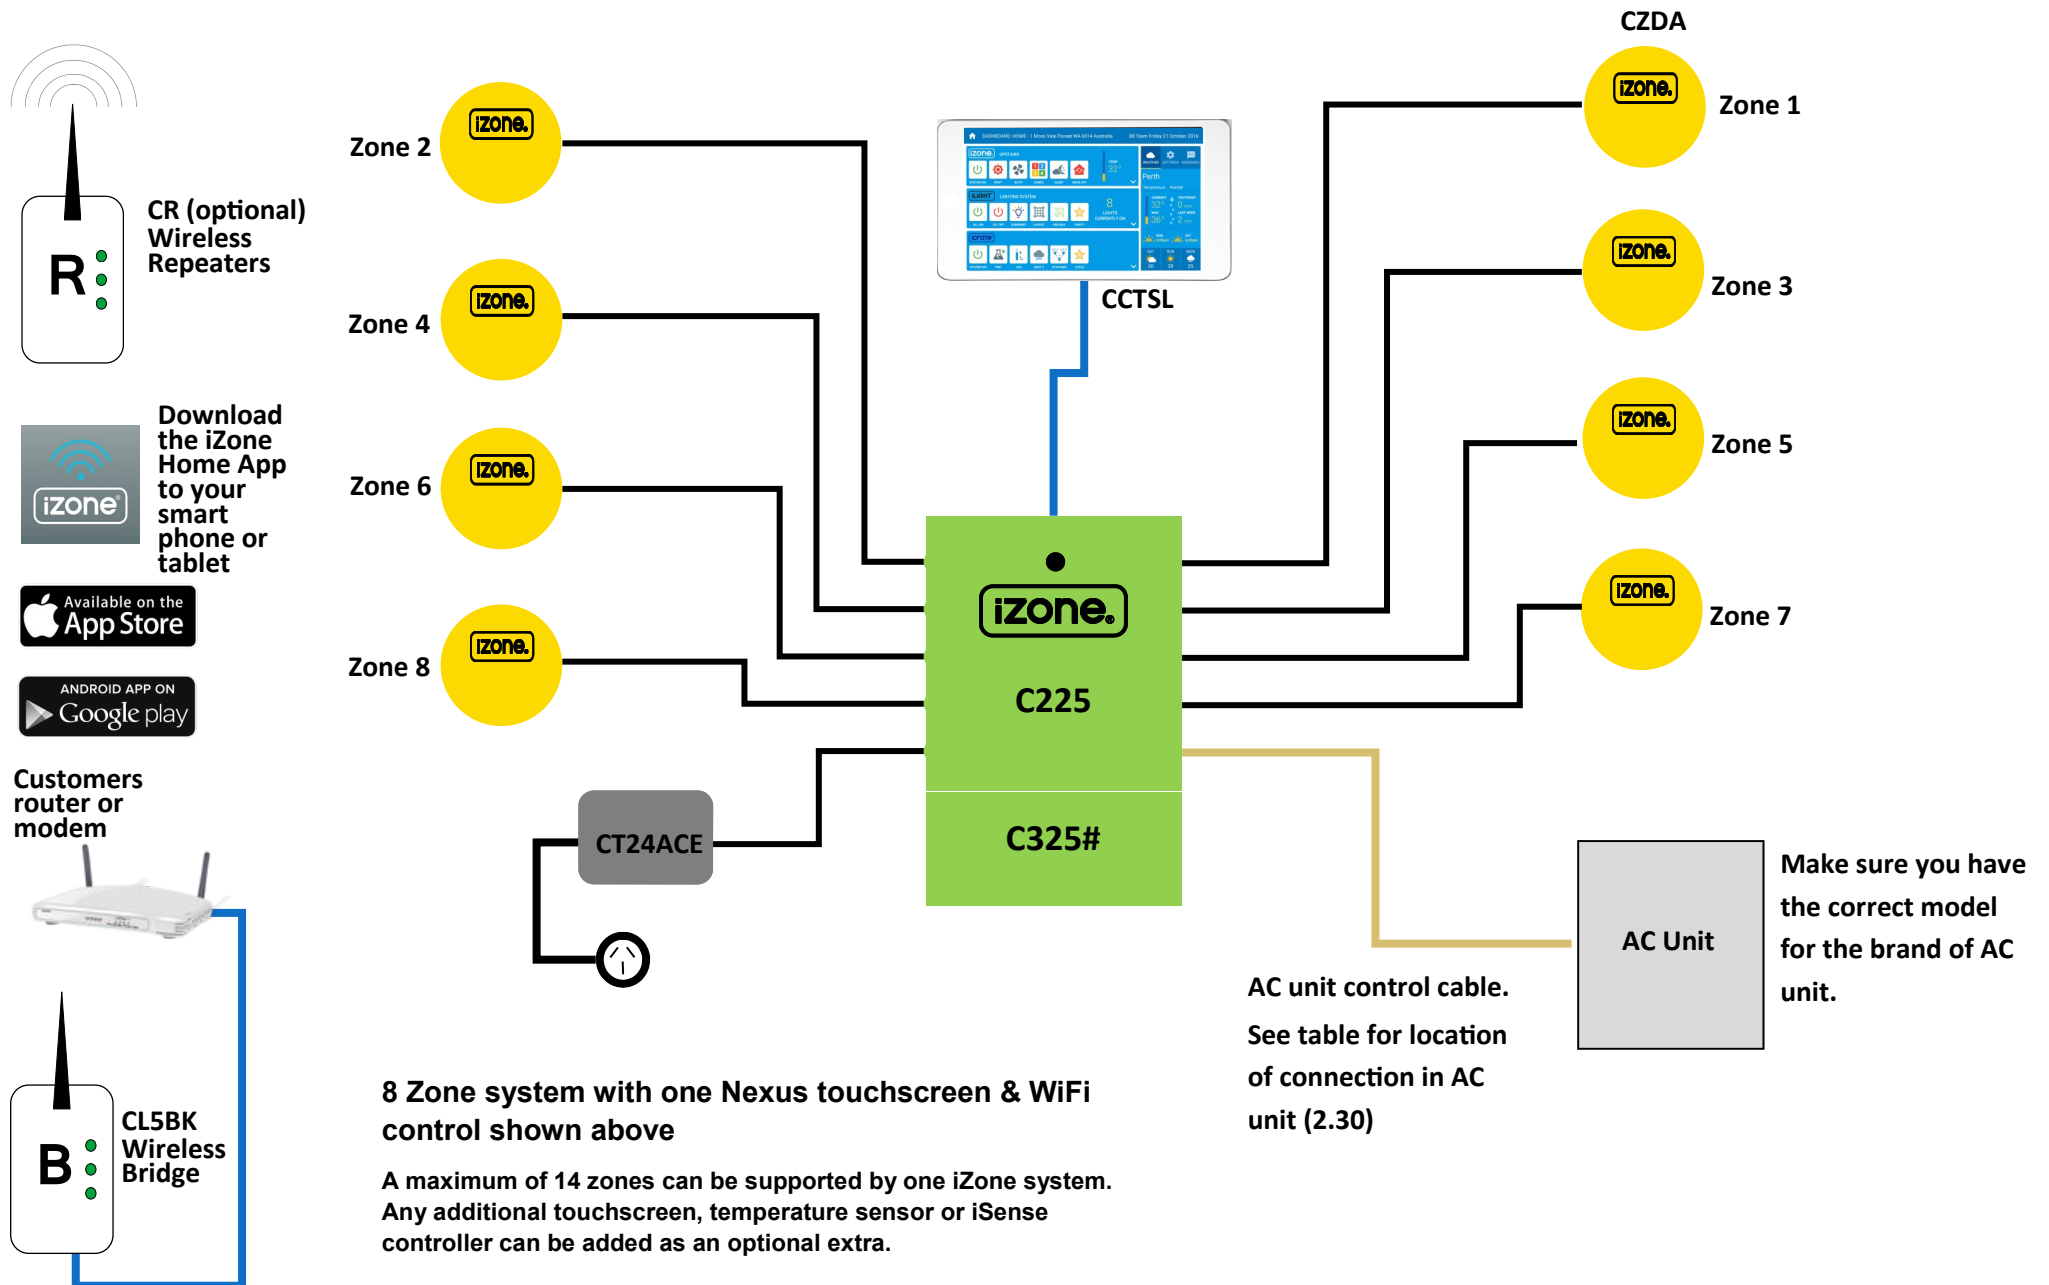


2.16 iZone Nexus 435 - Wiring layout for up to 14 zones

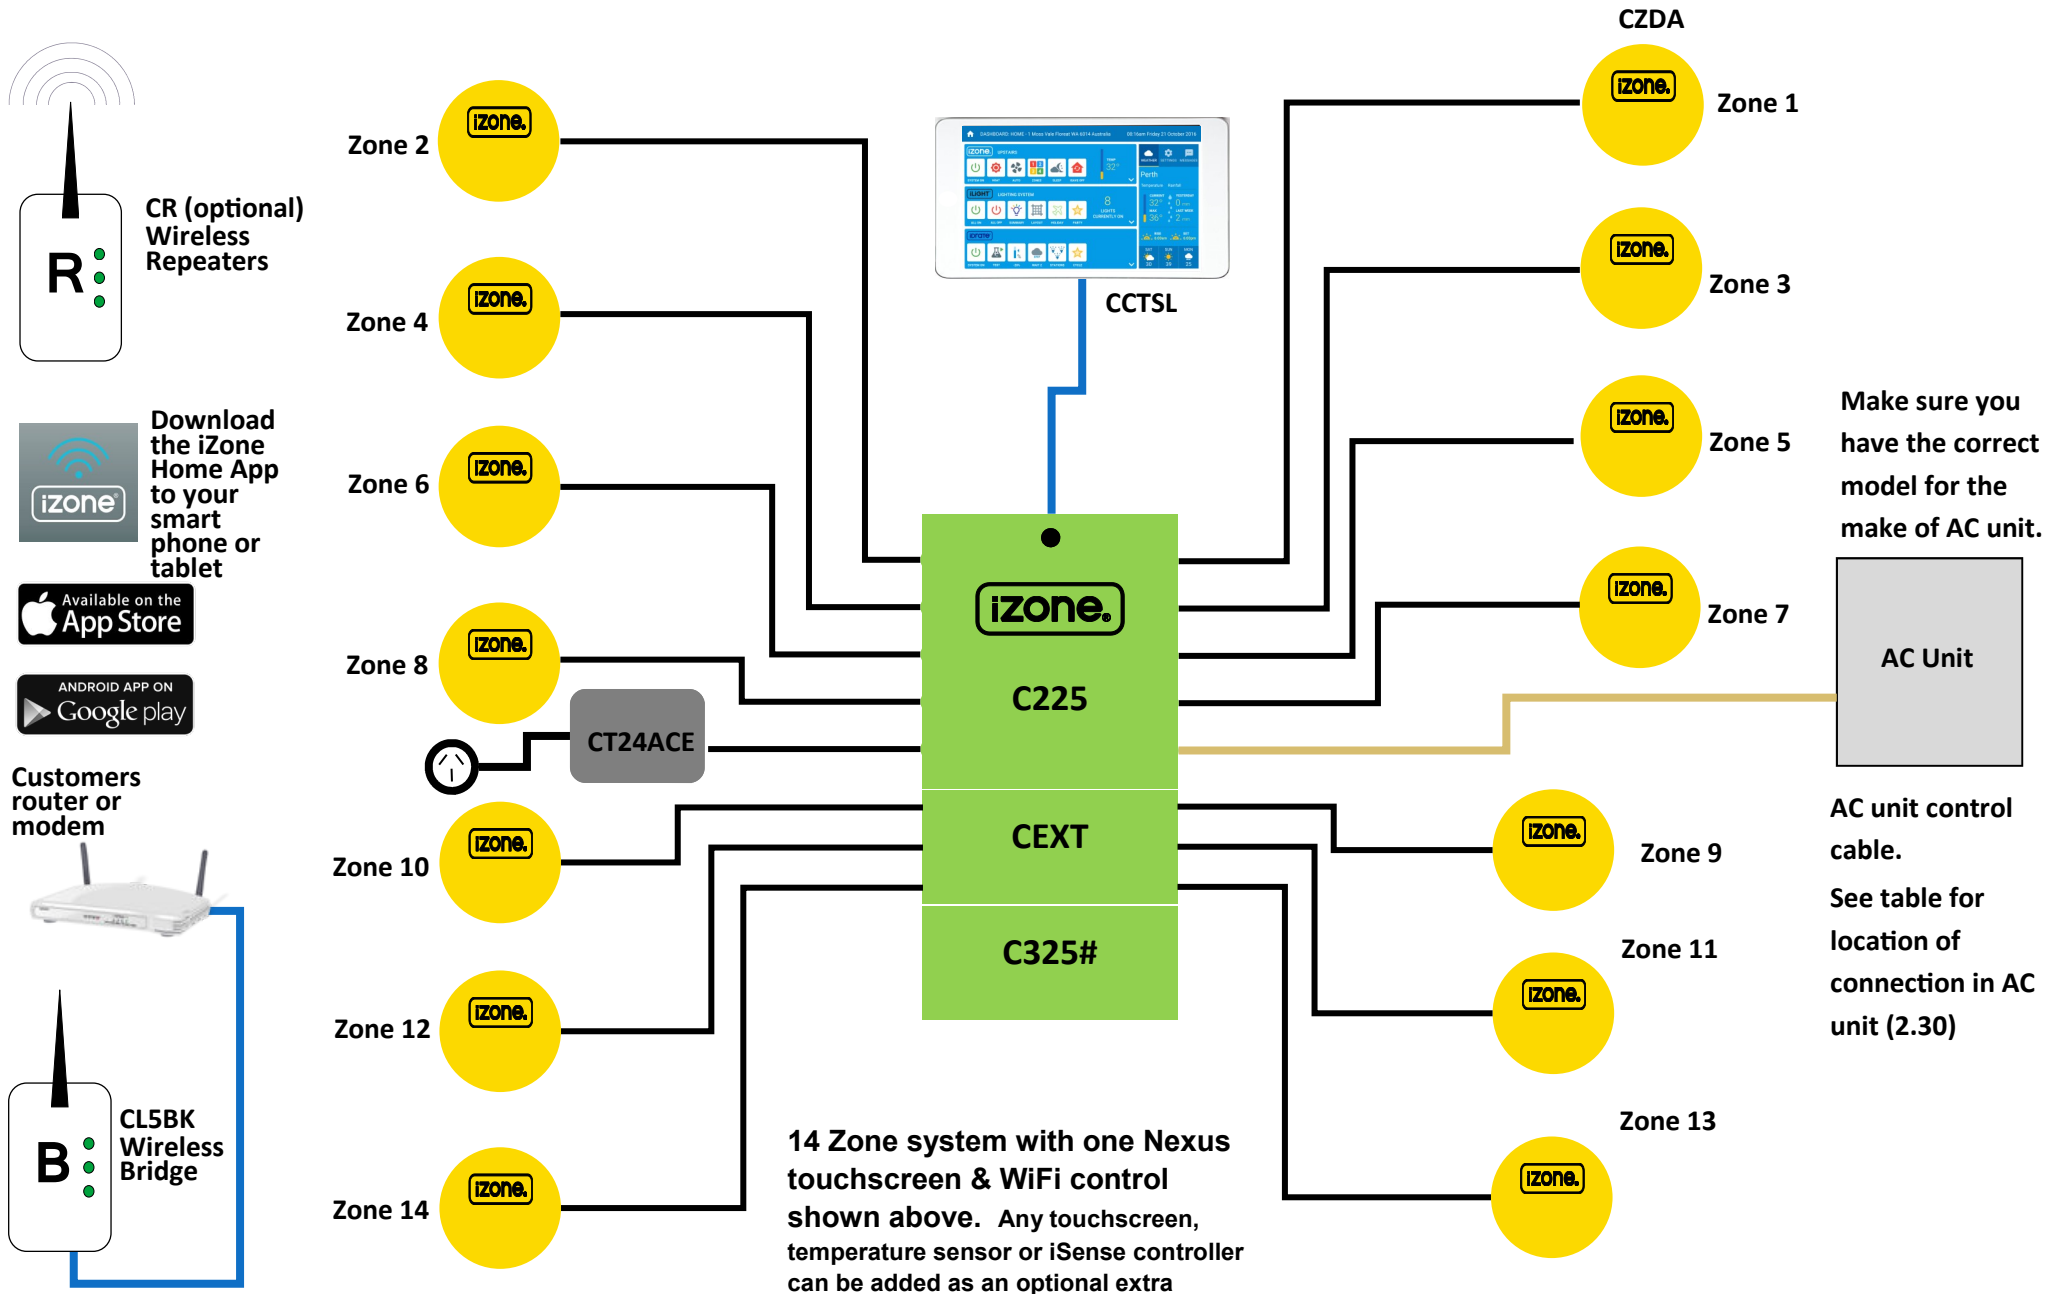


2.17 Stand alone VAV systems - Wiring layout for typical 4 zone system

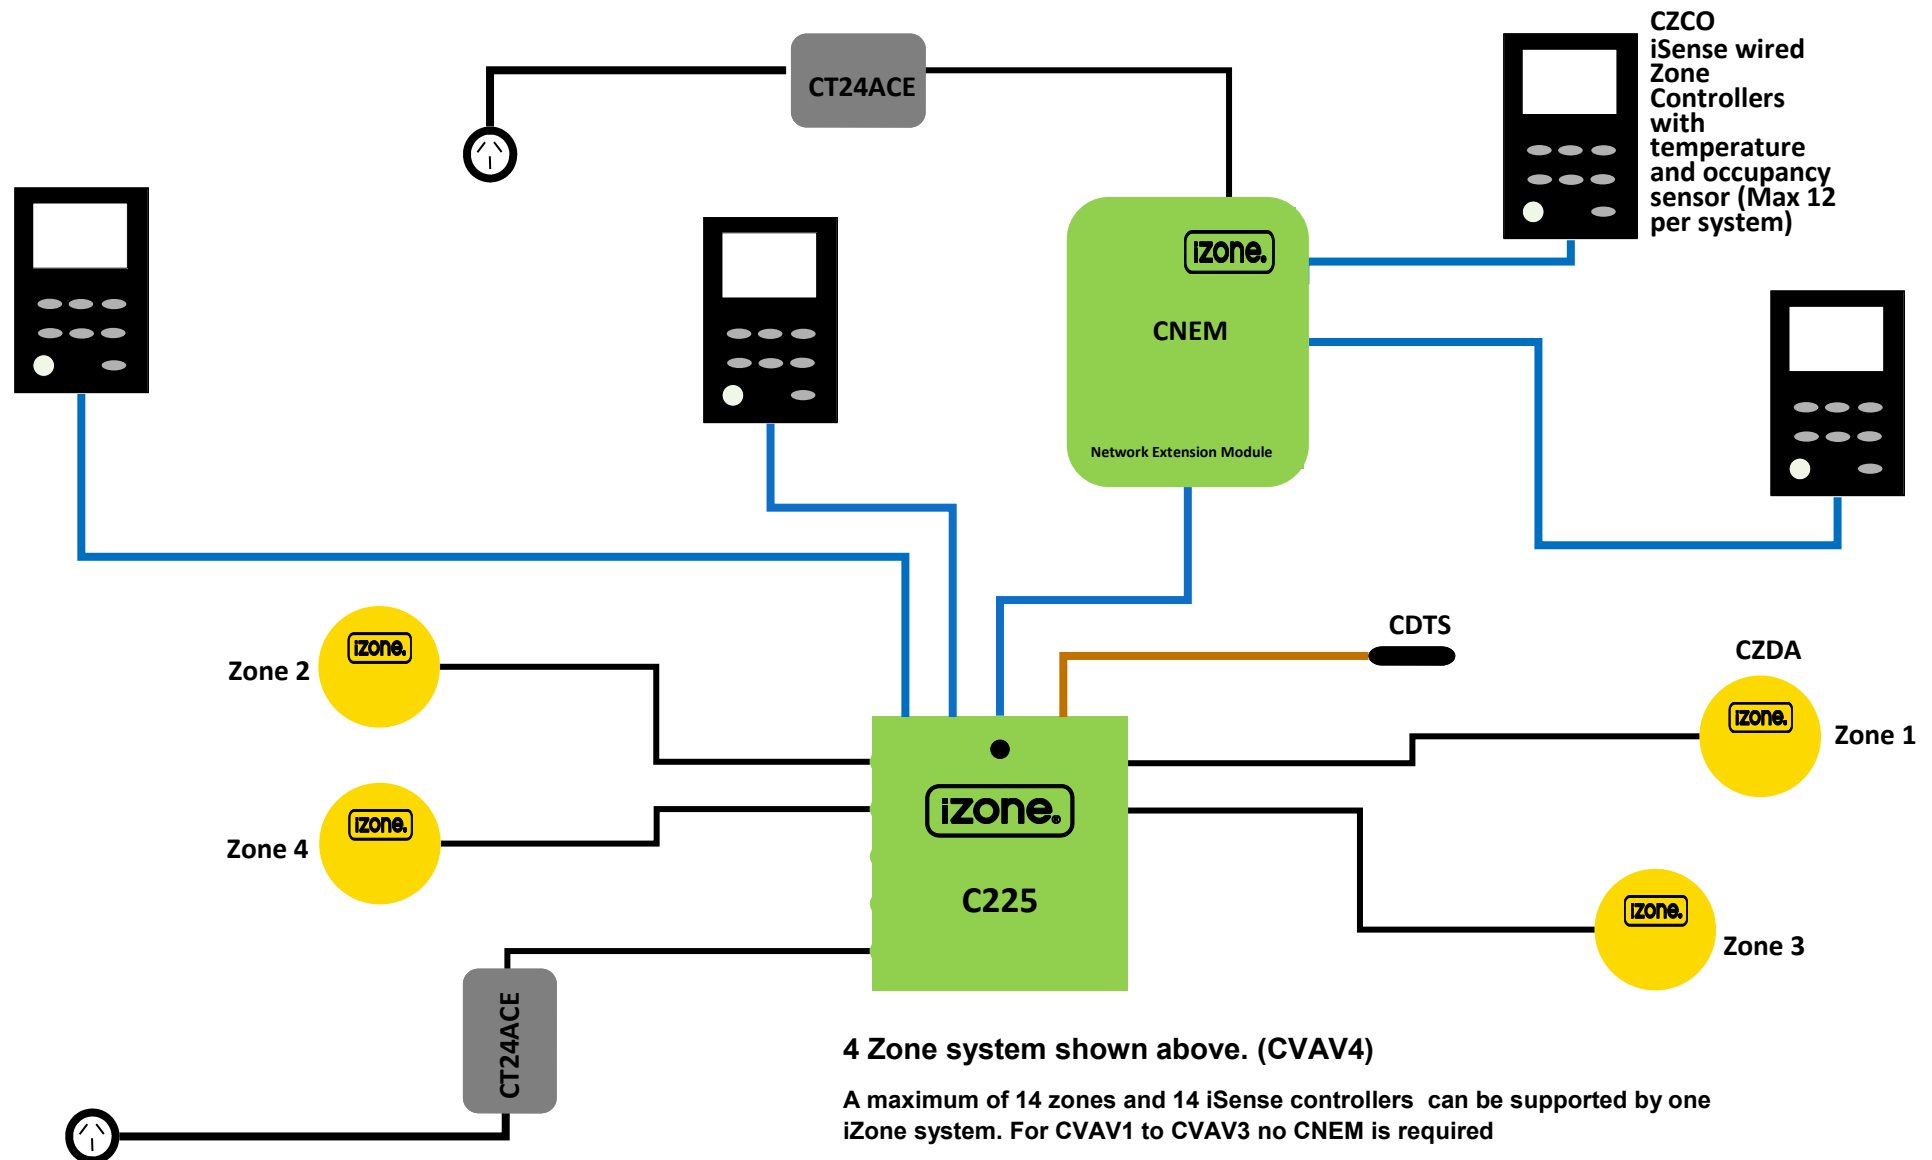


2.18 Optional equipment for wireless temperature controlled zones

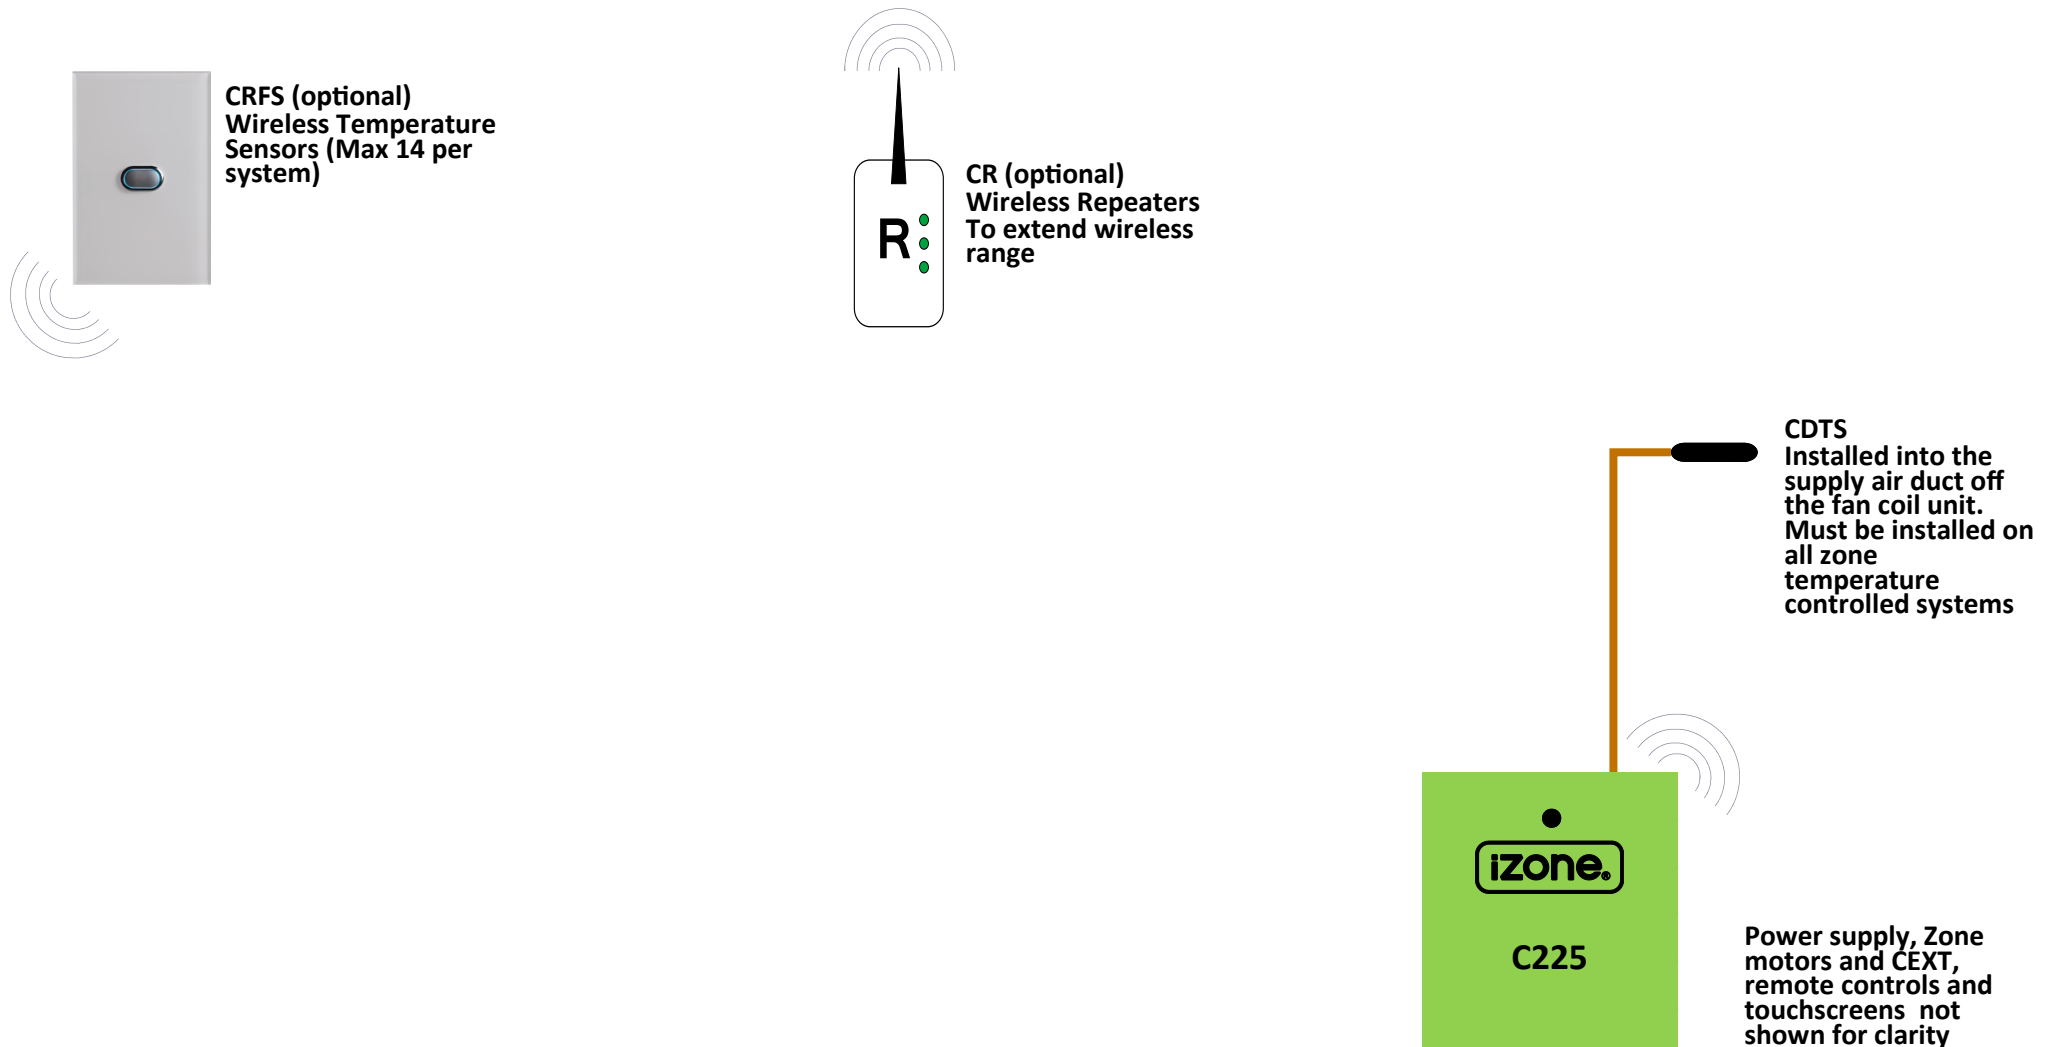


2.19 Optional equipment for wired temperature sensors

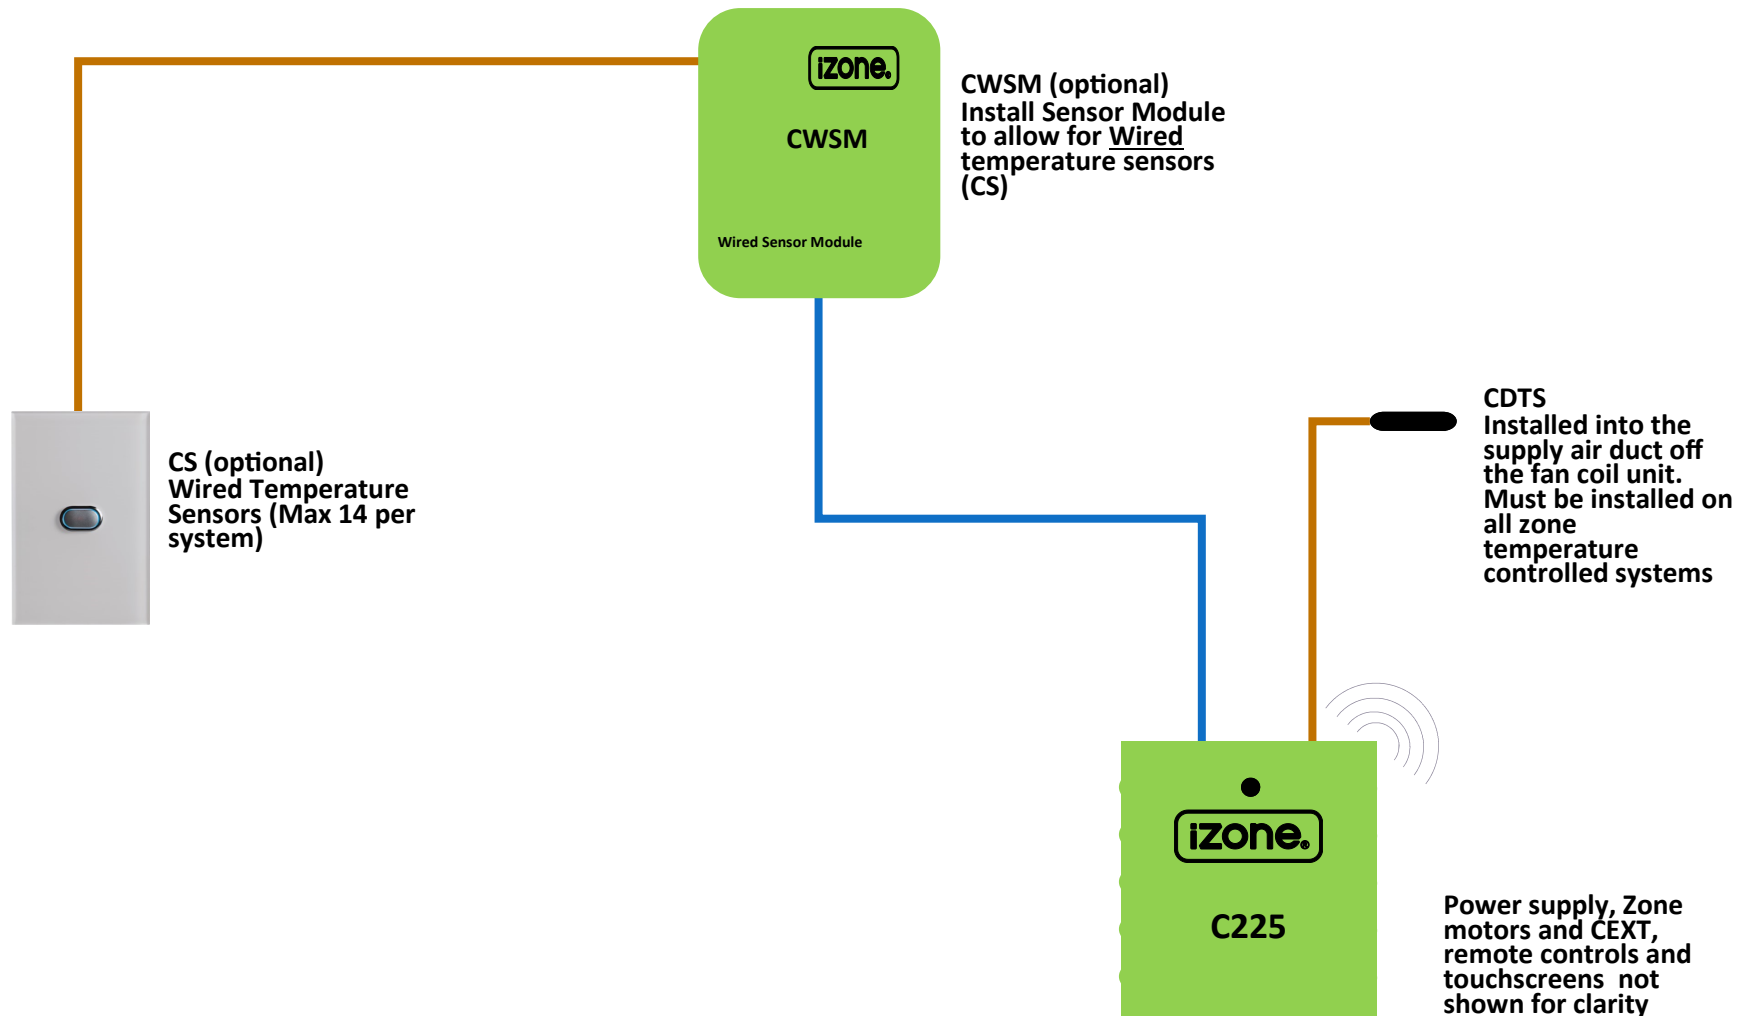


2.20 Optional equipment for iSense temperature and occupancy controlled zones

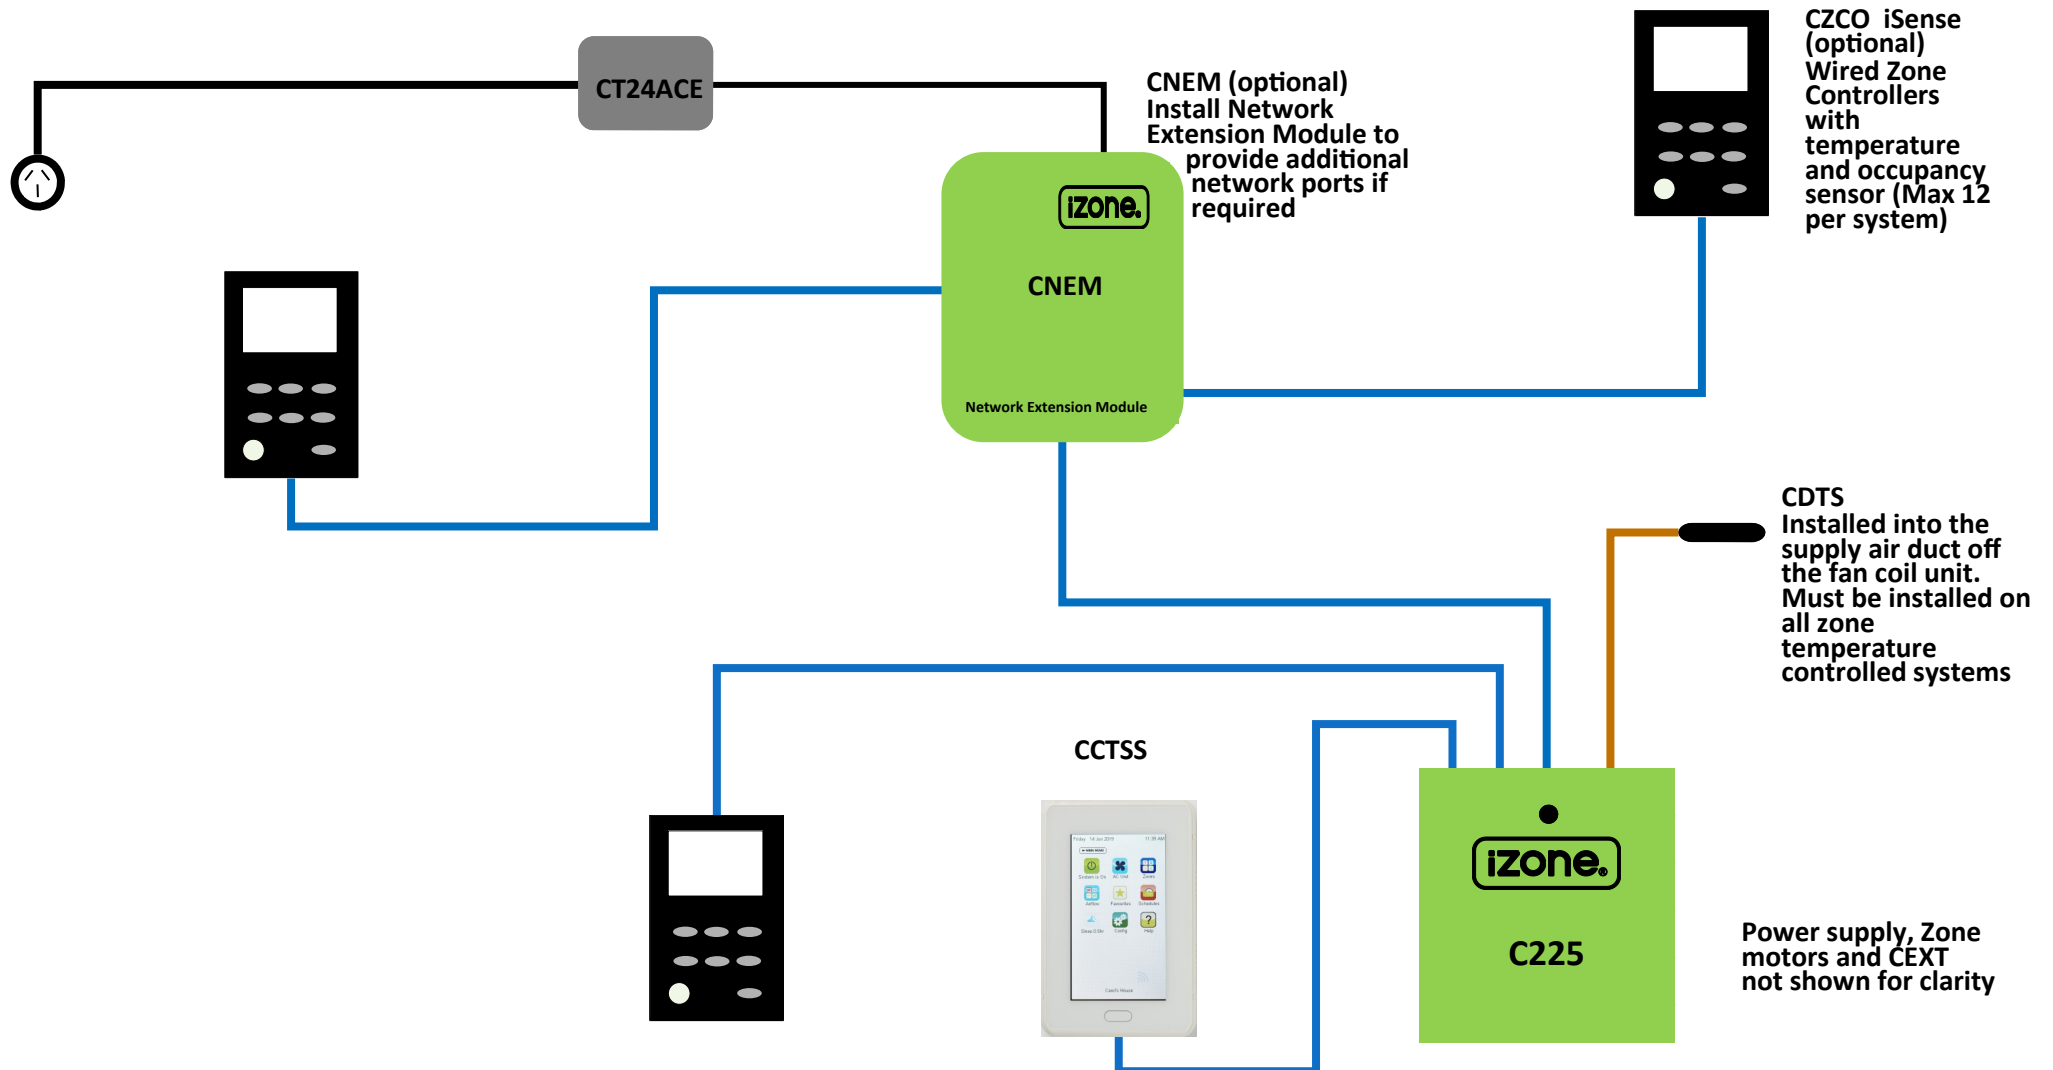

2.21 Optional equipment for colour touch screen temperature controlled zones

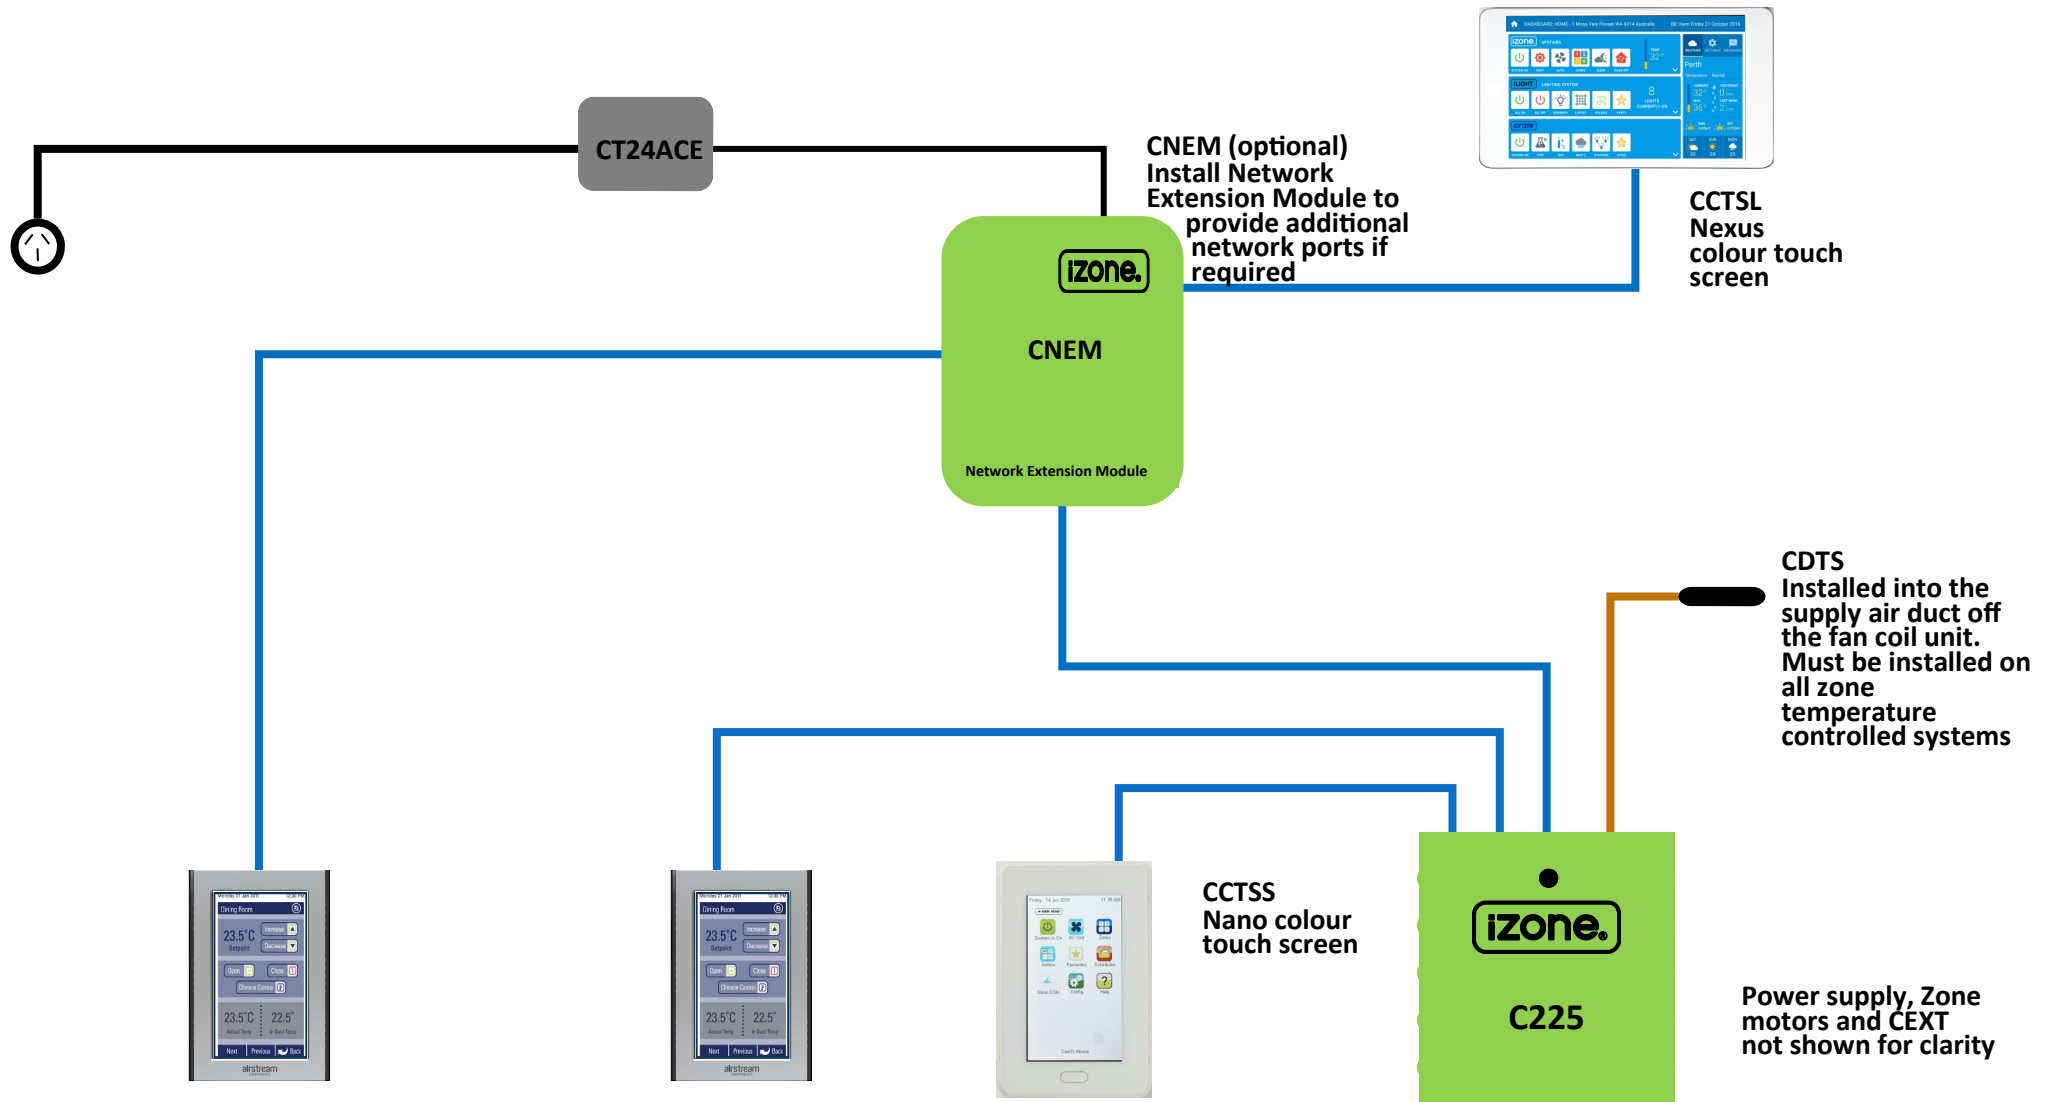


2.22 Example of different types of temperature sensors on a single system

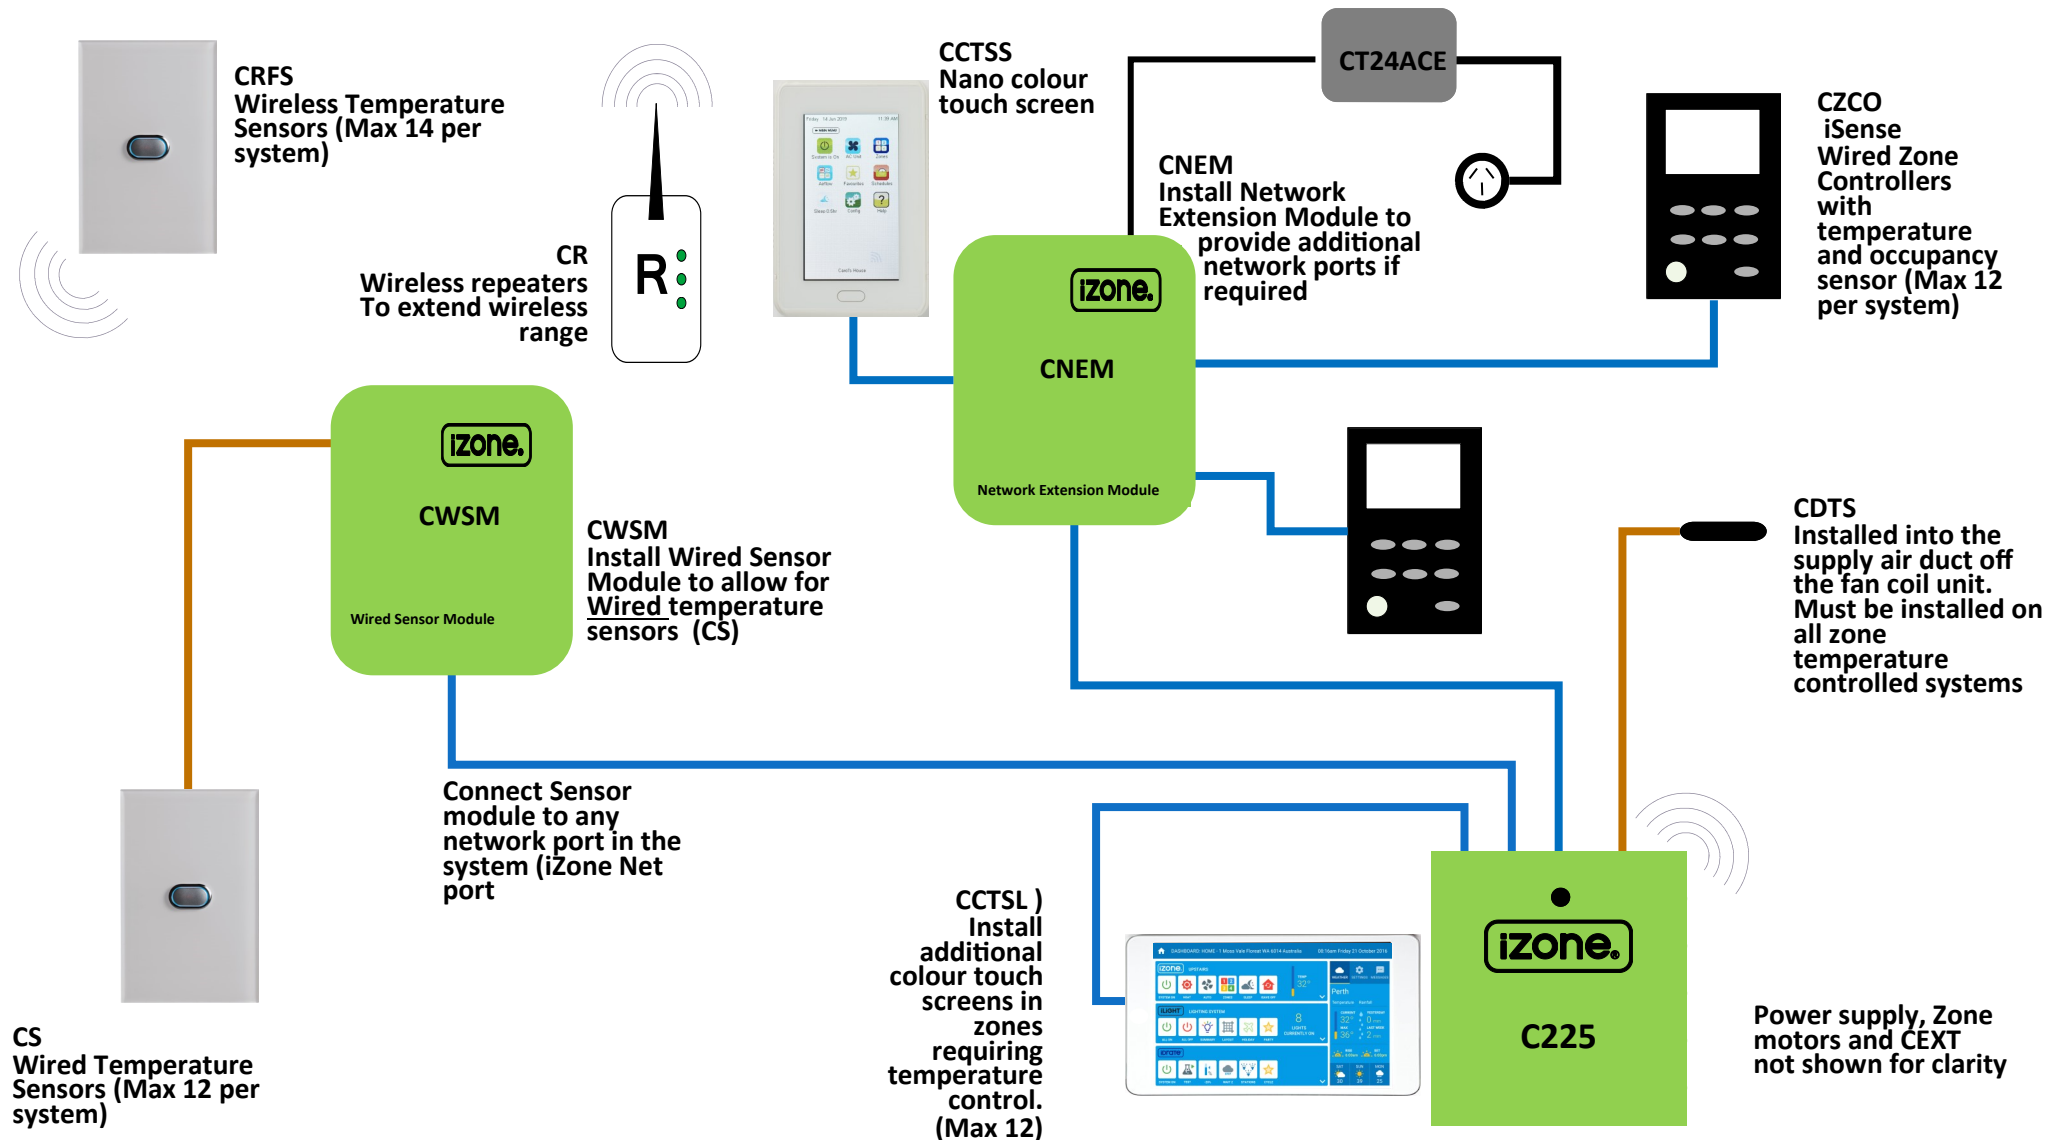


2.23 Optional equipment for running multiple systems from a single iZone screen

Notes:

1. When using the multiplexer, you cannot use the in-built screen, temperature sensor, in any Nexus screens connected to the multiplexer.
2. The C225 plugged into the port labelled "CCPU 1" will be displayed first on the Nexus touch screen.
3. You can only use a Nexus touch screen on a CISM. Nano touch screen are not suitable for this purpose.

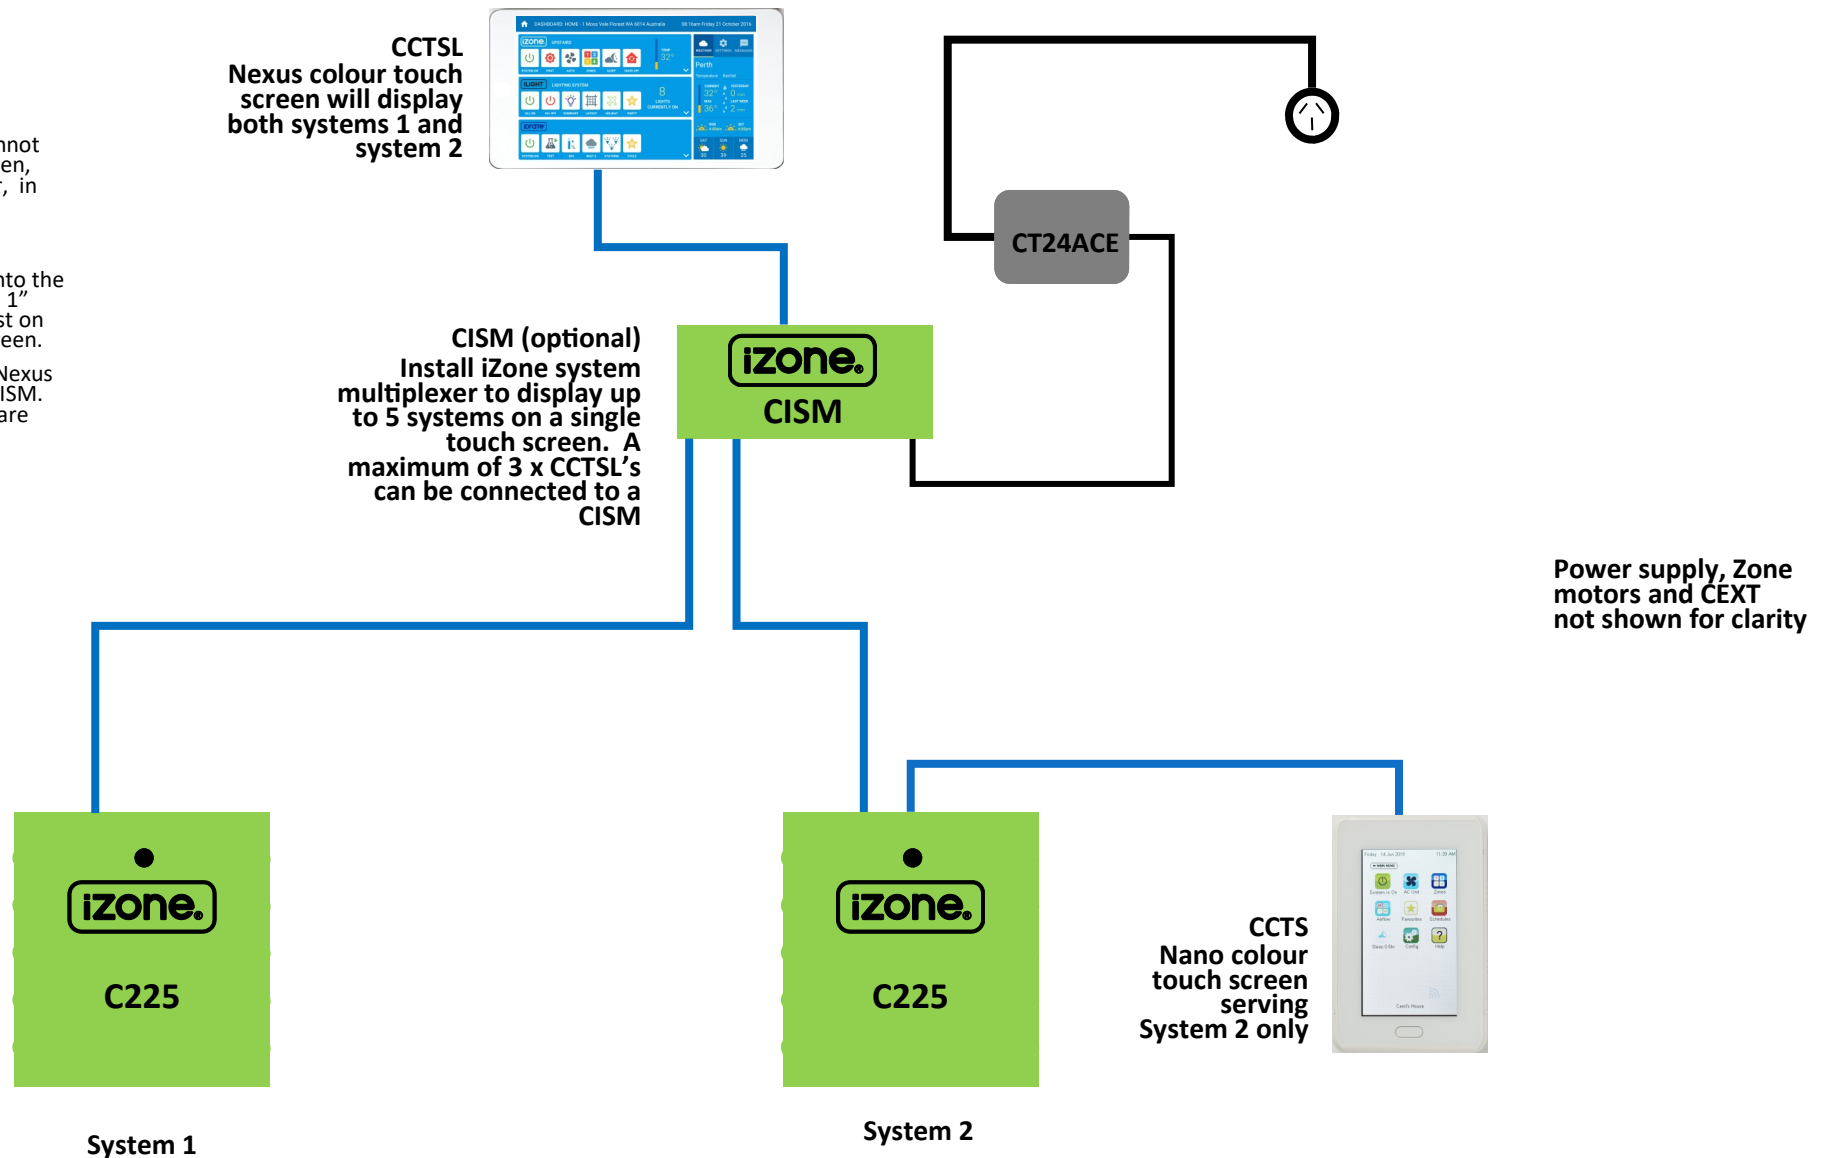



2.24 Optional equipment for wired WiFi Control of system

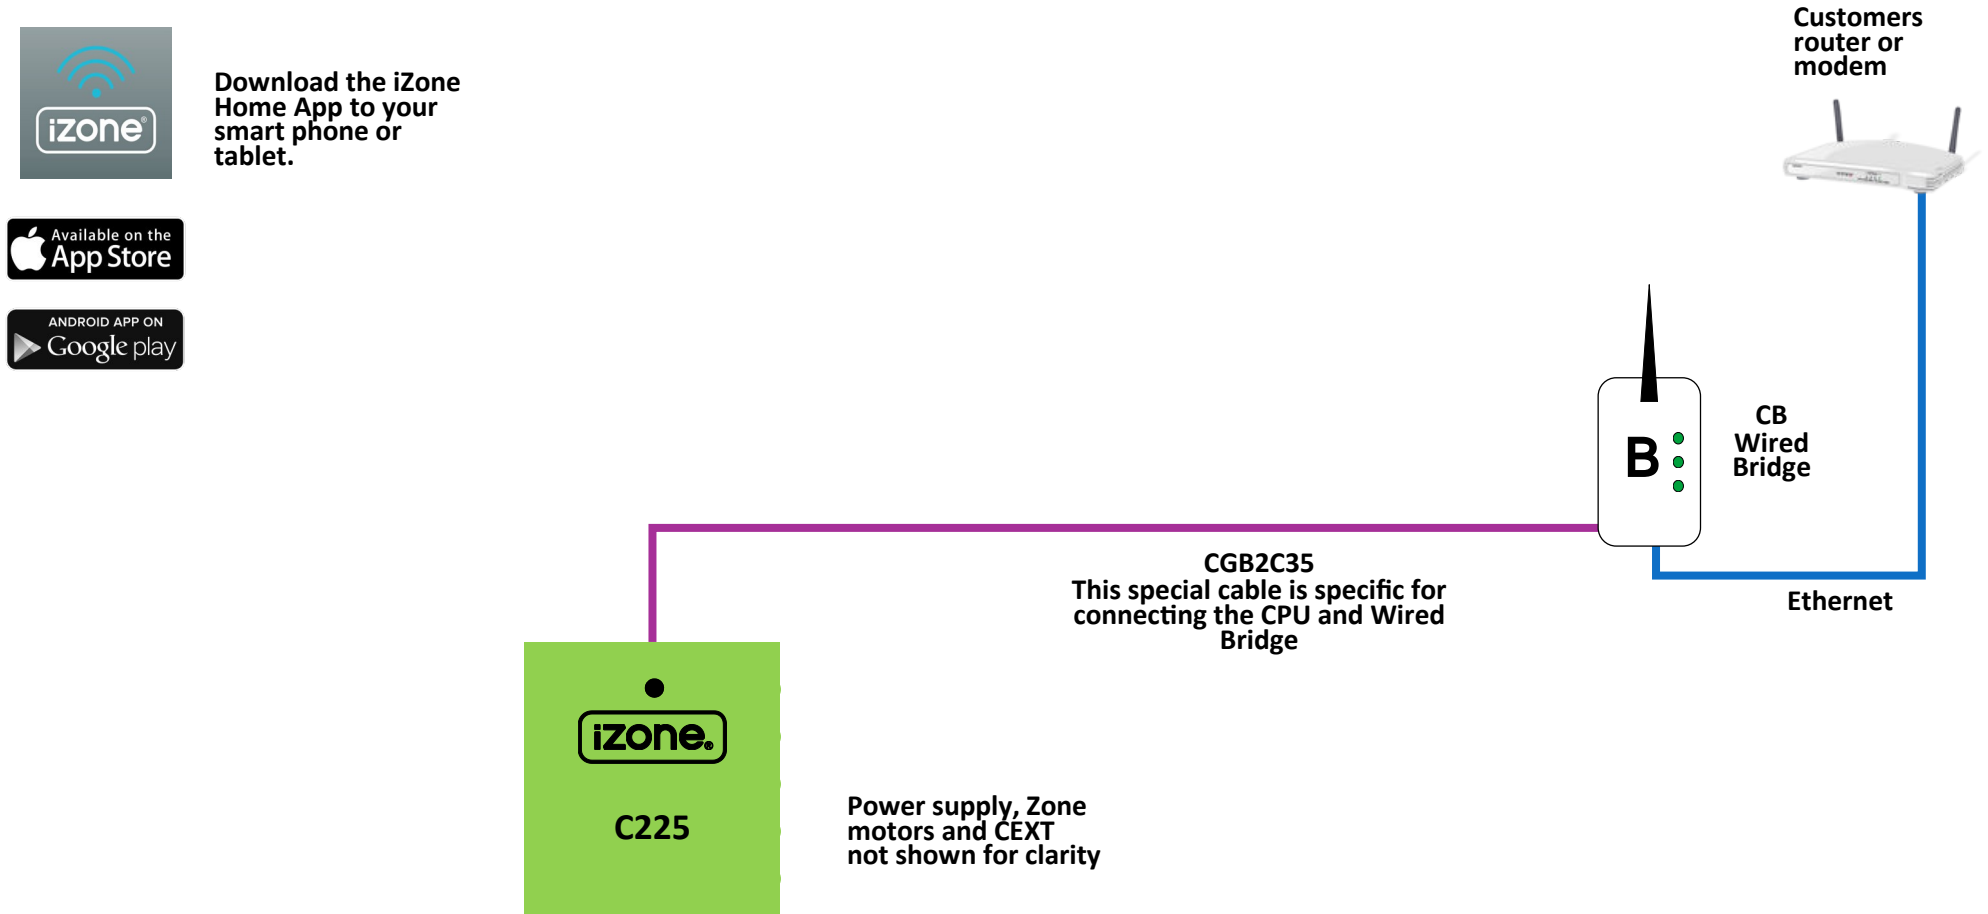

2.25 Optional equipment for wireless WiFi control of system




Download the iZone Home App to your smart phone or tablet.



CR (optional)
Wireless Repeater

Customers
router or
modem




CB
Wireless
Bridge



Power supply, Zone
motors and CEXT
not shown for clarity


2.26 iZone 415 to 435 - Optional equipment for iSave addition (up to 6 zones)

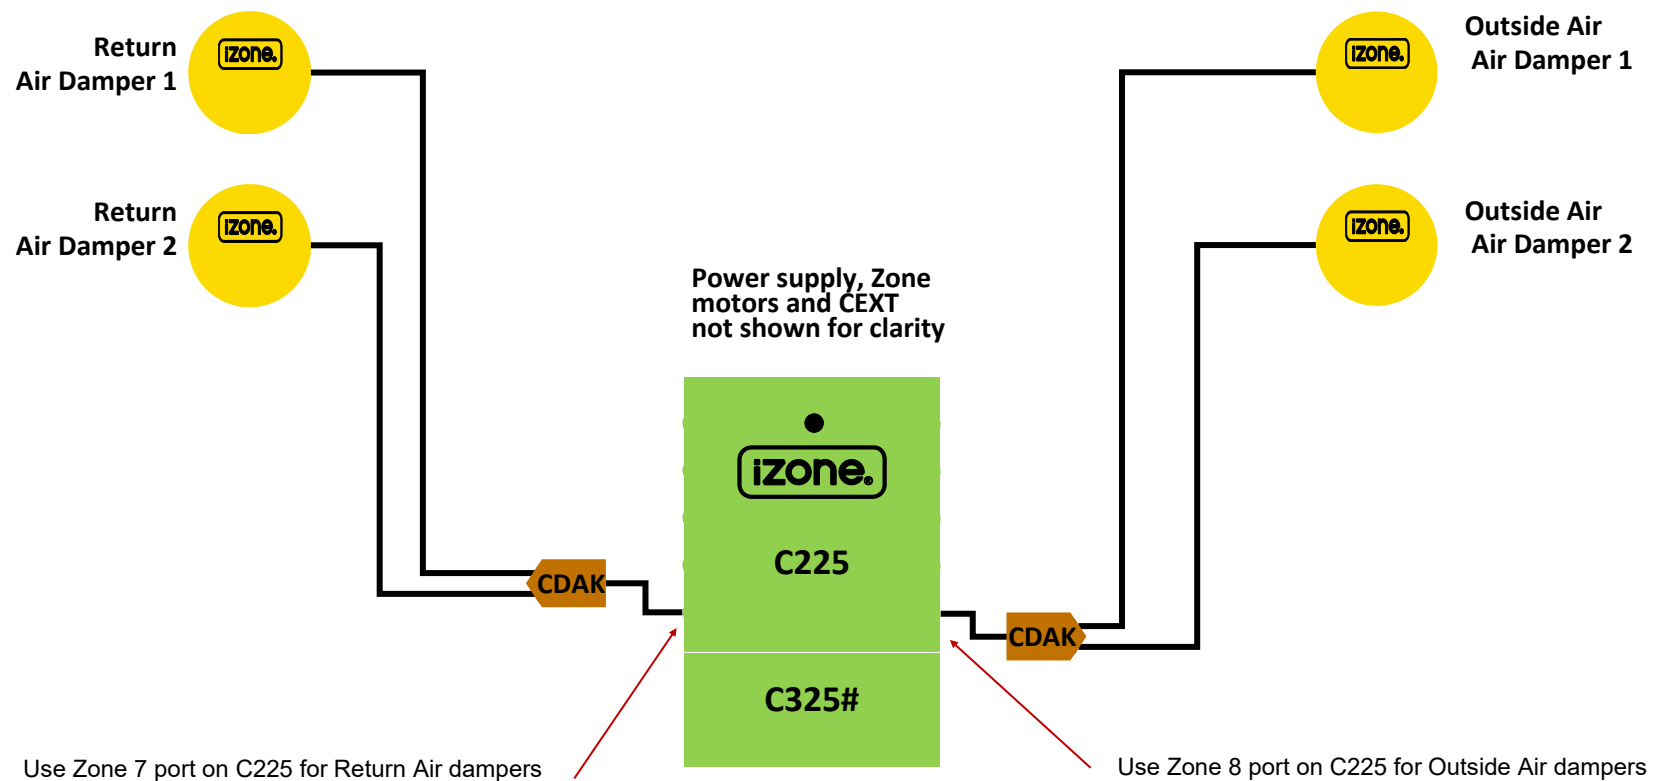

Note:

When the iSave option is used with an 8 zone system it is limited to a maximum of 6 Zones


2.27 iZone 415 to 435 - Optional equipment for iSave addition

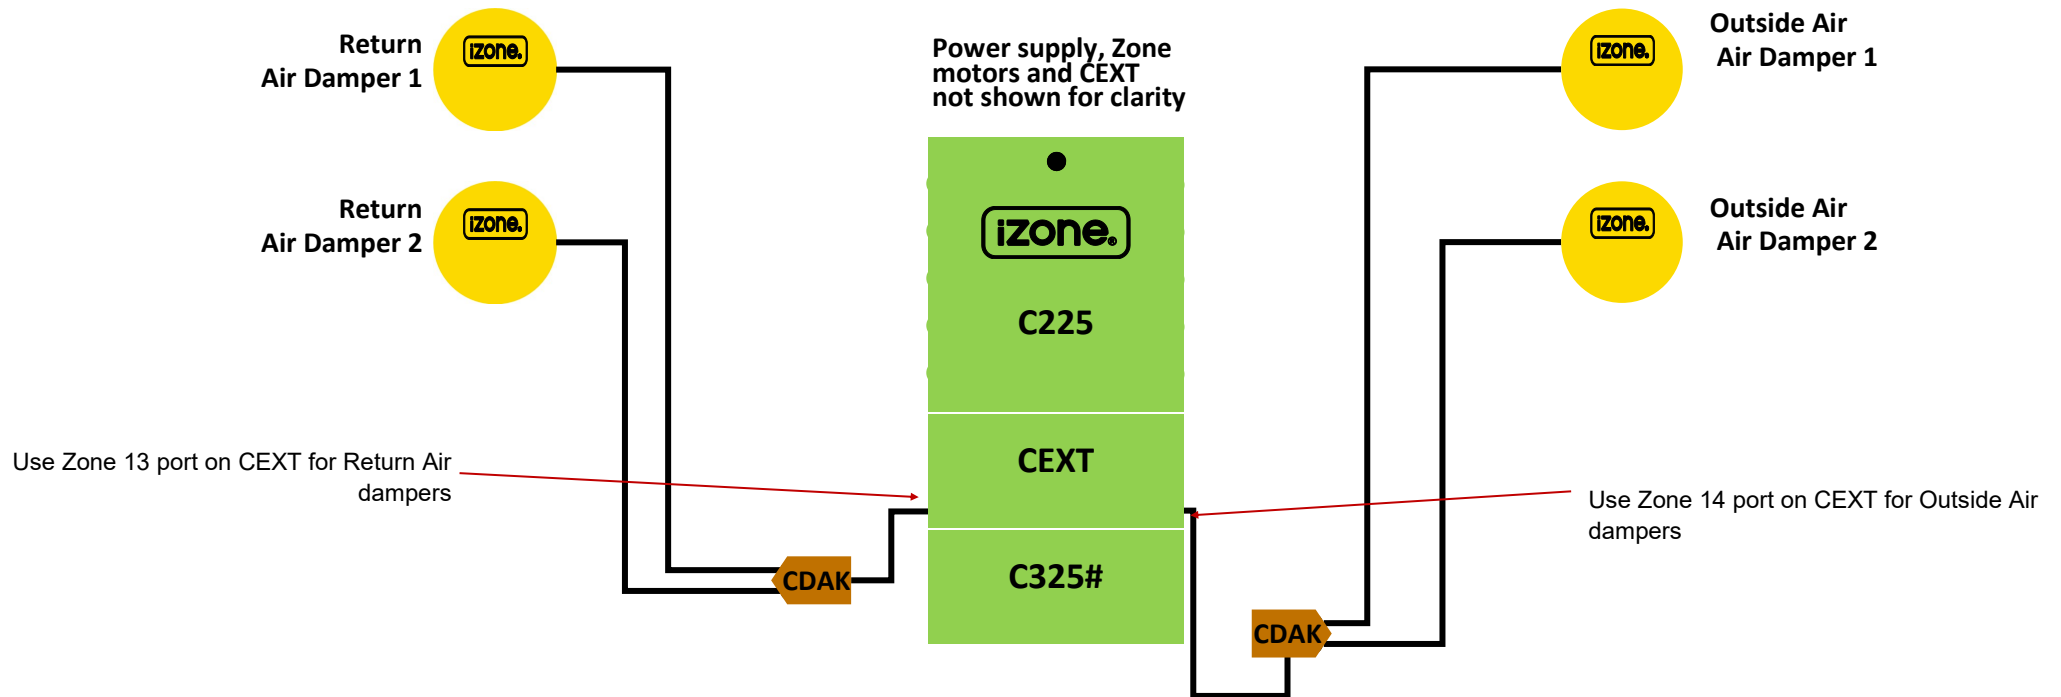


Note:

When the iSave option is used with the CEXT the iZone system is limited to a maximum of 12 Zones

2.28 Optional equipment for Ethernet Home Automation connection

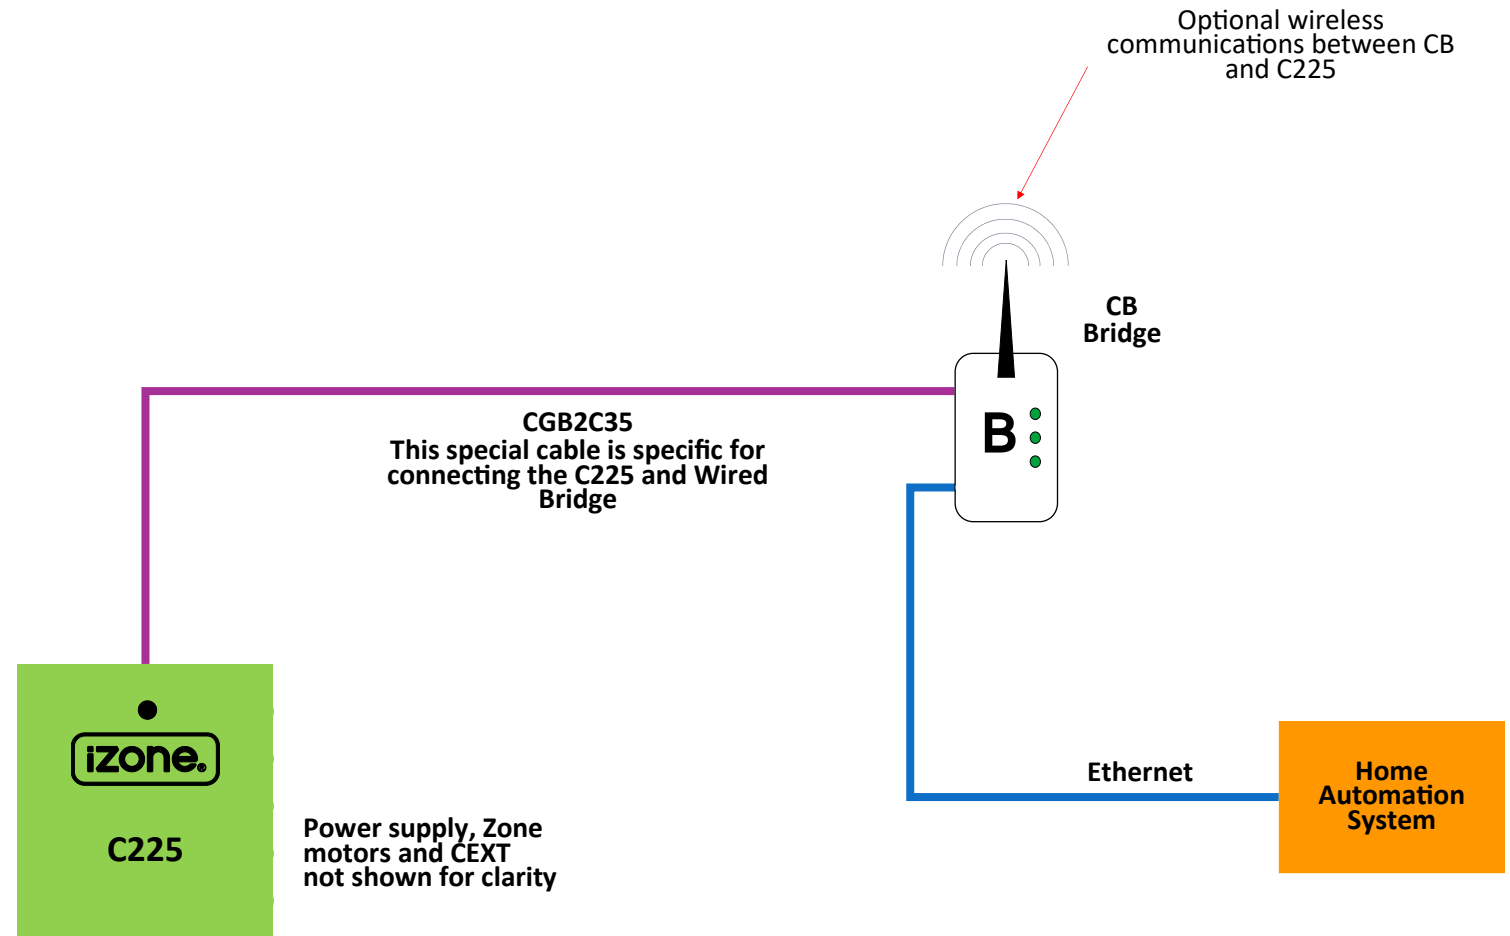

2.29 Integrated iZone A/C, Lights, Irrigation & Security

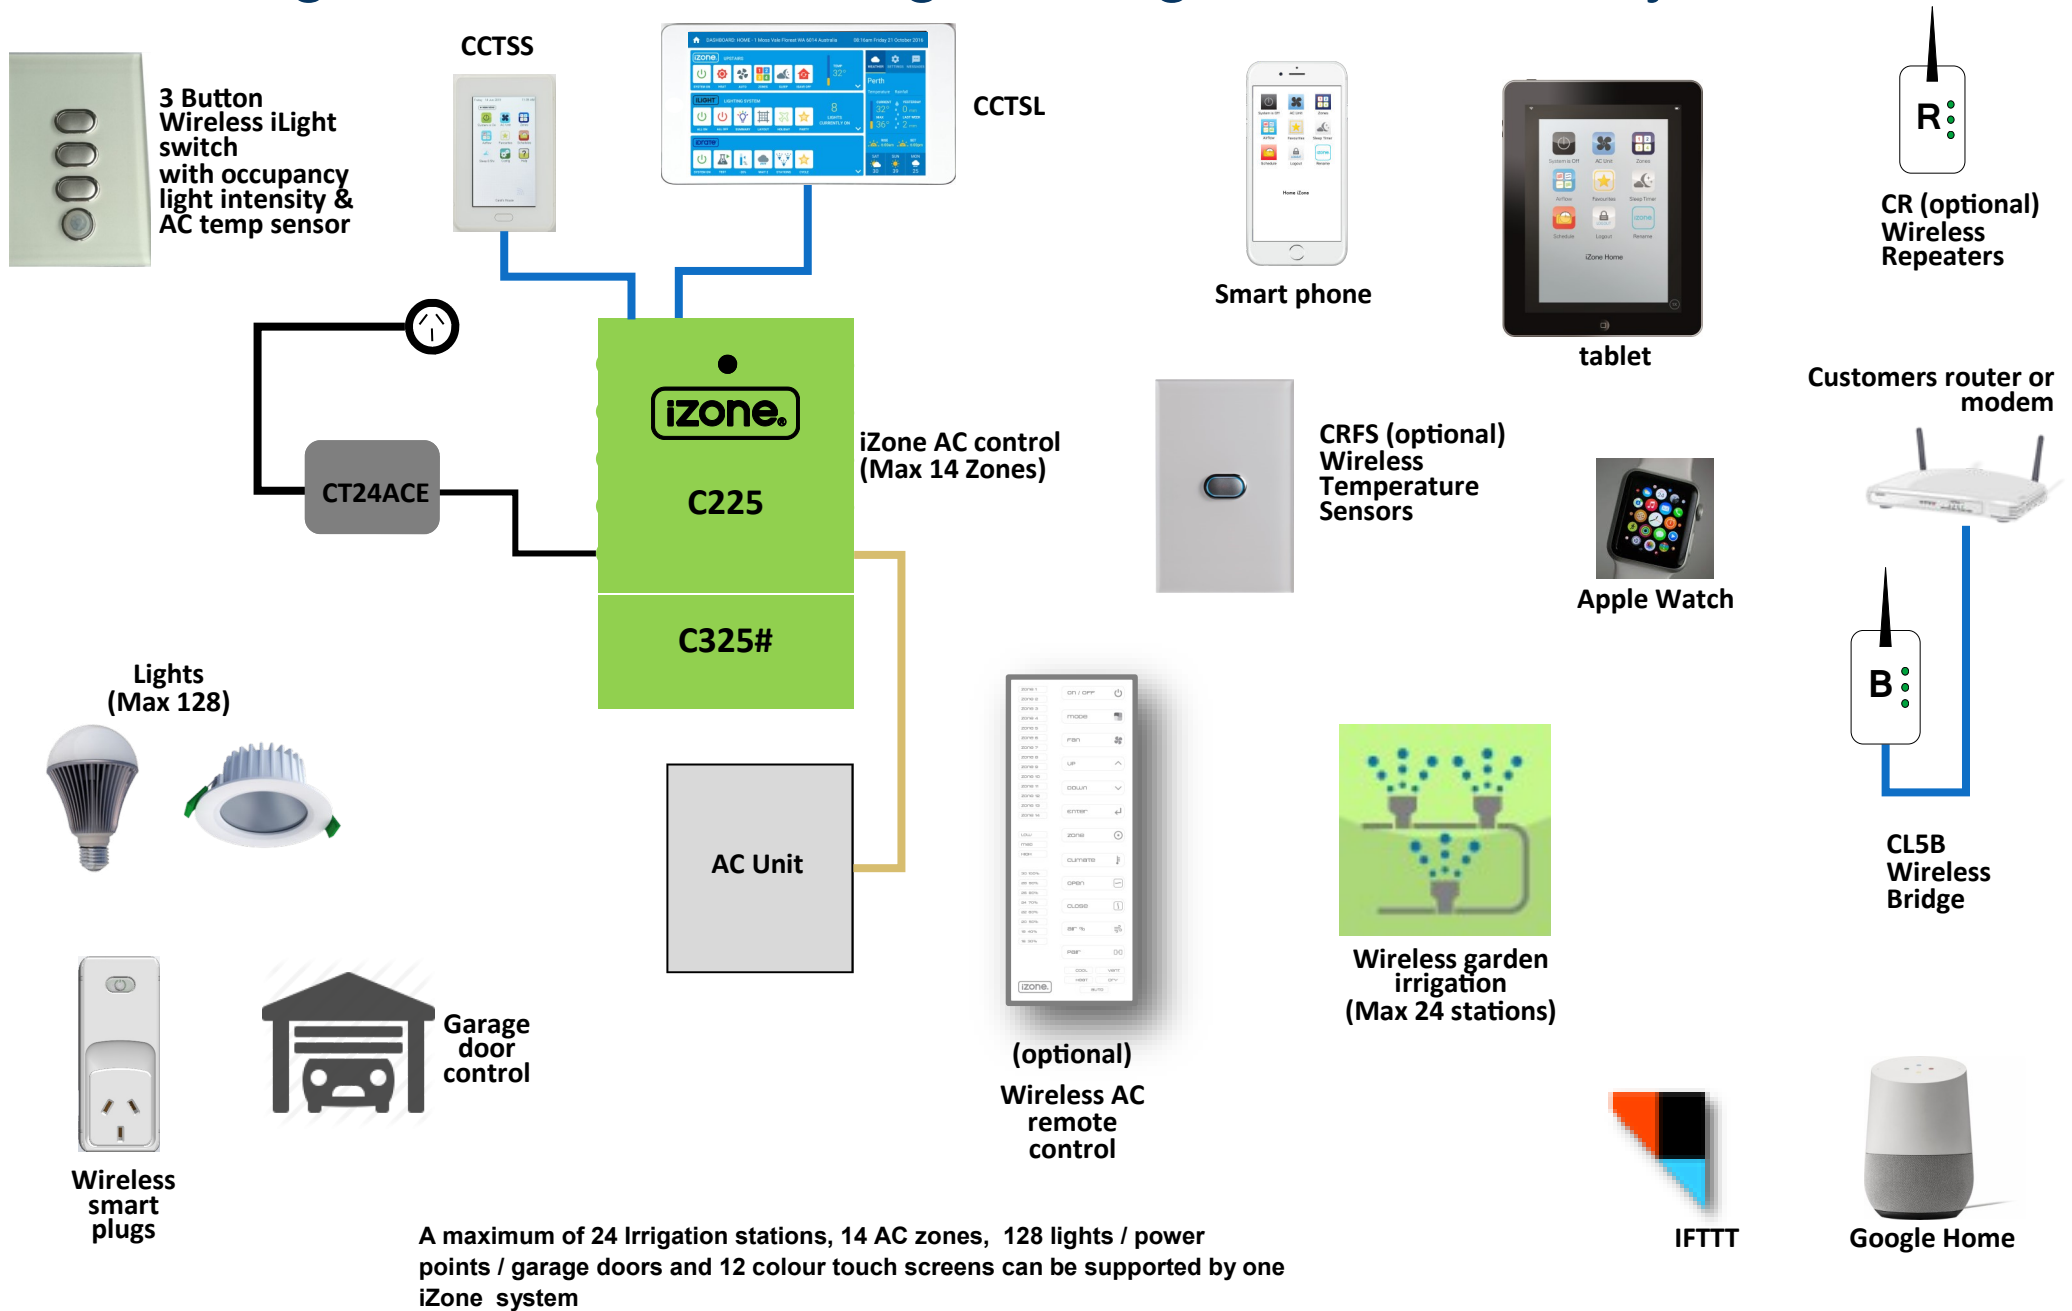

2.30 iZone - Wiring connection to AC units

Unit Make	Connection
Actron*	See detailed instructions on 2.30.1
Braemar	See detailed instructions on 2.30.2
Daikin	Take the P1 / P2 control wire from the fan coil unit and connect it to the iZone C225 / C325D
Fujitsu*	Do not connect the 12V wire to the iZone (Usually Red). Connect the black and white wires from the fan coil unit to iZone C225 / C325F
Gree	See detailed instructions on 2.30.2
Haier	See detailed instructions on 2.30.3
Hitachi	Take the A / B control wire from the fan coil unit and connect it to the iZone C225 / C325H See detailed instructions on 2.30.4
iZone	See detailed instructions on 2.30.5
Kaden	See detailed instructions on 2.30.6
Kelvinator	See detailed instructions on 2.30.7
LG	See detailed instructions on 2.30.8
Midea	See detailed instructions on 2.30.9

Unit Make	Connection
Mitsubishi Electric	Take the Remote Controller (A / B) control wire from the fan coil unit and connect it to the AC Unit Control Cable on the C225 / C325M
MHI	Take the Remote Controller wire from the fan coil unit and connect it to the AC Unit Control Cable on the C225 / C325MHI
Panasonic	Take the A / B control wire from the fan coil unit and connect it to the AC Unit Control Cable on the C225 / C325P
Rinnai	See detailed instructions on 2.30.10
Samsung*	Take the F3 / F4 control wire from the fan coil unit and connect it to the AC Unit Control Cable on the C225 / C325S. This connection requires the correct polarity. See detailed instructions on 2.30.11
Temperzone	See detailed instructions on 2.30.12
Toshiba	Take the A / B control wire from the fan coil unit and connect it to the AC Unit Control Cable on the C225 / C325T
York*	See detailed instructions on 2.30.13
Universal Control Module	The universal control module covers units with standard 24V control. See detailed instructions on 2.31 to 2.31.9

* Certain models only. Check with Airstream for compatibility prior to ordering

2.30.1 iZone - Wiring connection to Actron units

Unit Make

Actron (Ultra Slim low profile series only)

Indoor Model / Outdoor model

LRE-071AS / URC-071AS (7kw)

LRE-100AS / URC-100AS (10kw)

LRE-130AS / URC-140AS (14kw)

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325A to the X / Y in the fan coil unit. (This cable and connector is supplied by Actron). Polarity is critical see Fig (i) (J) & (K) below, for correct connection.

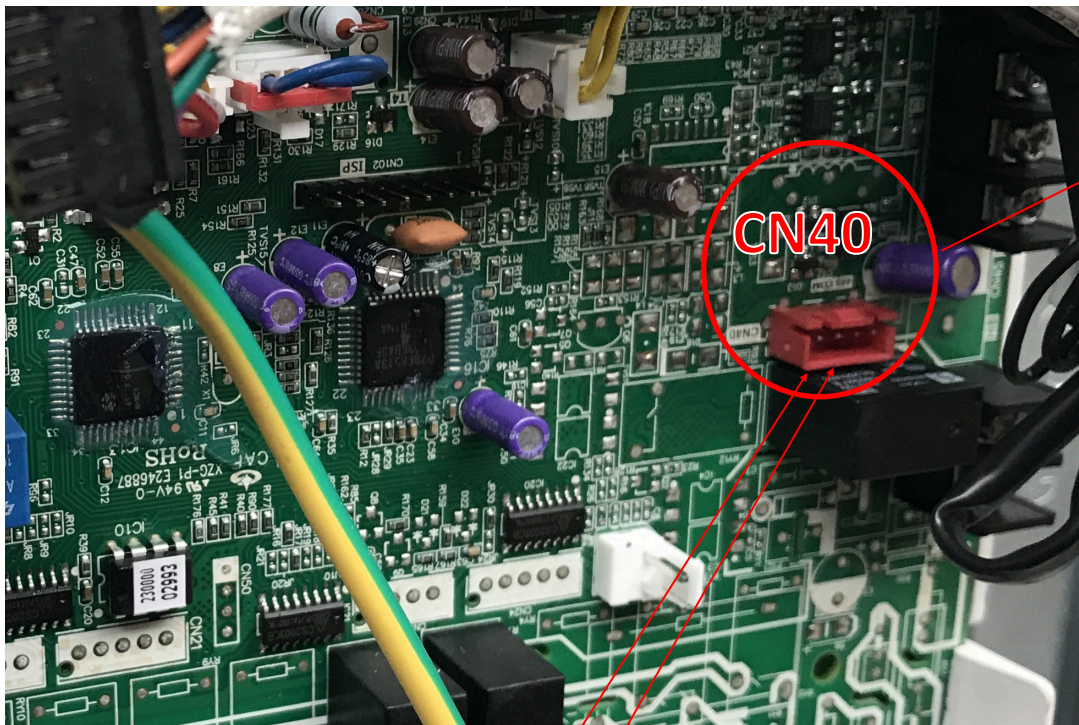


Fig (i) - Indoor fan coil unit terminals


X Y



Fig (J)

Fig (K) - iZone C225 / C325A

Shielded, 2 core,
twisted pair control
cable (not supplied)

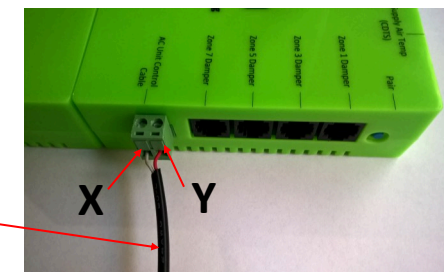

Correct polarity

2.30.2 iZone - Wiring connection to Braemar & Gree units

Unit Make

Connection

Braemar (SDHV series inverter ducted, single phase units only)

1. Connect the AC unit propriety wired controller to the FCU PCB.
2. Enter the service mode parameters.

Gree (Inverter ducted, single phase units only)


3. As per the instructions below set the sensor to return air for all modes
4. Set the iZone control setting
5. Set the required static pressure setting.
6. Cycle the power to the AC unit.
7. Connect a 2 core, twisted pair control cable from the C225 / C325B or C325G X / Y to CN1 in the fan coil unit. (A connector and short cable has been provided with the C325B or C325G but will need to be extended). Polarity is critical see Fig (i) & (j) below, for correct connection.

2.30.2 iZone - Wiring connection to Braemar and Gree units (Continued)

SERVICE MODE PARAMETERS

ENTERING SERVICE MODE

To enter Service Mode, power must be connected to the unit and wired controller, and the unit must be switched 'OFF' at the wall control. Follow the below steps and refer to the function and parameter setting table:-

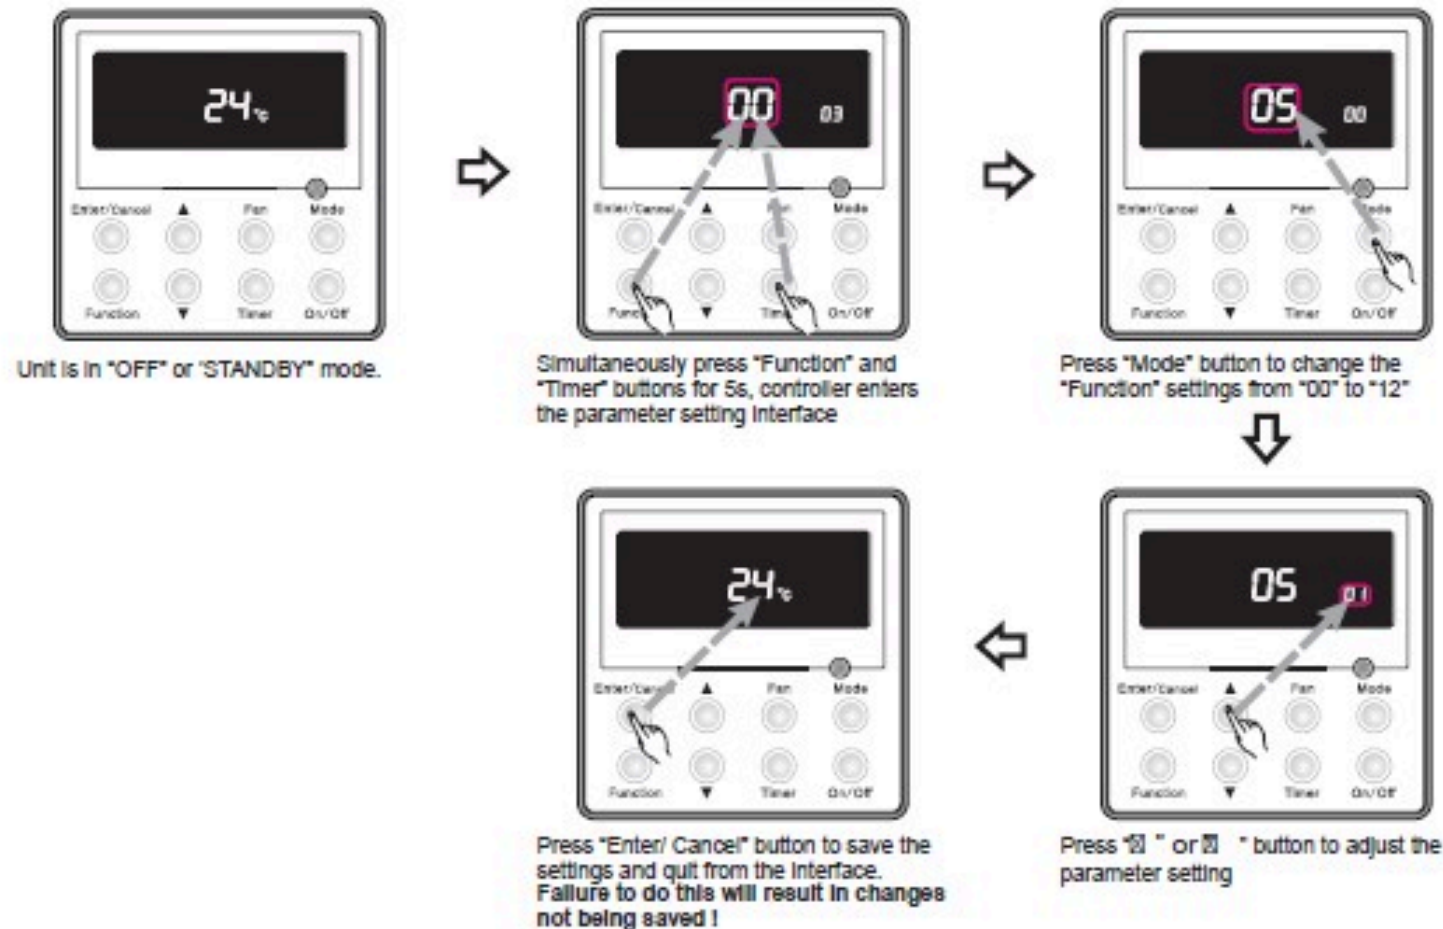

2.30.2 iZone - Wiring connection to Braemar & Gree units (Continued)

SERVICE MODE PARAMETERS			
Function Display	Function Description	Parameter Display	Parameter Description
00	Temp sensor location Ensure set to "01"	01 02 03	Sensor at return air for all modes Sensor at wired control for all modes Sensor at return air for cool, dry & fan modes, at wired control for heat mode
10	iZone control Ensure set to "01"	00 01	Standard control iZone control setting
11	Indoor fan power setting Factory default "05" Adjust to suit installed static. Low static = "01" High static = "09"		ESP (Pa) High Speed Low Speed
		01	10 5 1
		02	20 6 2
		03	30 7 3
		04	40 8 4
		05	50 (default) 9 5
		06	75 10 6
		07	100 11 7
		08	150 12 8
		09	200 13 9

2.30.2 iZone - Wiring connection to Braemar & Gree units (Continued)

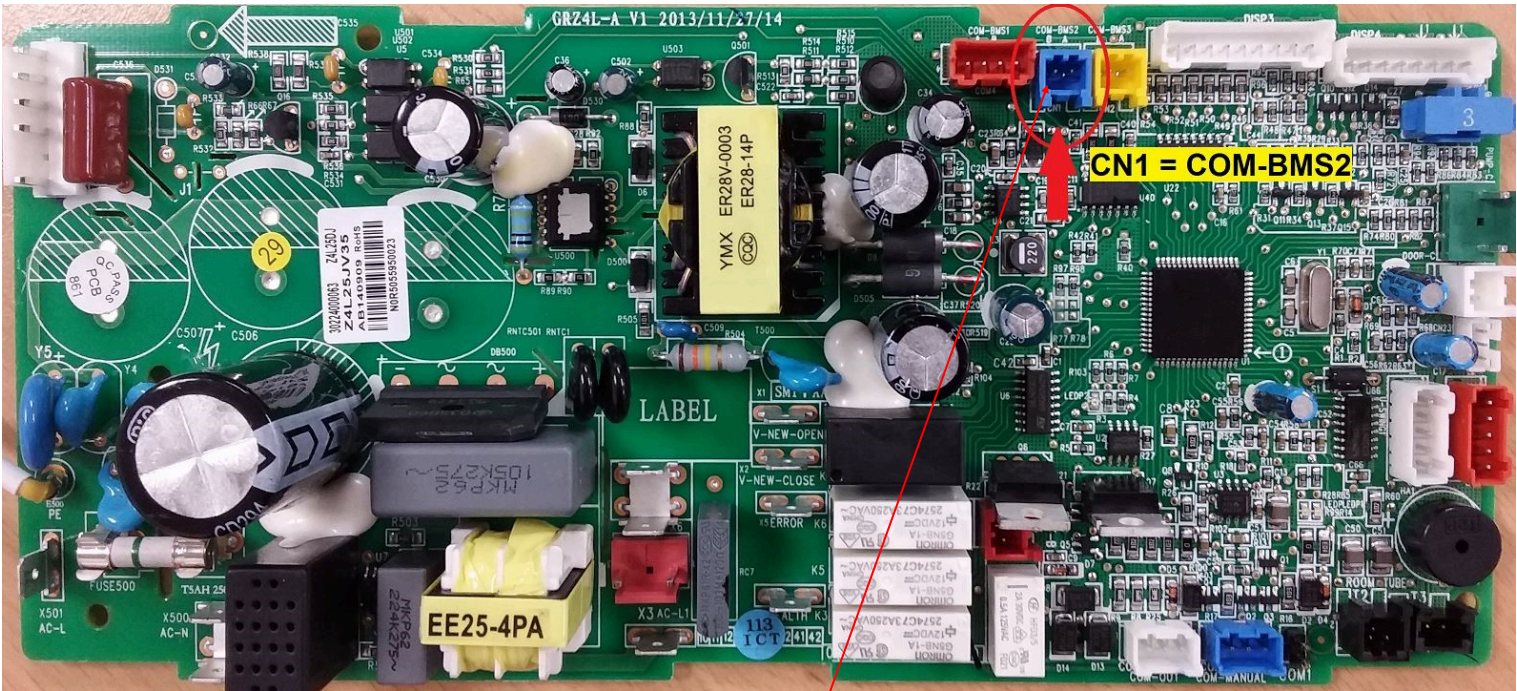



Fig (i) - Indoor fan coil unit terminals

Fig (j) - iZone C225 / C325B/ C325G

Connector and short cable provided



X Y

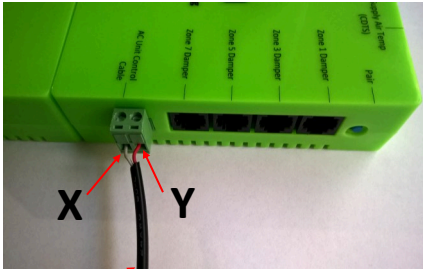

Correct polarity

Shielded, 2 core, twisted pair control cable (not supplied)

2.30.4 iZone - Wiring connection to Fujitsu units (C325F2)

Unit Make

Fujitsu	ARTG45LHTB
ARTC##LATU	ARTG60LHTB
ARTG##LHTA	ARTG54LHTC
ARTG60LDTA	
ARTG24LHTDP	

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325F2 to the 2 & 3 terminals in the Fujitsu FCU. Polarity of this cable is critical—see Figure (N) below. If polarity is connected incorrectly simply reverse the polarity and cycle the power to the AC unit and the iZone controller. Do not use the terminal 1 (12V) when connecting to an iZone system


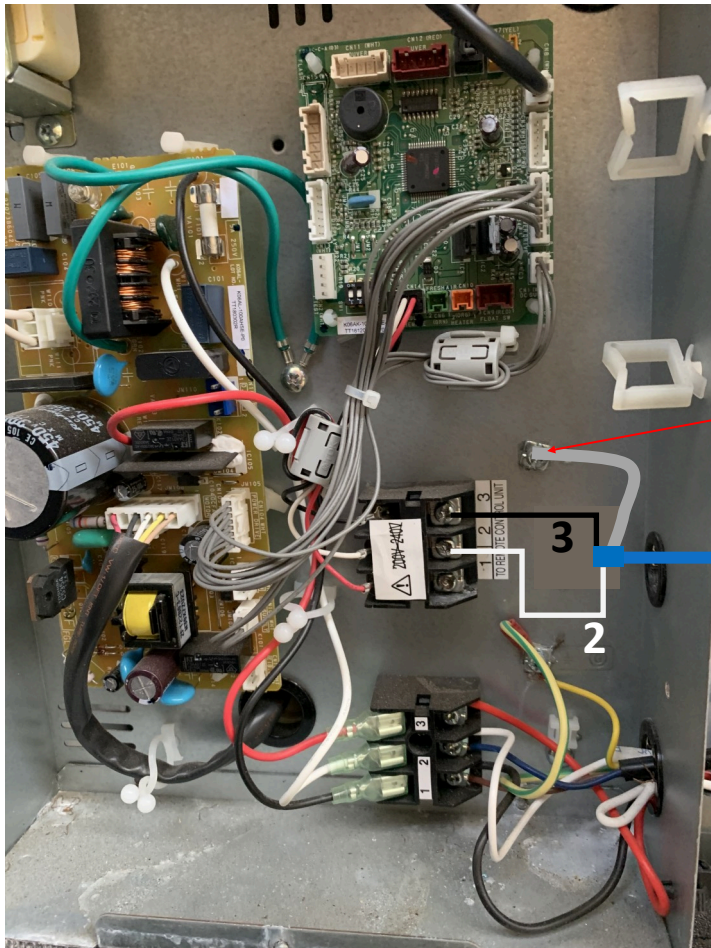


Fig (M) Fujitsu FCU board

Fig (N) - iZone C225 / C325F2

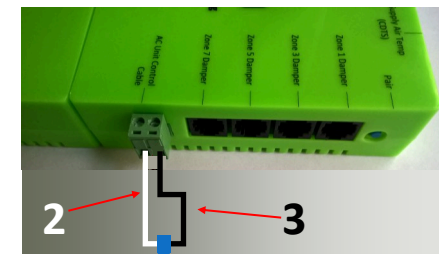

Correct polarity

Shielded, 2 core, twisted pair control cable
(not supplied)

2.30.3 iZone - Wiring connection to Haier units

Unit Make

Haier

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325HI to the A / B terminals on the Haier Interface board YCJ-A002. Connect the interconnecting cable supplied by Haier to CN24 in the fan coil unit of the Haier Interface board YCJ-A002. Set the dipswitches as shown below. Polarity is critical. Haier YR-E17 wired RC must be connected and set to run on return air

Fig (L) Haier Interface board
Model: YCJ-A002 (Fisher & Paykel part no. 51102)

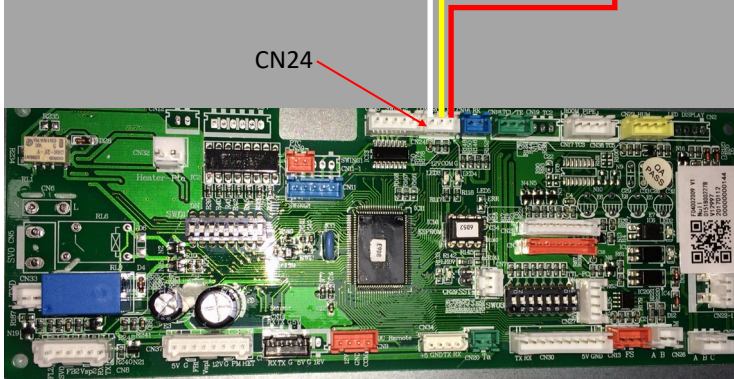
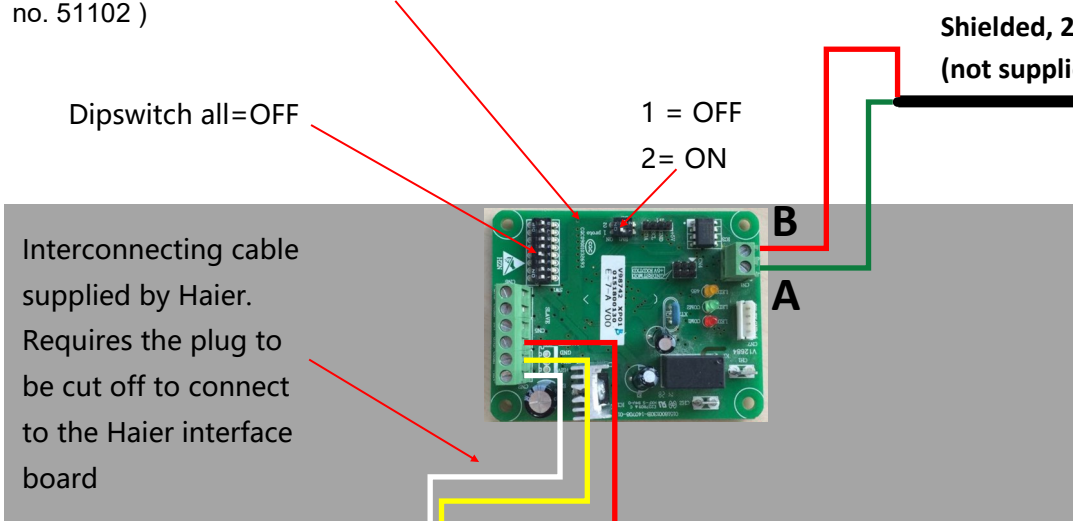


Fig (M) Haier FCU board



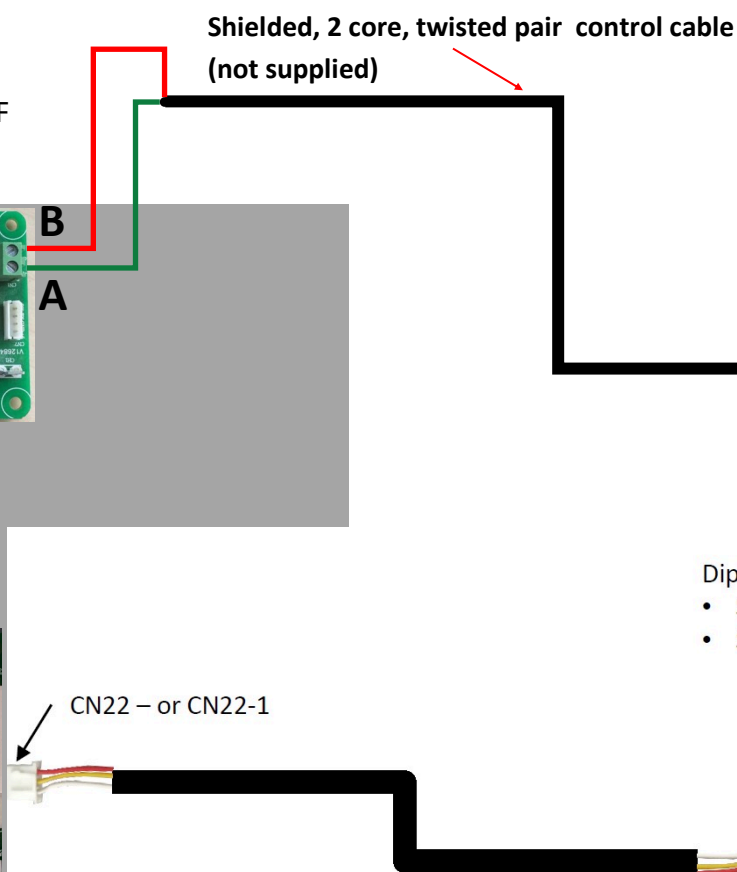


Fig (N) - iZone C225 / C325HI

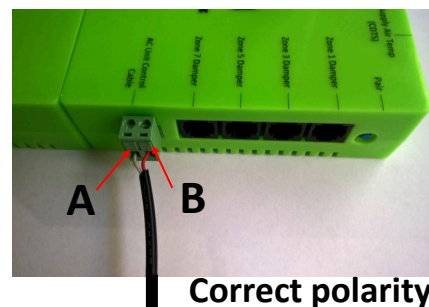

Dip Switch Setting for YR-E17 Wired Controller

- SW03 OFF (default) for sensing inside the wired RC
- SW03 ON for sensing from return air

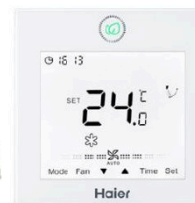

Haier YR-E17 Wired RC

2.30.4 iZone - Wiring connection to Hitachi units

Unit Make

Hitachi

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325H to the A / B terminals and earth in the fan coil unit. (This cable is supplied by the installer). Polarity is not critical see Fig (H) for correct connection.

Indoor Unit

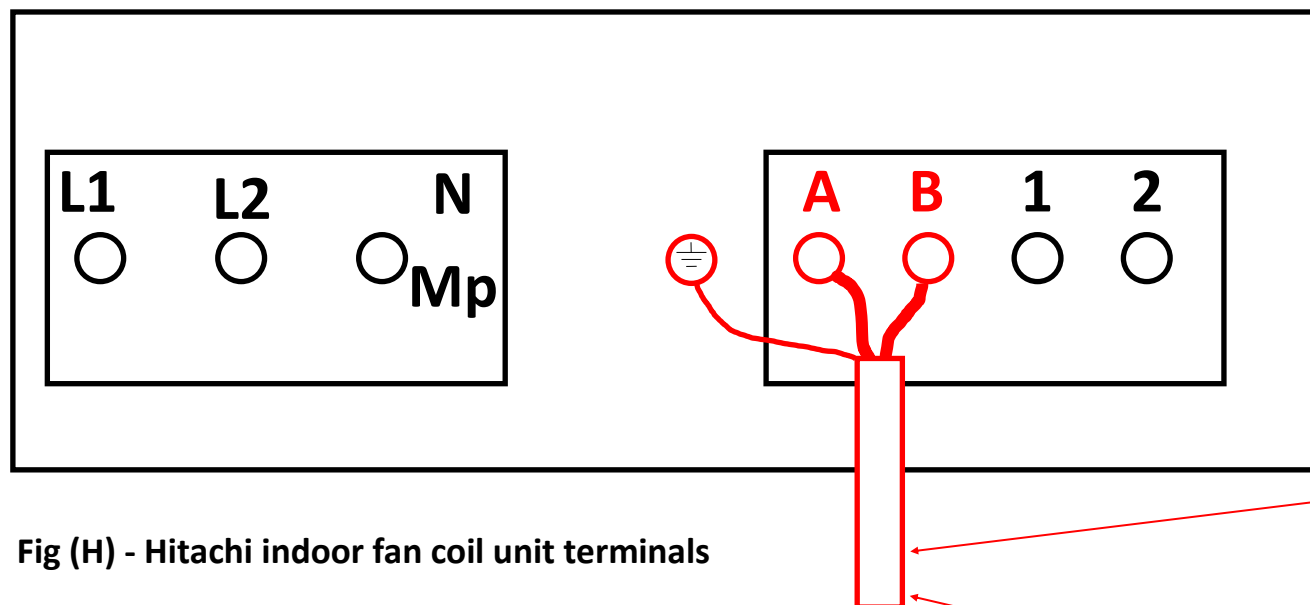


Fig (H) - Hitachi indoor fan coil unit terminals

To iZone C325

Shielded Twisted Pair cable
(Supplied by the Installer)
0.75mm². This cable does
not need any polarity. Do not
apply voltage to this cable.

2.30.5 iZone - Wiring connection to iZone Ducted units

Unit Make

iZone

Connection

1. Connect supplied, 2 core, twisted pair control cable from the C225 / C325i to the X / Y in the fan coil unit. Polarity is critical see Fig (i) (J) & (K) below, for correct connection.

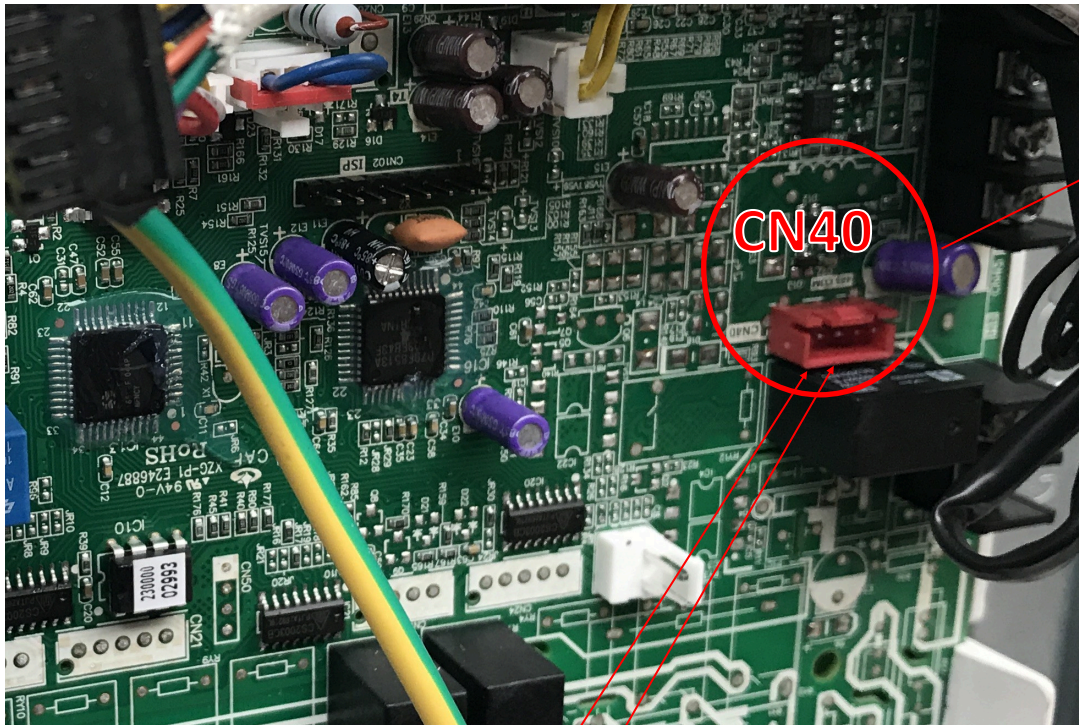


Fig (i) - Indoor fan coil unit terminals


X Y



Fig (J)

Fig (K) - iZone C225 / C325i

Shielded, 2 core,
twisted pair control
cable

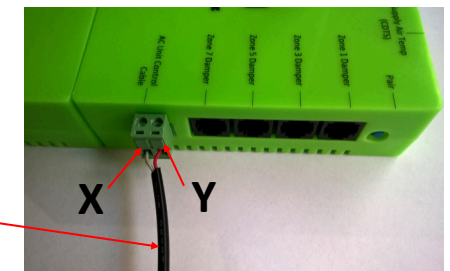

Correct polarity

2.30.6 iZone - Wiring connection to Kaden units

Unit Make

Kaden (Metalflex)

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325KAD to the X / Y in the fan coil unit. Polarity is critical see Fig (i) (J) & (K) below, for correct connection.

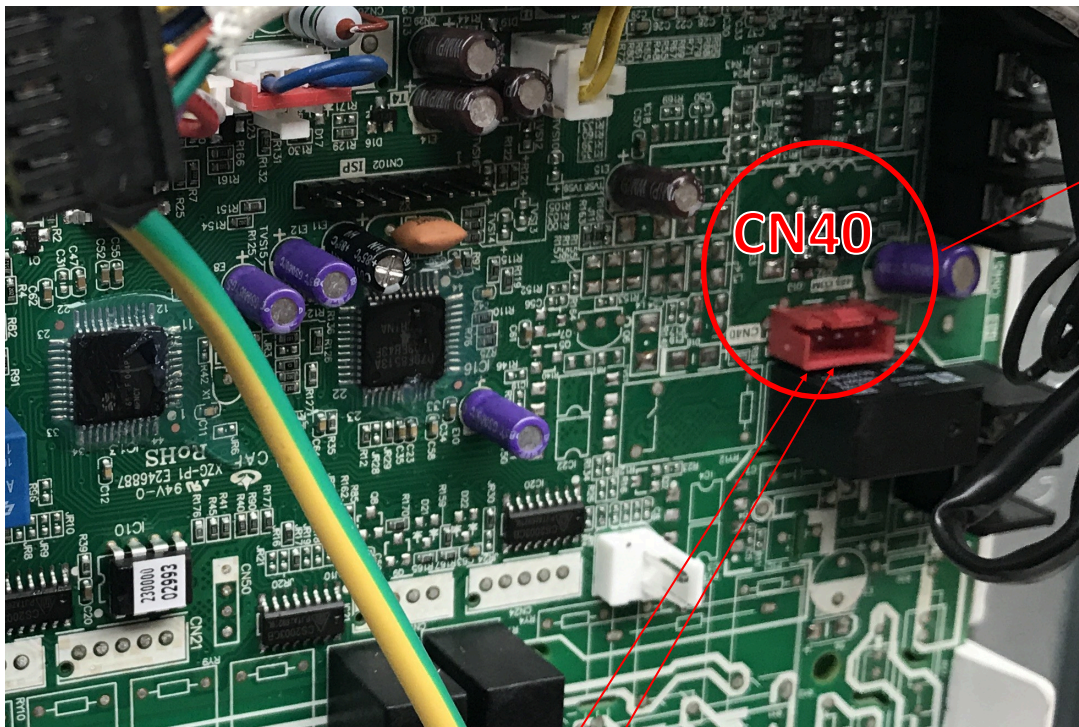


Fig (i) - Indoor fan coil unit terminals


X Y



Fig (J)

Fig (K) - iZone C225 / C325KAD

Shielded, 2 core,
twisted pair control
cable

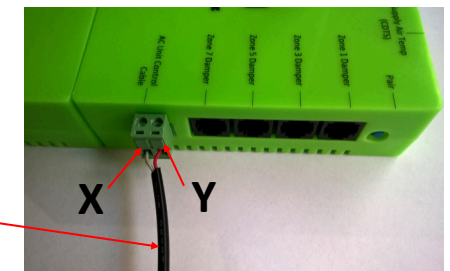

Correct polarity

2.30.7 iZone - Wiring connection to Kelvinator units

Unit Make

Kelvinator

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325KEL to the X / Y in the fan coil unit. Polarity is critical see Fig (i) (J) & (K) below, for correct connection.

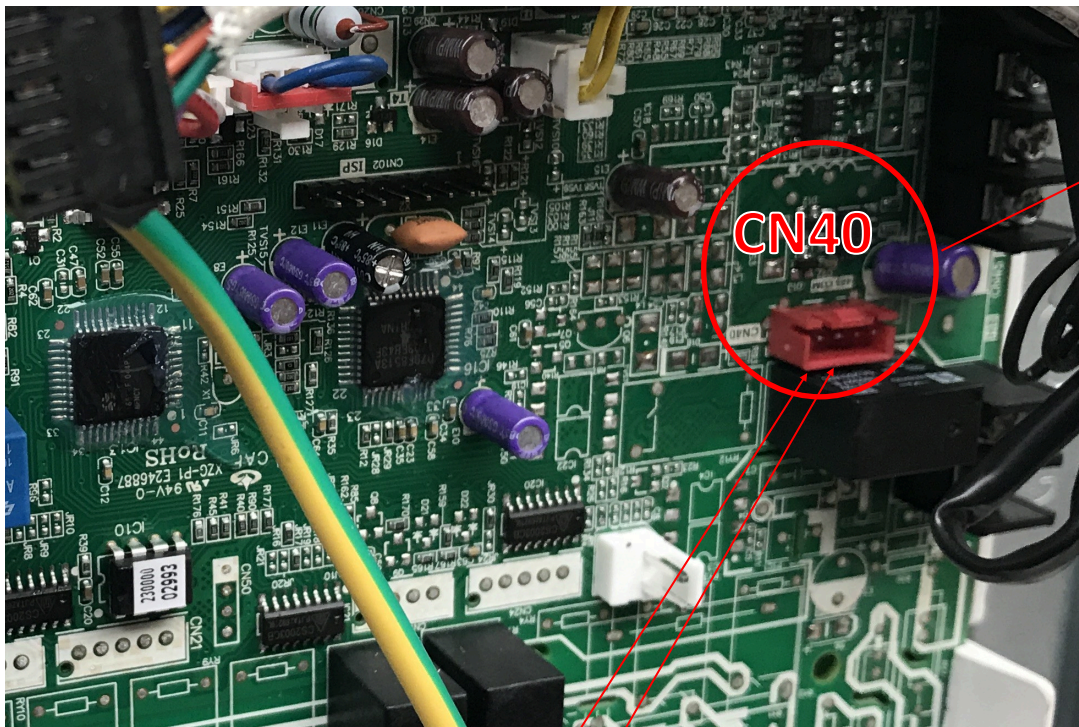


Fig (i) - Indoor fan coil unit terminals


X Y



Fig (J)

Fig (K) - iZone C225 / C325KEL

Shielded, 2 core,
twisted pair control
cable

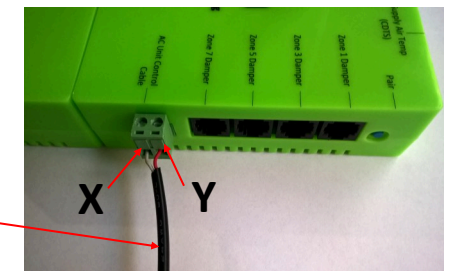

Correct polarity

2.30.8 iZone - Wiring connection to LG units (LG2 Interface)

Unit Make

LG

Connection

1. Connect the LG supplied cable from the fan coil unit to the iZone CCPU module. Only use the black and yellow cables. Polarity is not critical.



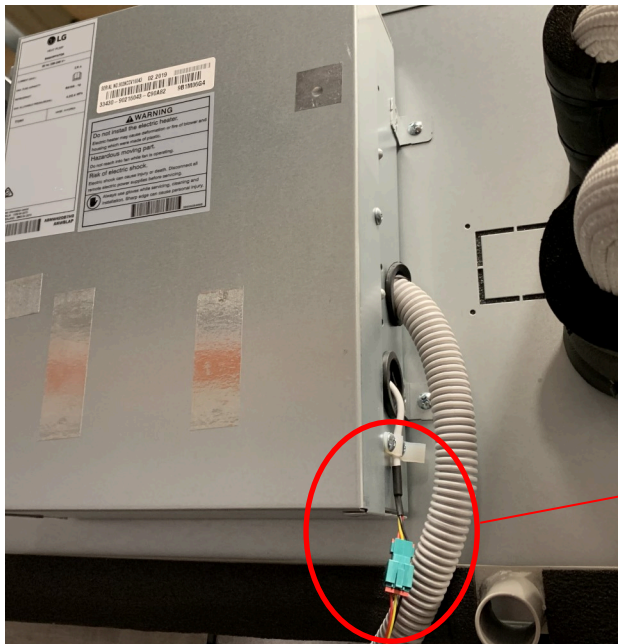


Fig (C) - LG Fan coil unit use black and yellow wires to connect to iZone

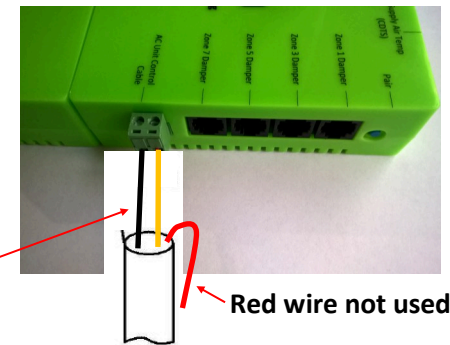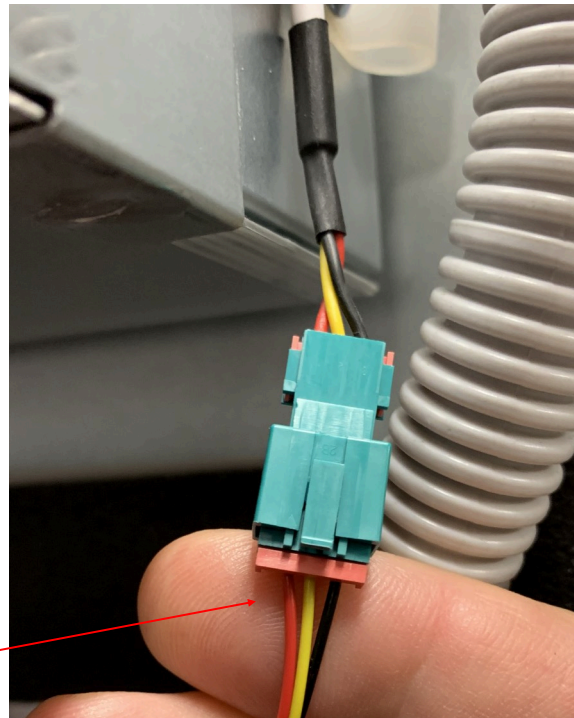

LG control cable (not supplied). Connect black & yellow wires only

Fig (D) - iZone C225 / C325L2

2.30.8 iZone - Wiring connection to LG units

Unit Make

LG

LG condensing unit must be supplied with an optional PI485 Gateway (M) board in the condensing unit. LG dipswitch settings are as follows:

- ⇒ Dip switches 1 and 4 **ON**
- ⇒ All others are **OFF**

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325L to the PI485 Gateway (M) board in the condensing unit. (This cable is supplied by the installer). Polarity is critical see Fig (C) & (D) for correct connection.

Shielded, 2 core,
twisted pair control
cable (not supplied)

B

A

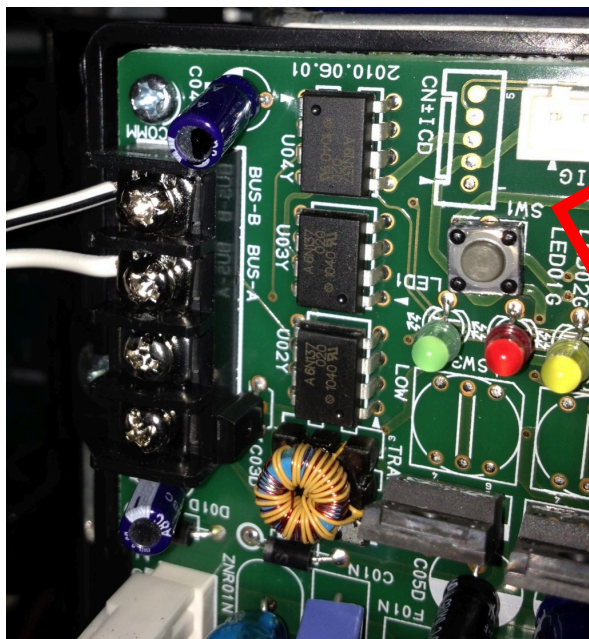


Fig (C) - LG PI485 Gateway (M) board in condensing unit

Superseded
See LG2 interface

Shielded, 2 core,
twisted pair control
cable (not supplied)

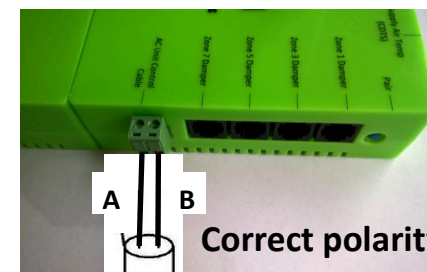


Fig (D) - iZone C225 / C325L

2.30.9 iZone - Wiring connection to Midea units

Unit Make

Midea

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325MID to the X / Y in the fan coil unit. (This cable and connector is supplied by Midea). Polarity is critical see Fig (i) (J) & (K) below, for correct connection.

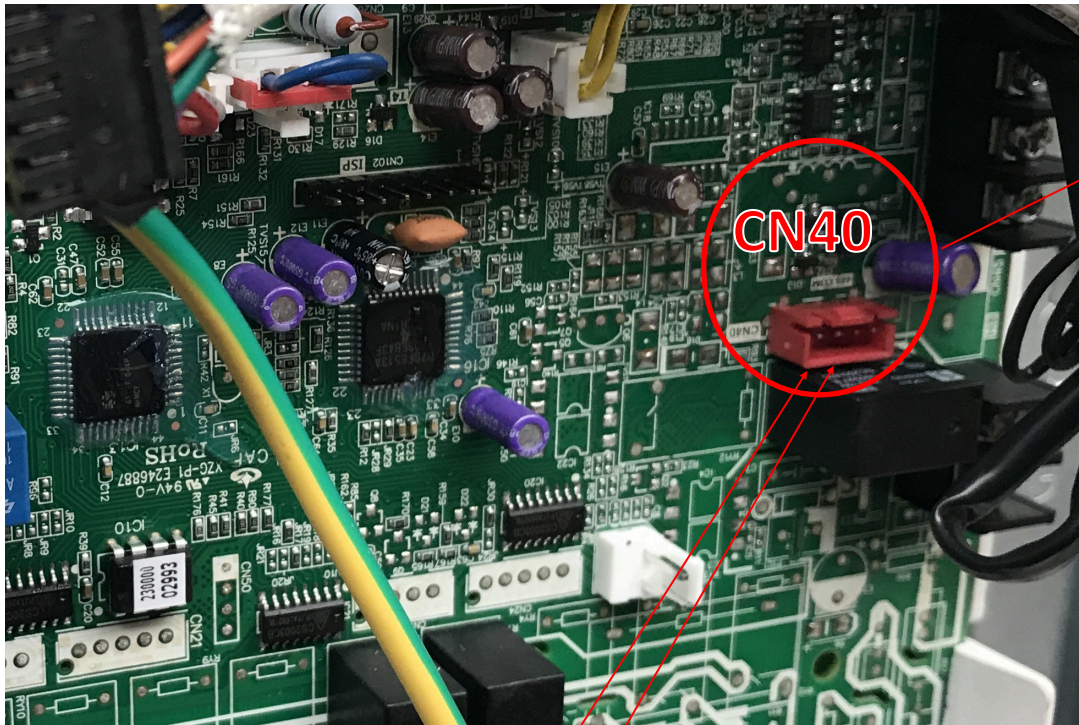


Fig (i) - Indoor fan coil unit terminals


X Y



Fig (J)

Fig (K) - iZone C225 / C325MID

Shielded, 2 core,
twisted pair control
cable (not supplied)

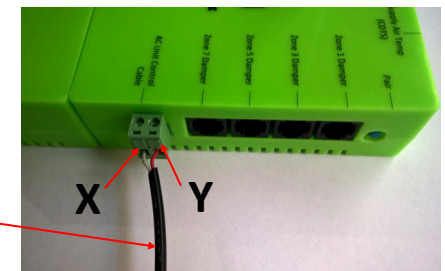

Correct polarity

2.30.10 iZone - Wiring connection to Rinnai units

Unit Make

Rinnai

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325R to the X / Y in the fan coil unit. (This cable and connector is supplied by Rinnai). Polarity is critical see Fig (i) (J) & (K) below, for correct connection.
2. .

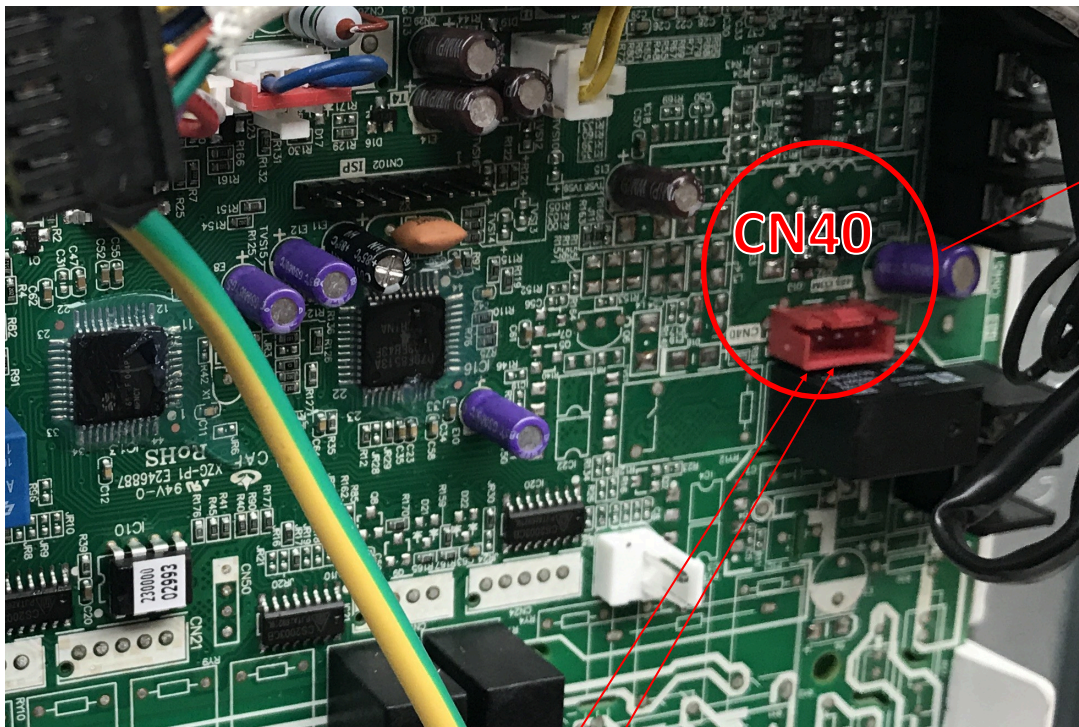


Fig (i) - Indoor fan coil unit terminals

X Y


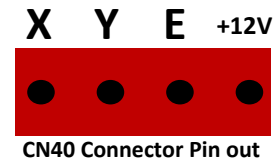


Fig (J)

Fig (K) - iZone C225 / C325R

Shielded, 2 core,
twisted pair control
cable (not supplied)

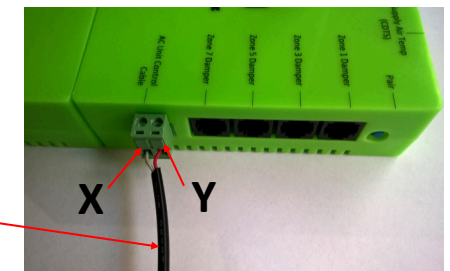

Correct polarity

2.30.11 iZone - Wiring connection to Samsung units

Unit Make

Samsung

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325S to the F3 / F4 in the fan coil unit. (This cable is supplied by the installer). Polarity is critical see Fig (F) & (G) below for correct connection.


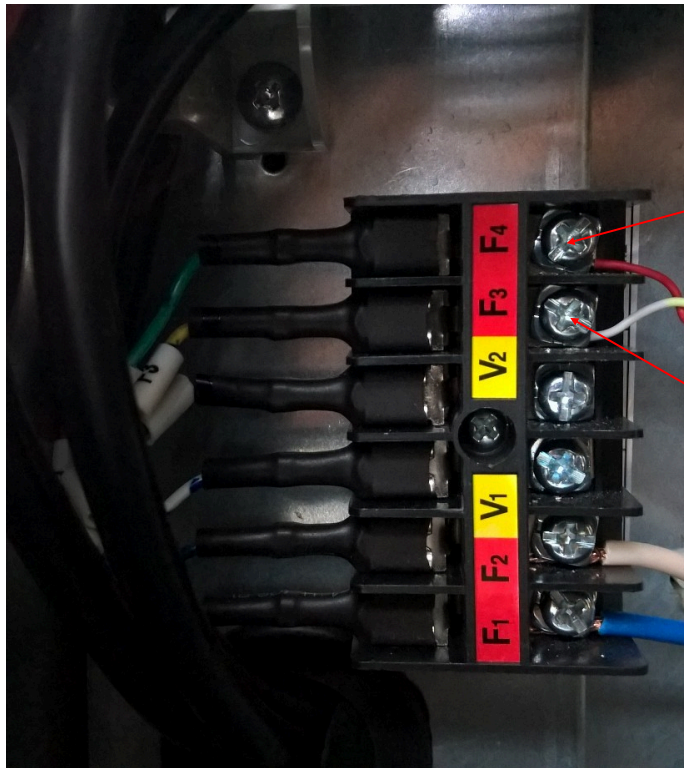


Fig (F) - Samsung indoor fan coil unit terminals

F4

Shielded, 2 core,
twisted pair control
cable (not supplied)

F3

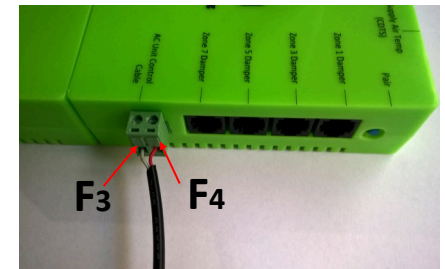

Shielded, 2 core,
twisted pair control
cable (not supplied)

Correct polarity

Fig (G) - iZone C225 / C325S

2.30.12 iZone - Wiring connection to Temperzone units

Unit Make

Connection

Temperzone

1. Connect a shielded, 2 core, twisted pair control cable from the C225 to the UC8 board in the condensing unit. (This cable is supplied by the installer). Polarity is critical see Fig A & B for correct connection.
2. Ensure the dip switches in the condensing unit are set correctly for the installed compressor type (digital / fixed speed) and fan speed control. Refer to the Temperzone service manual.


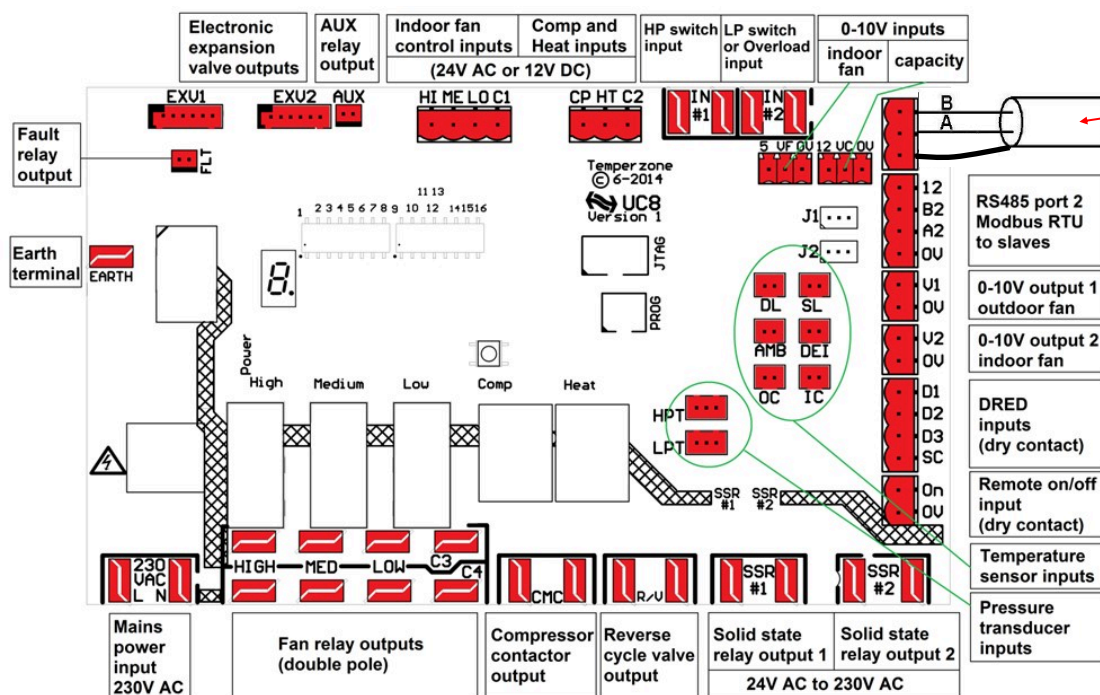


Fig (A) - Temperzone UC8 outdoor board

Shielded, 2 core, twisted pair control cable (not supplied)

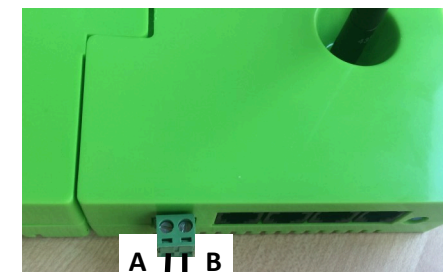

Correct polarity

Shielded, 2 core, twisted pair control cable (not supplied)

Fig (B) - iZone C225 / C325TZ

2.30.13 iZone - Wiring connection to York units

Unit Make

York

Connection

1. Connect a shielded, 2 core, twisted pair control cable from the C225 / C325Y to the X / Y in the fan coil unit. (This cable and connector is supplied by York). Polarity is critical see Fig (i) (J) & (K) below, for correct connection.

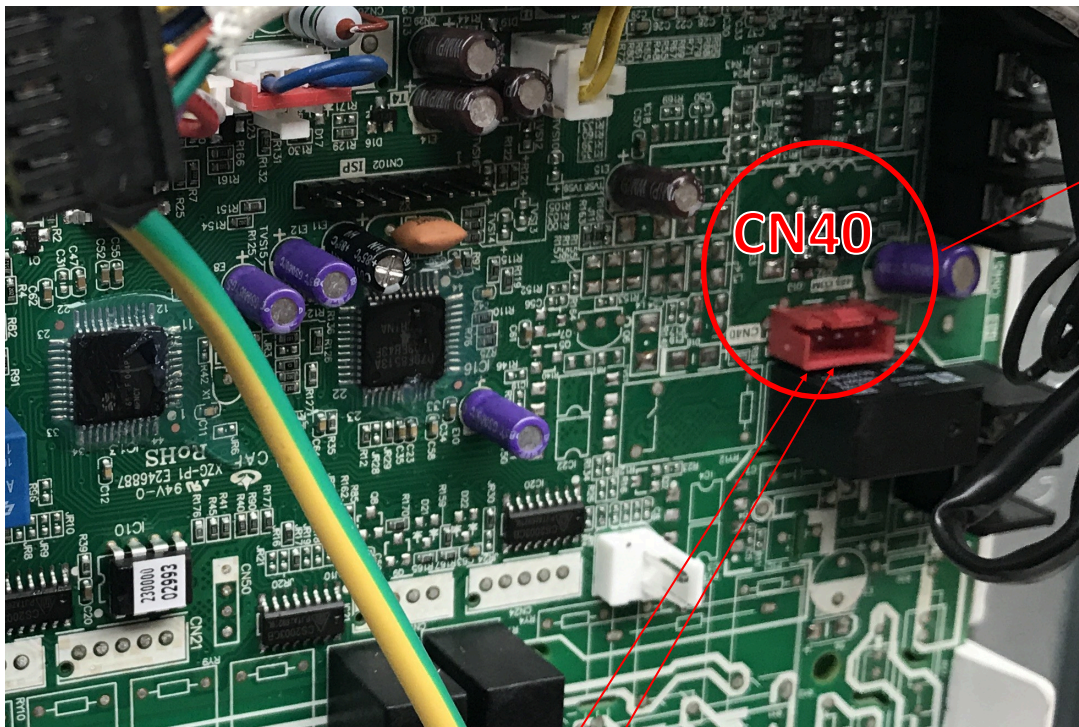


Fig (i) - Indoor fan coil unit terminals

X Y


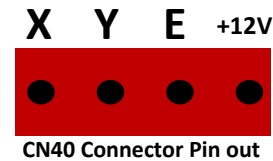


Fig (J)

Fig (K) - iZone C225 / C325Y

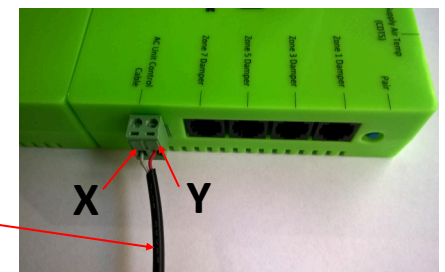

Correct polarity

2.31 iZone - Wiring connection to Universal Control Module

Unit Make

Units that accept 24V control signals:

Gas Heating Options

- Gas Heating thermostat only
- 1 Stage Gas Heat + 1 x Fan Speed
- 1 Stage Gas Heat + 1 Stage Cool + 1 x Fan Speed
- 2 Stage Gas Heat + 1 Stage Cool + 1 x Fan Speed
- 2 Stage Gas Heat + 2 Stage Cool + 1 x Fan Speed

Reverse Cycle Options

- 1 Stage R/C + 1 x Fan Speed
- 1 Stage R/C + 3 x Fan Speed
- 1 Stage R/C + Aux Heating + 1 x Fan Speed
- 2 Stage R/C + Aux Heating + 1 x Fan Speed


Connection

1. Connect cables as shown on the wiring diagram for the respective option. (24V maximum)
2. Configure the correct system type on the touch screen.
3. Configure the Run on timer, anti-cycle timer, 2nd stage offset, 2nd stage delay and fan control on the touch screen, as applicable
4. Test for correct operation.

2.31.1 iZone - Wiring connection to Universal Control Module

Gas heating thermostat only

Configure required functionality via touch screen as follows:
Go to *Config > AC Unit Setup > Next > press edit pencil > Select :
Gas Heating thermostat only*

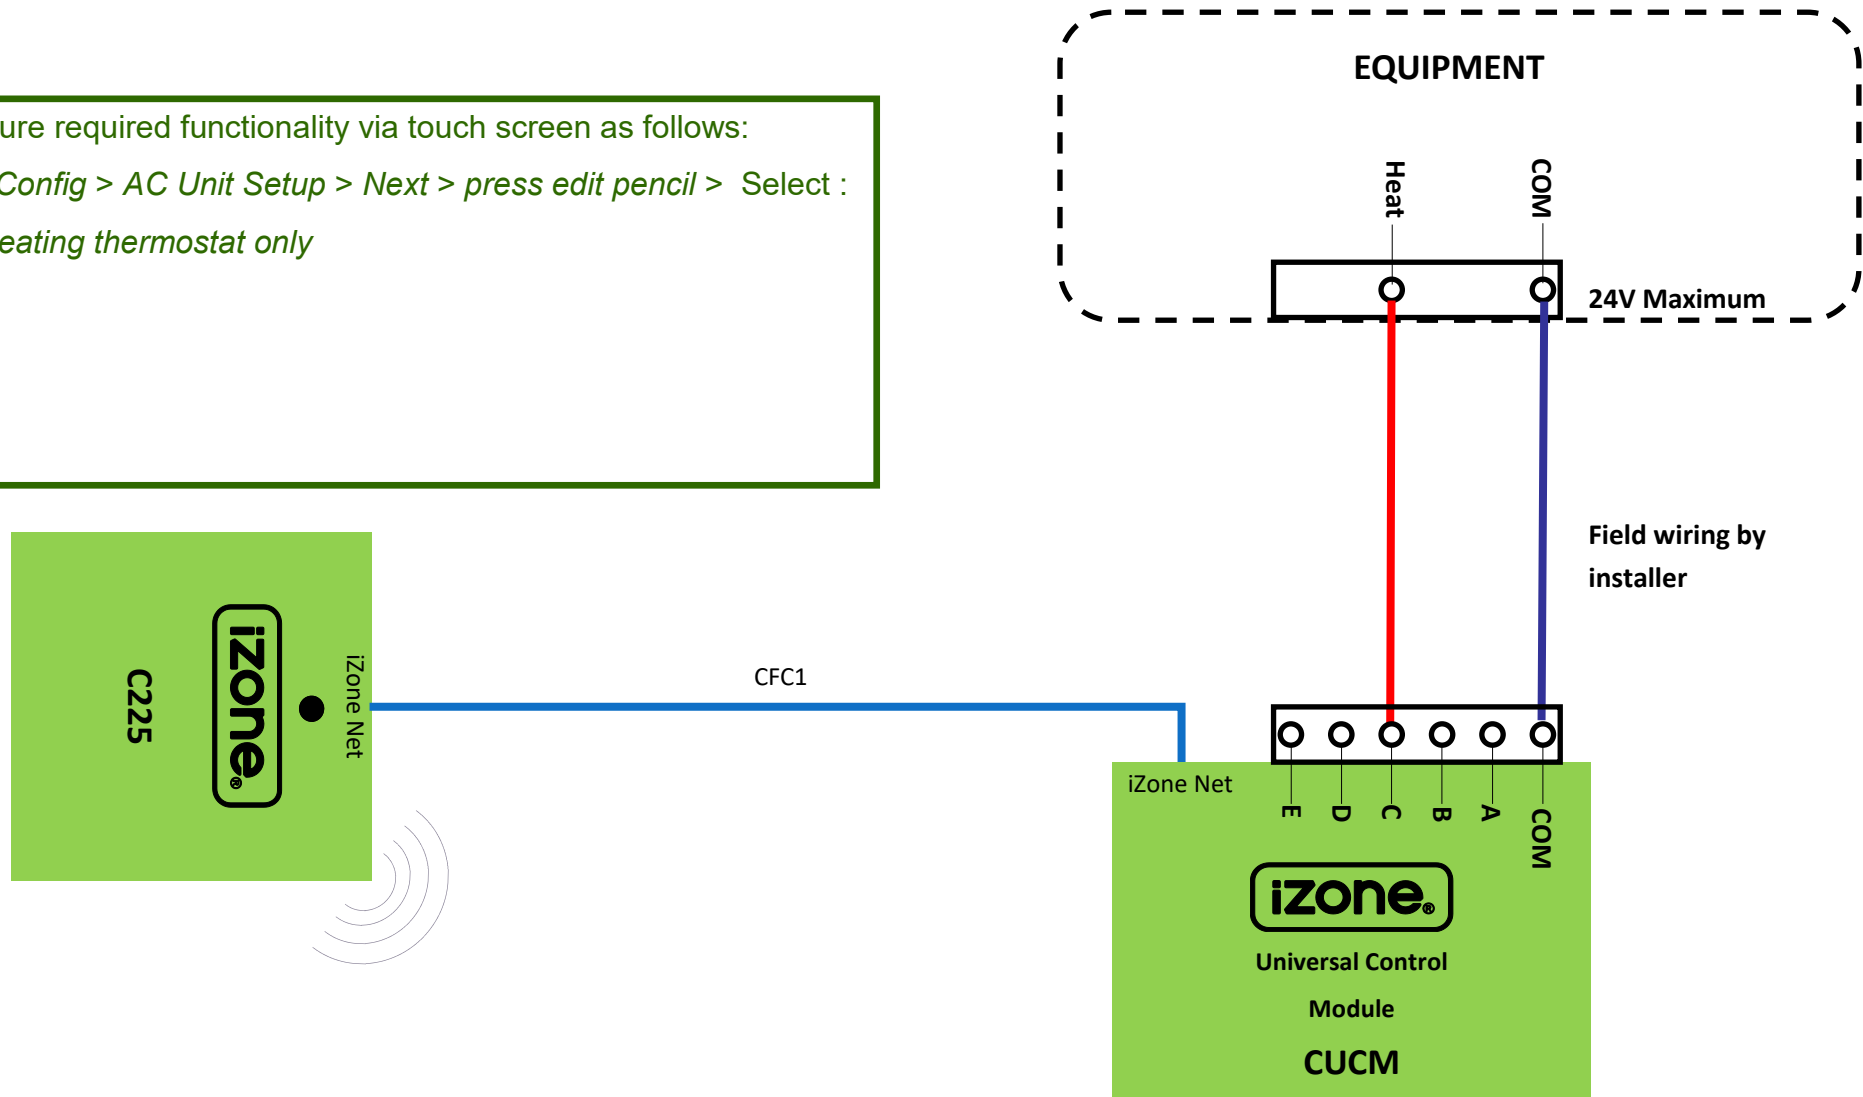


2.31.2 iZone - Wiring connection to Universal Control Module

1 Stage Gas Heating + 1 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select : 1 Stage Gas Heat + 1 x Fan Speed*

Press *Next > Next*. Adjust *Minimum run time and Anti-cycle time* as required . Setup *Fan control*

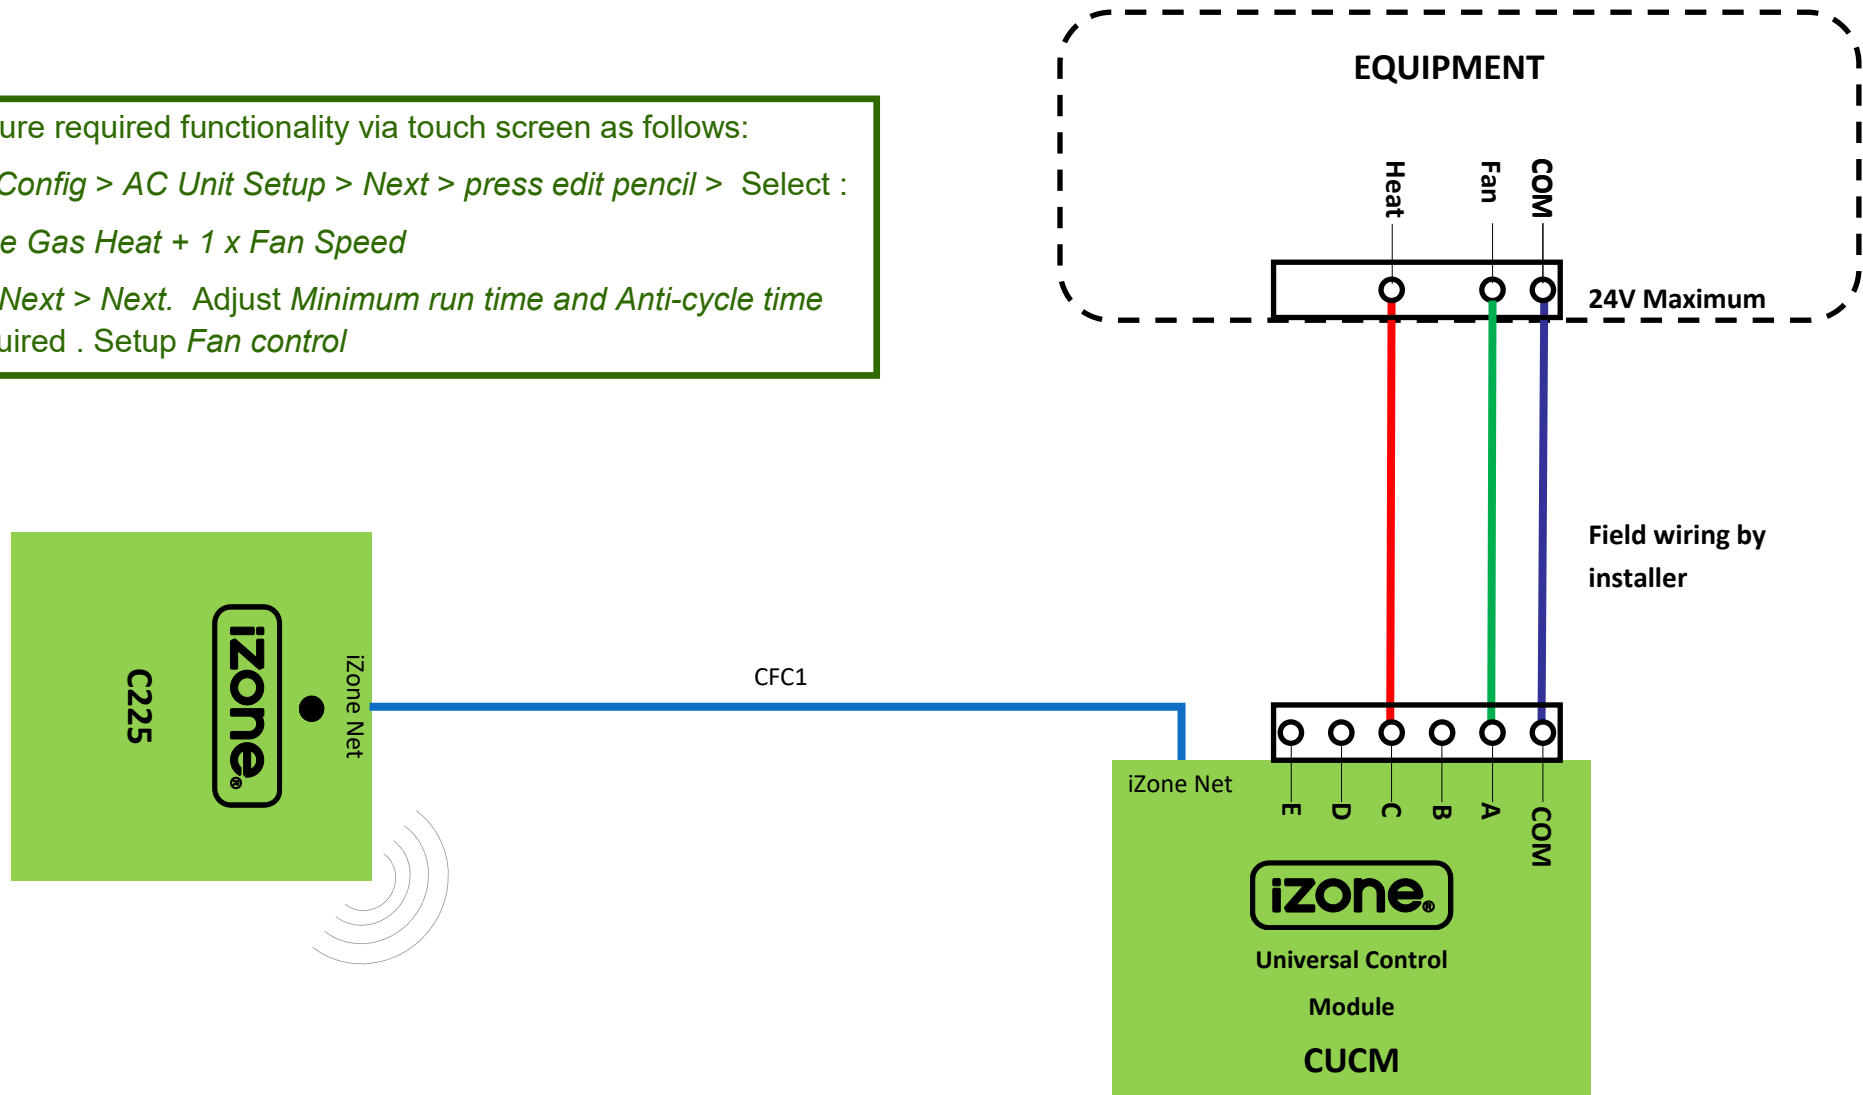


2.31.3 iZone - Wiring connection to Universal Control Module

1 Stage Gas Heating + 1 Stage Cooling + 1 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select :
1 Stage Gas Heat + 1 Stage Cool + 1 x Fan Speed*

Press *Next > Next*. Adjust *Minimum run time and Anti-cycle time*
as required . Setup *Fan control*

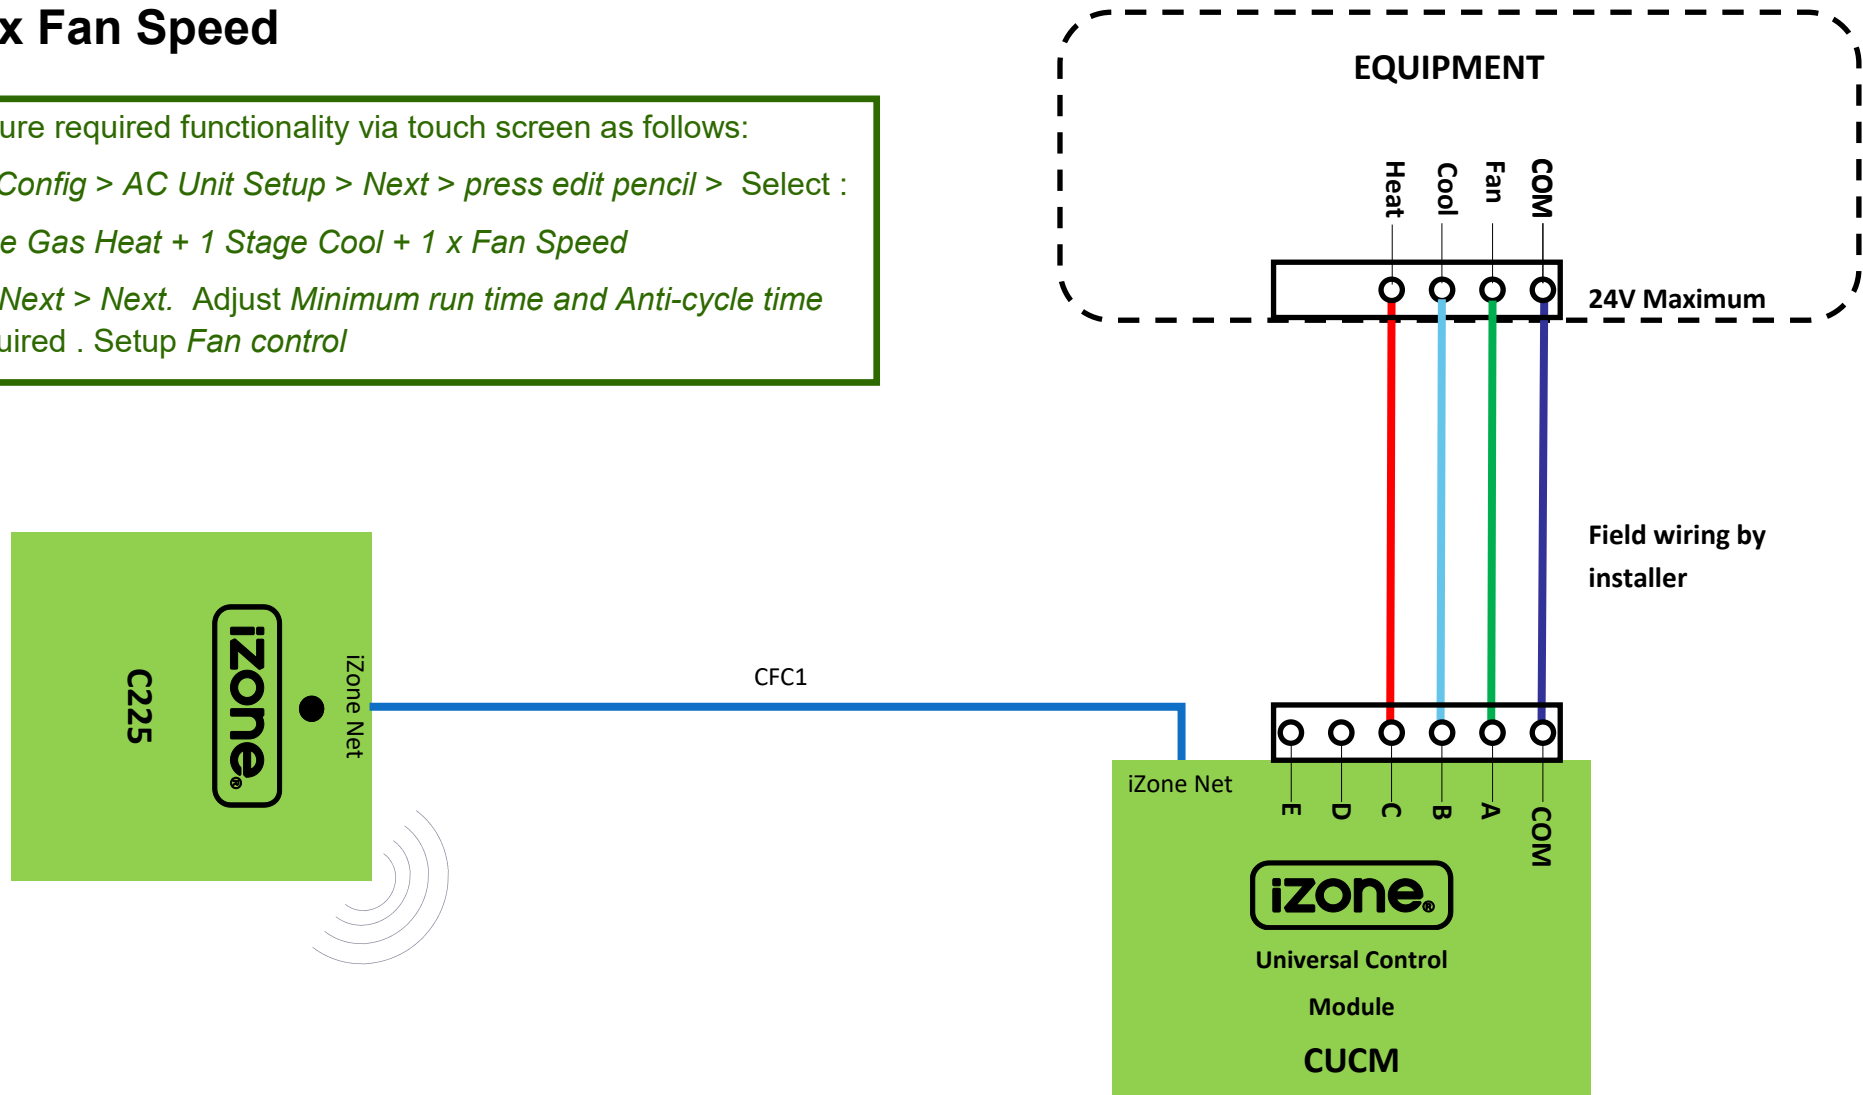


2.31.4 iZone - Wiring connection to Universal Control Module

2 Stage Gas Heating + 1 Stage Cooling + 1 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select :
2 Stage Gas Heat + 1 Stage Cool + 1 x Fan Speed*

Press *Next > Next*. Adjust *Minimum run time and Anti-cycle time*
as required . Setup *Fan control*

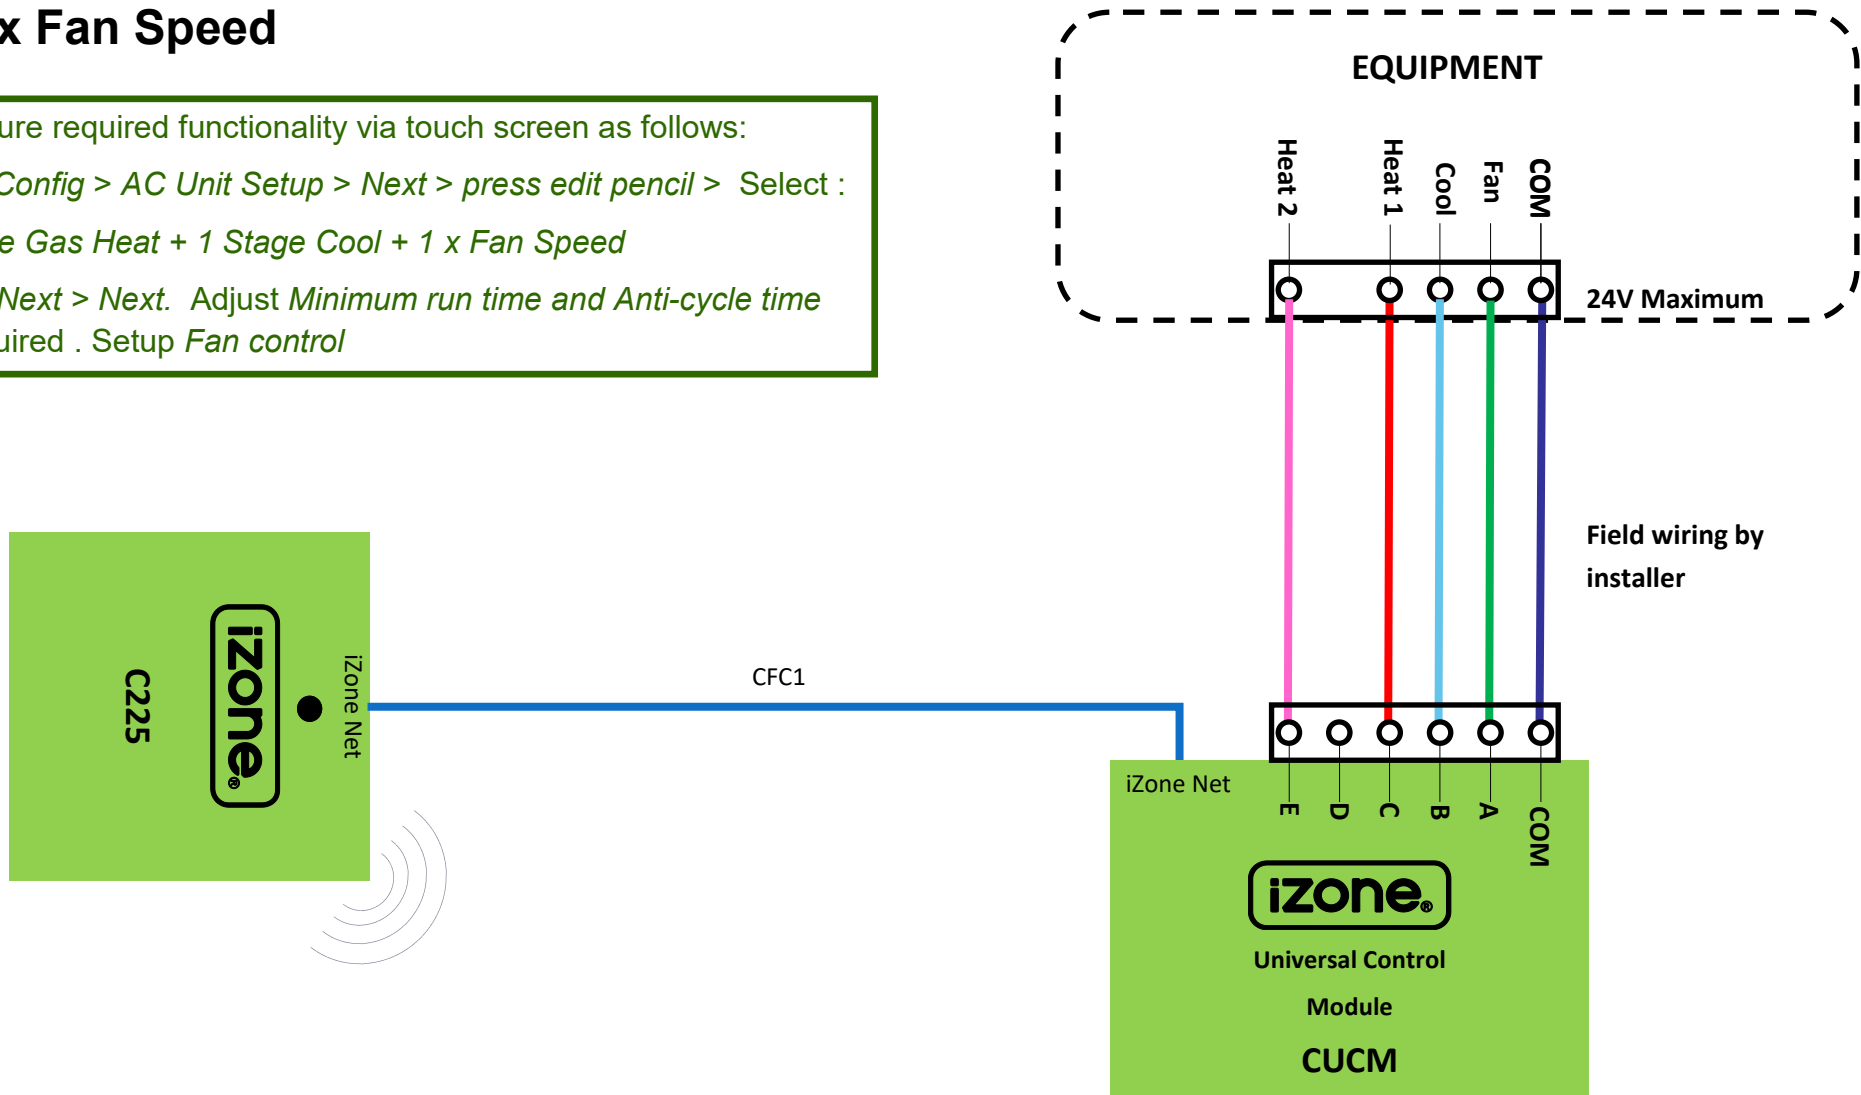


2.31.5 iZone - Wiring connection to Universal Control Module

2 Stage Gas Heating + 2 Stage Cooling + 1 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select :
2 Stage Gas Heat + 2 Stage Cool + 1 x Fan Speed*

Press *Next > Next*. Adjust *Minimum run time and Anti-cycle time*
as required . Setup *Fan control*

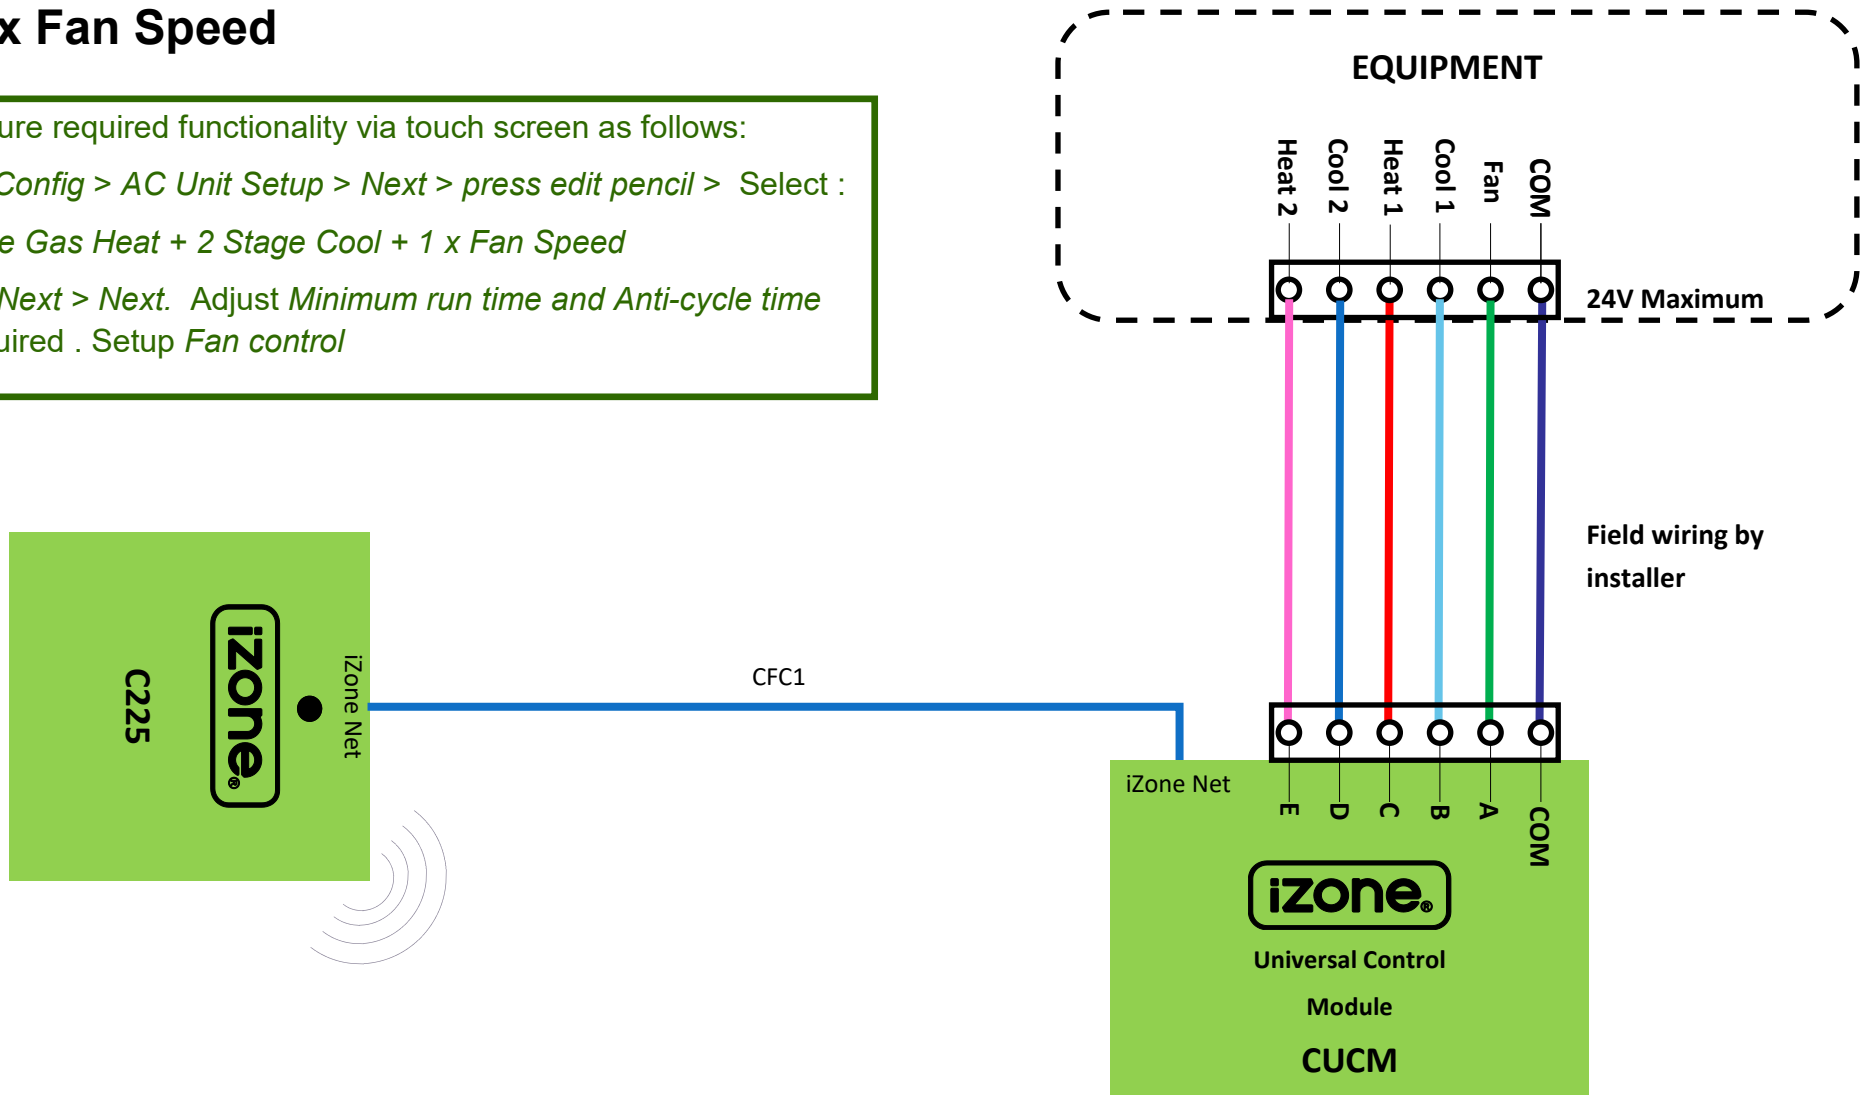

2.31.6 iZone - Wiring connection to Universal Control Module


1 Stage Reverse Cycle Heat Pump + 1 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select :*

1 Stage R/C + 1 Fan Speed

Press Next > Next. Adjust Minimum run time and Anti-cycle time as required . Setup Fan control

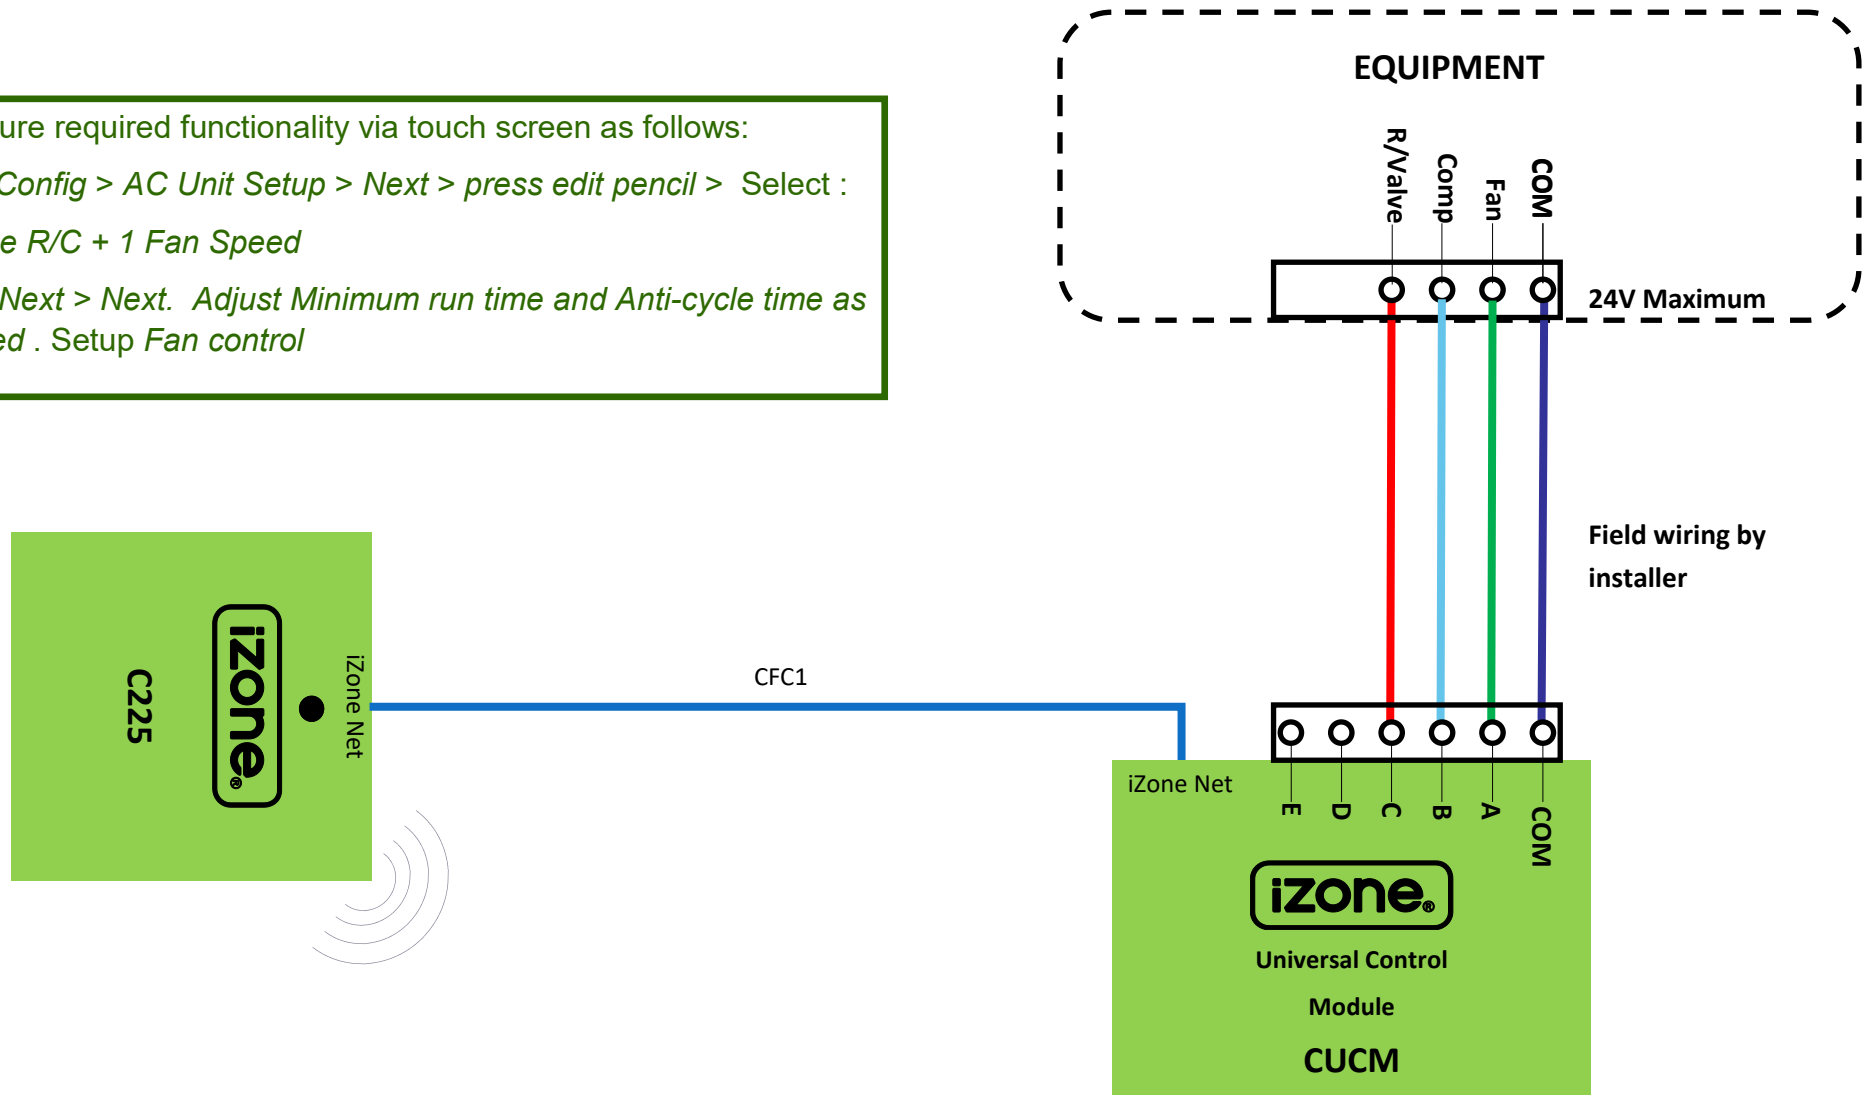

2.31.7 iZone - Wiring connection to Universal Control Module


1 Stage Reverse Cycle Heat Pump + 3 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select :*

1 Stage R/C + 3 Fan Speed

Press Next > Next. Adjust Minimum run time and Anti-cycle time as required . Setup Fan control

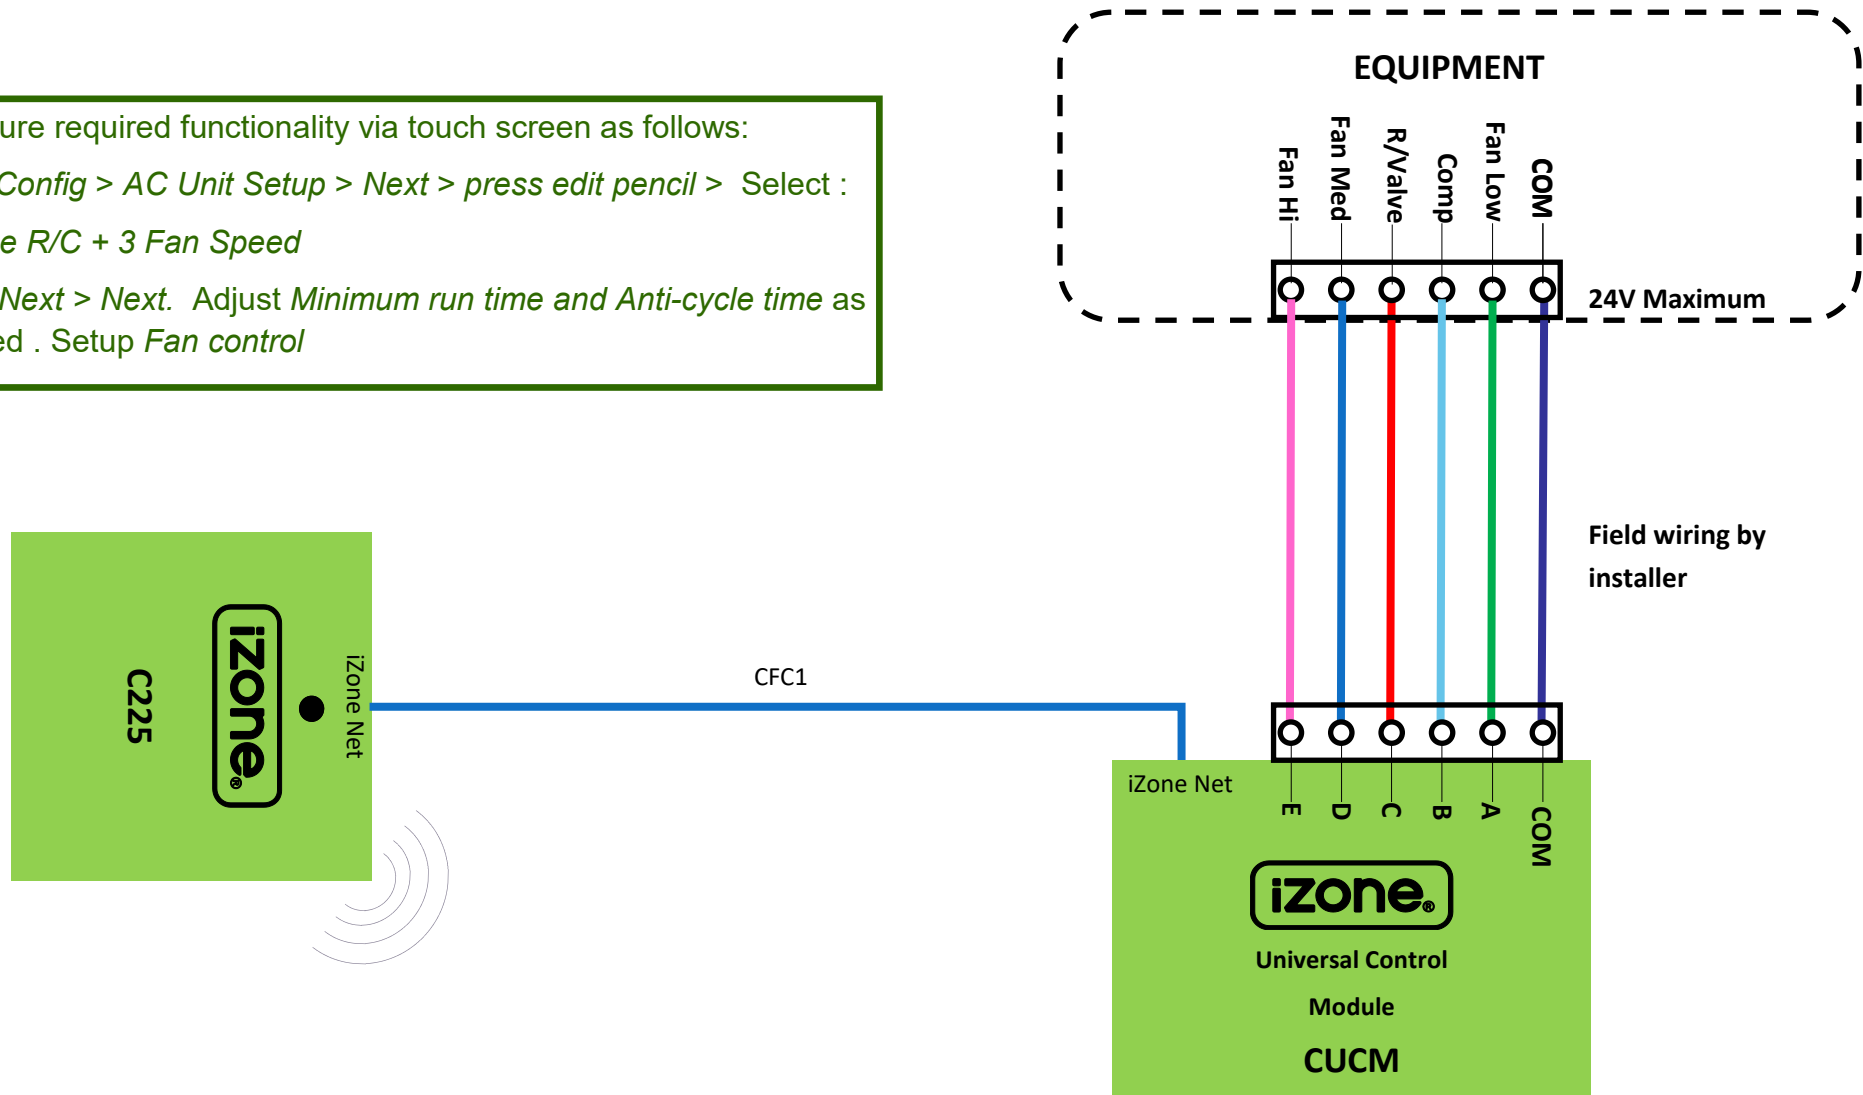


2.31.8 iZone - Wiring connection to Universal Control Module

1 Stage Reverse Cycle Heat Pump + Aux Heating + 1 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select :
1 Stage R/C + Aux Heating + 1 x Fan Speed*

Press *Next > Next*. Adjust *Minimum run time and Anti-cycle time*
as required . Setup *Fan control*

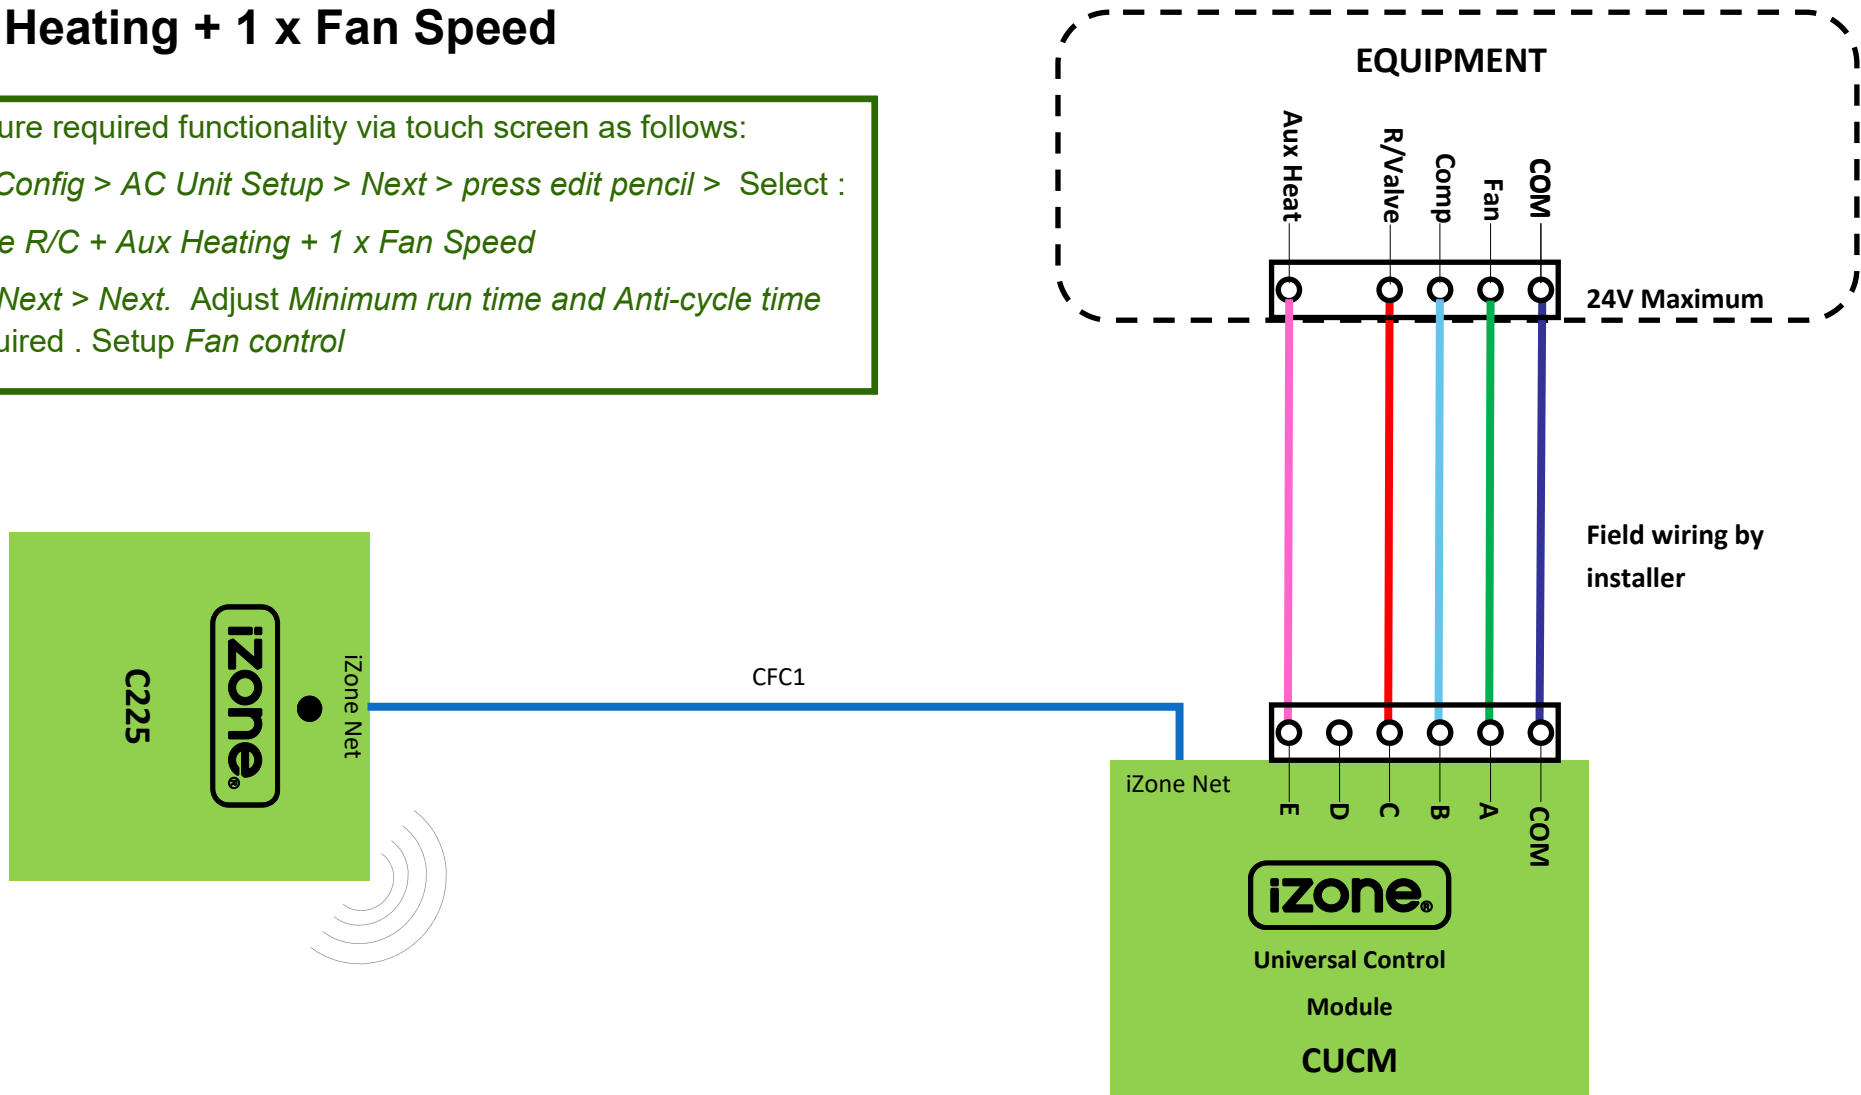


2.31.9 iZone - Wiring connection to Universal Control Module

2 Stage Reverse Cycle Heat Pump + Aux Heating + 1 x Fan Speed

Configure required functionality via touch screen as follows:

Go to *Config > AC Unit Setup > Next > press edit pencil > Select : 2 Stage R/C + Aux Heating + 1 x Fan Speed*. Press *Next > Next*. Adjust *Minimum run time and Anti-cycle time* as required . Setup *Fan control*

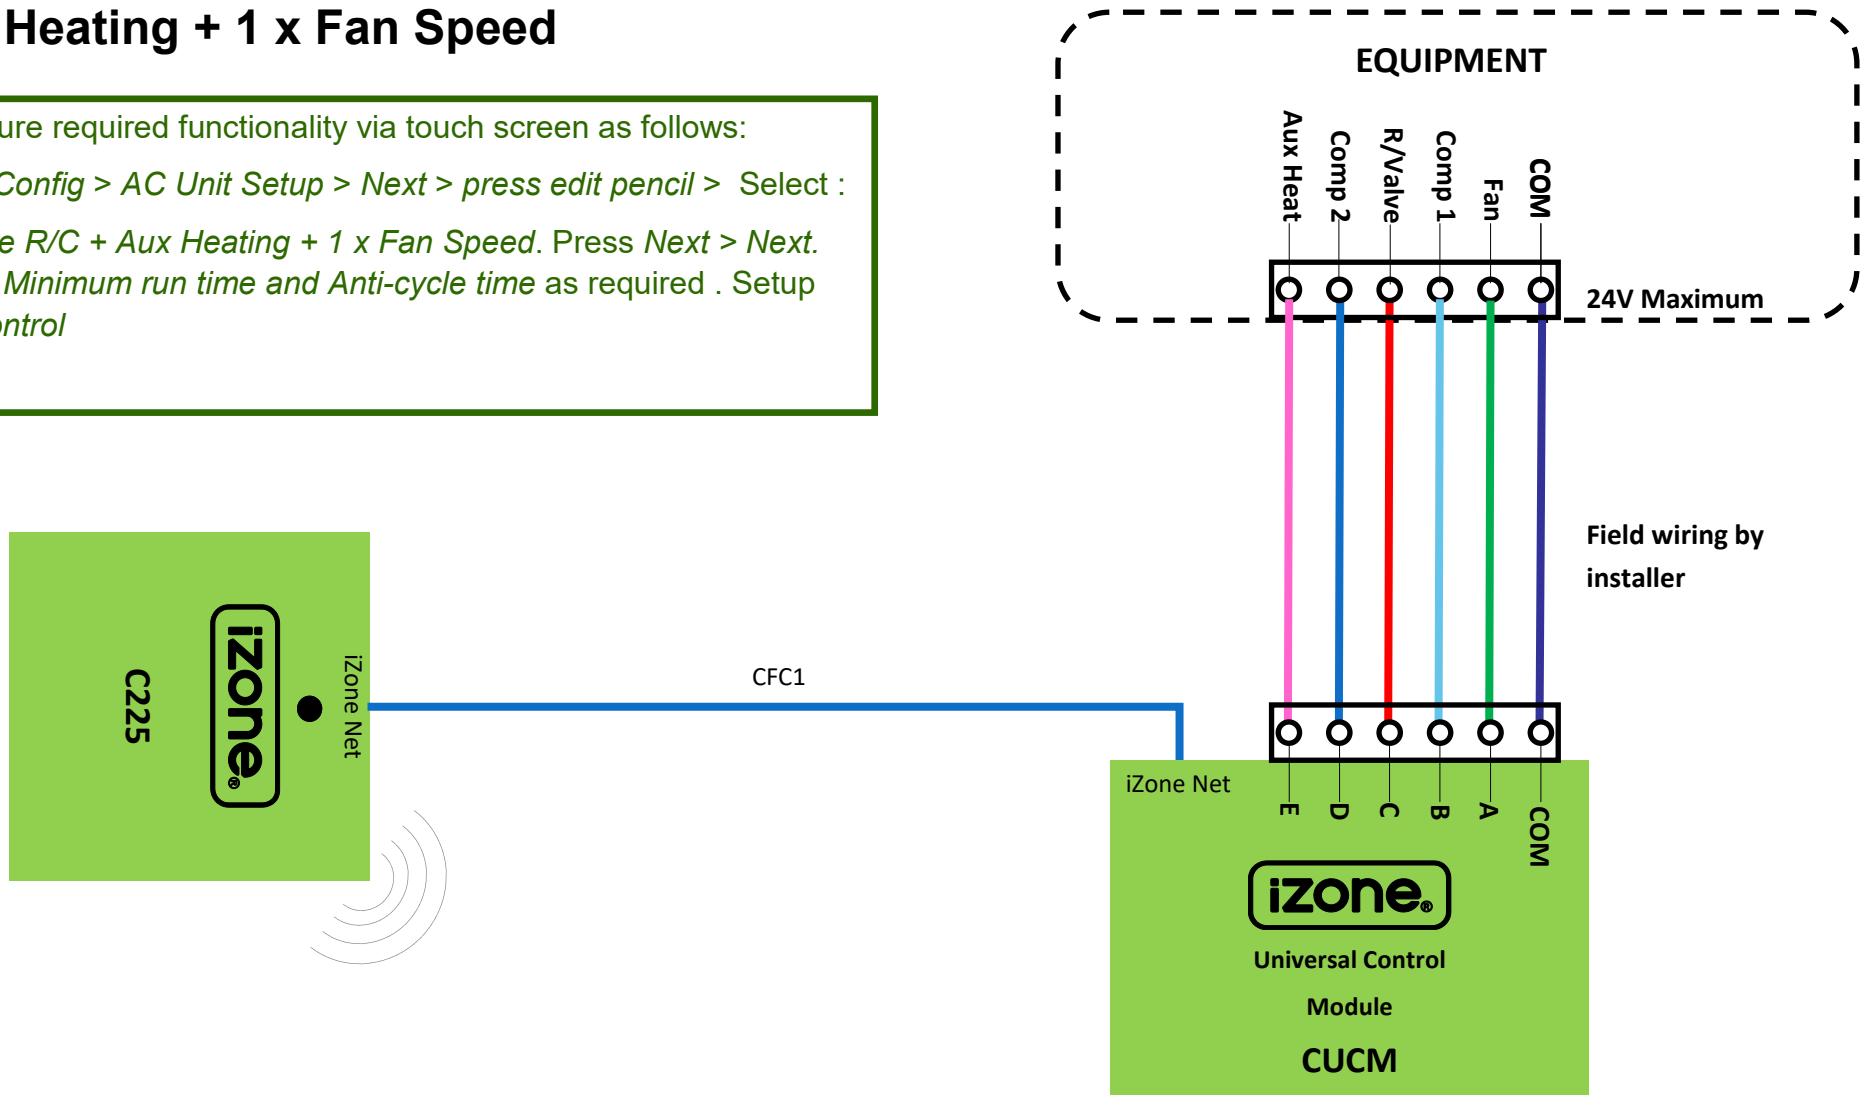


2.32 General installation instructions

1. The C225, C325 and CEXT can be installed close to the indoor fan coil unit.
2. If any wireless sensor (CRFS) or wireless bridge (CL5B) is not within the range of the C225 then additional repeaters (CR) should be added to help relay the signal from the field device to the C225 and the CL5B.
3. Do **not** run the network cables alongside 240 Volt wiring.
4. When installing network cables down wall cavities or chasing network cables into walls, tape up and protect the RJ45 connector to avoid damage to the connectors. Installation damage to cables **is not** covered under warranty.
5. Always install zones in consecutive ports starting at Zone 1. The C225 and CEXT are marked with the zone port numbers.
6. Do not directly hardwire the CT24V into the AC unit's power supply. This may void the warranty as it will require an electrician in the event that a repair of the iZone power supply is required.
7. Connect Zone Damper Actuators (CZDA) to the zone ports using the RJ11 cables as shown.
8. Connect the Colour Touch Screens (CCTS) to the iZone Net ports using the RJ45 cables. If you are connecting more than 3 components requiring iZone Net ports to the system you will need to connect a Network Extension Module Kit (CNEMK) to one of the iZone Net ports on the C225 using a short RJ45 cable.
9. If any zone is temperature controlled, connect an in Duct Temperature Sensor (CDTS) to the CDTS port. Install the sensor into the **supply air** duct upstream of all dampers. Secure the sensor in place by using reinforced aluminium tape.
10. When installing temperature controlled zones ensure the CCTS or sensor for the associated zone is installed in a location that is representative of the temperature in the room / zone . The sensor should be installed at approximately 1600mm above the floor and should not be subject to draughts, direct sunlight or heat from equipment such as computers, TV screens etc. The supply air outlets to this room must **not** blow conditioned air directly onto the sensors or touch screens.
11. Connect the AC unit control cable to the C225 / C325. See table 2.30 for details. (This control cable must be a shielded cable and is not supplied by Airstream.)
12. The building must be fitted with a compatible WiFi modem. Contact Airstream for a list of approved and recommended modems.
13. If connecting the iZone system to a Home Automation system use the Ethernet connection on the bridge.
14. Only connect the power supply to the CT24VACE port after all components have been connected.
15. Any existing or new air conditioning units that require modification or additional boards to facilitate the correct operation of the iZone system, is the responsibility of the installing contractor.

3.0 System initialisation

All new or modified systems must be initialised prior to system configuration. There are two ways to initialise the system as follows:


1. Press the rest button on the bottom or side of the iZone touch screen (depending on screen orientation).
2. Switch the power to the system off and back on.

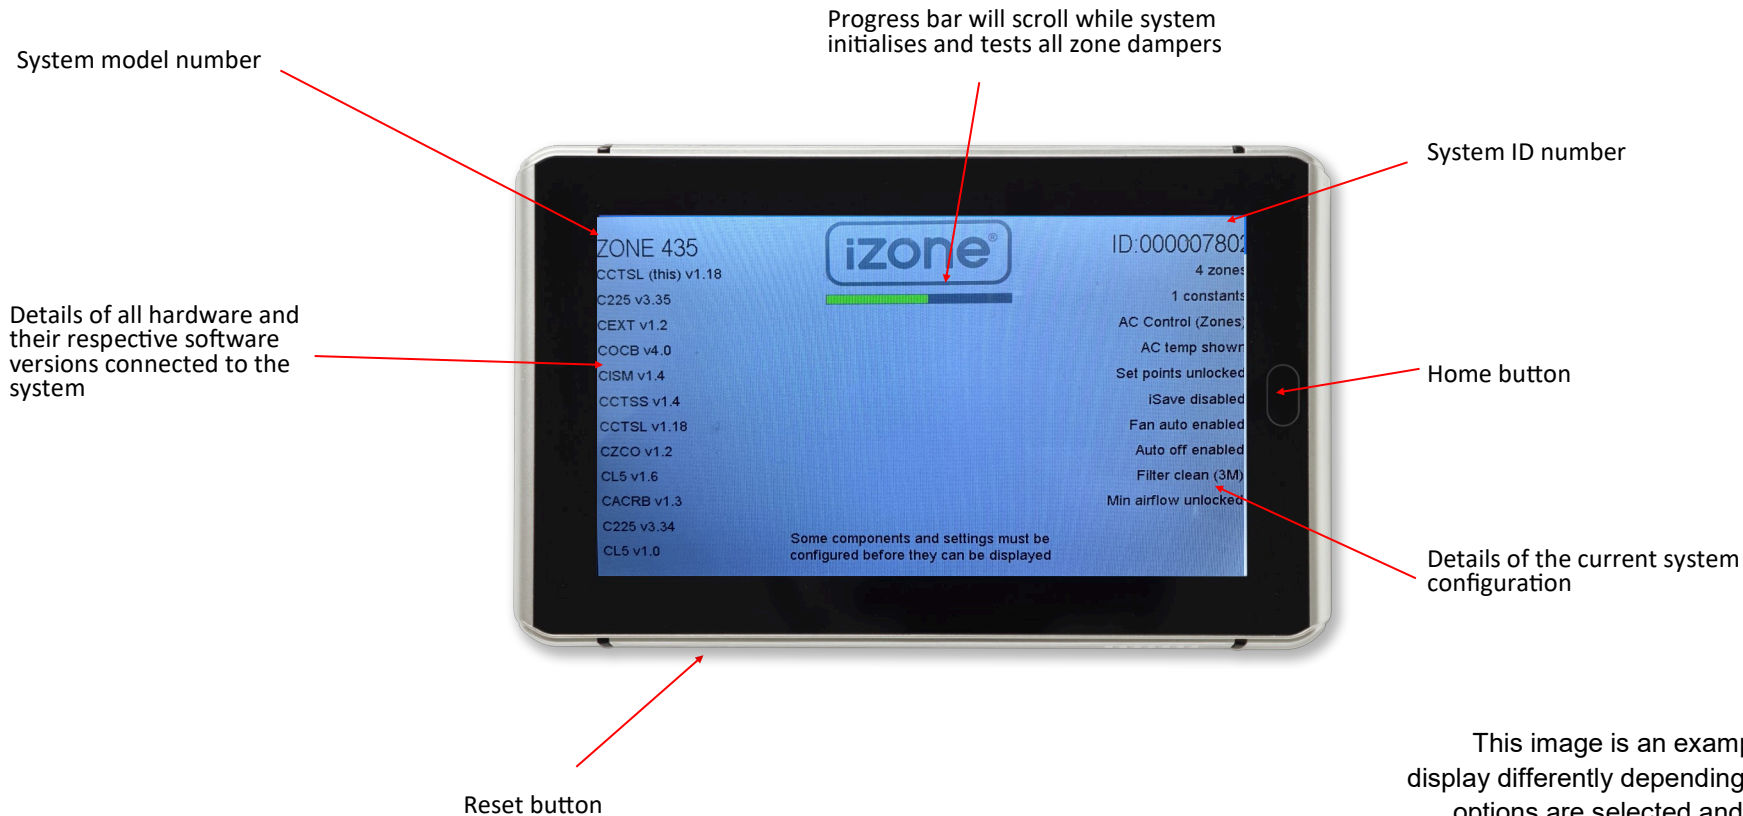


This image is an example only. Your screen may display differently depending on the system type, what options are selected and the configuration settings entered by your installing contractor.

3.2 Changing the orientation and type of graphic

Classic / Portrait

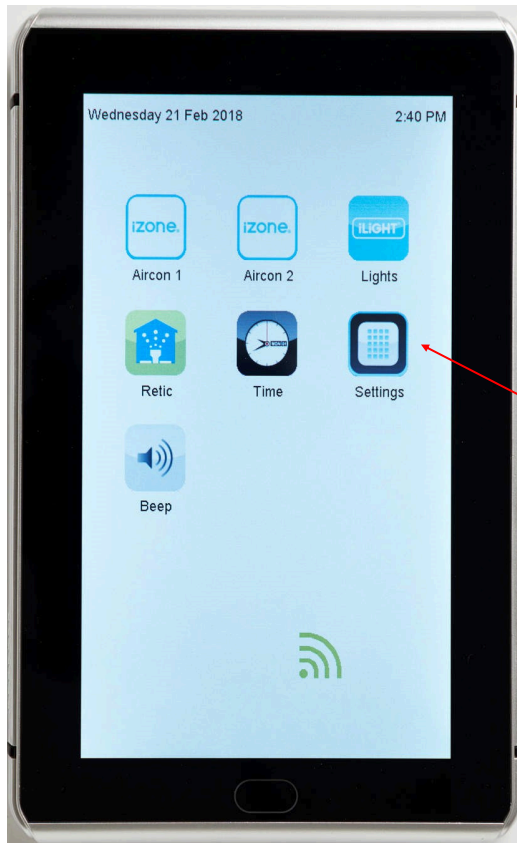

Press
"Settings"

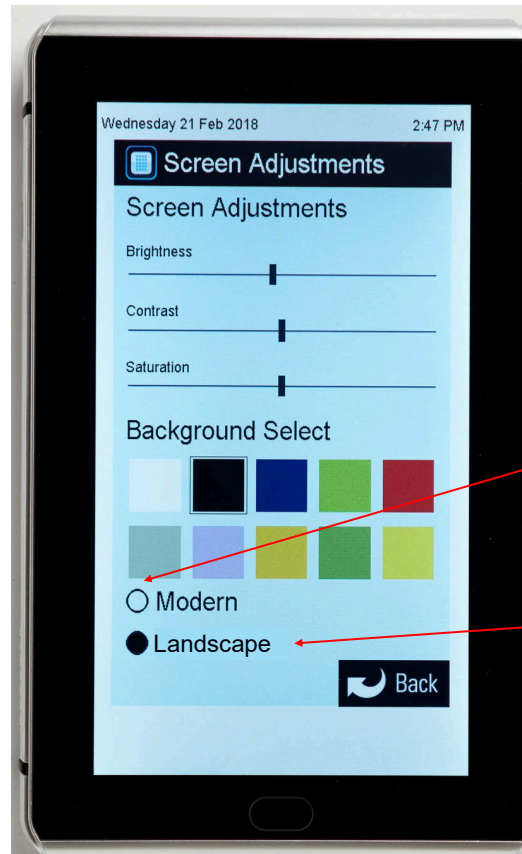

Press Modern if you want to
change to "Modern" style of
graphics.

Press Landscape if you want
to remain in "Classic" style
but change to landscape
format

This image is an example only.
Your screen may display differently
depending on the system type,
what options are selected and the
configuration settings entered by
your installing contractor.

3.3 Changing the orientation and type of graphic



Modern / Portrait



Press
"Settings"



Press
"Screen"

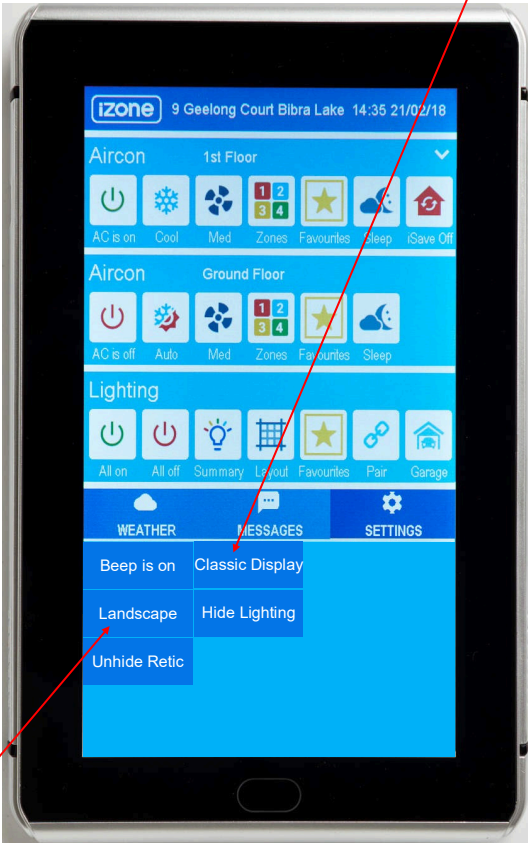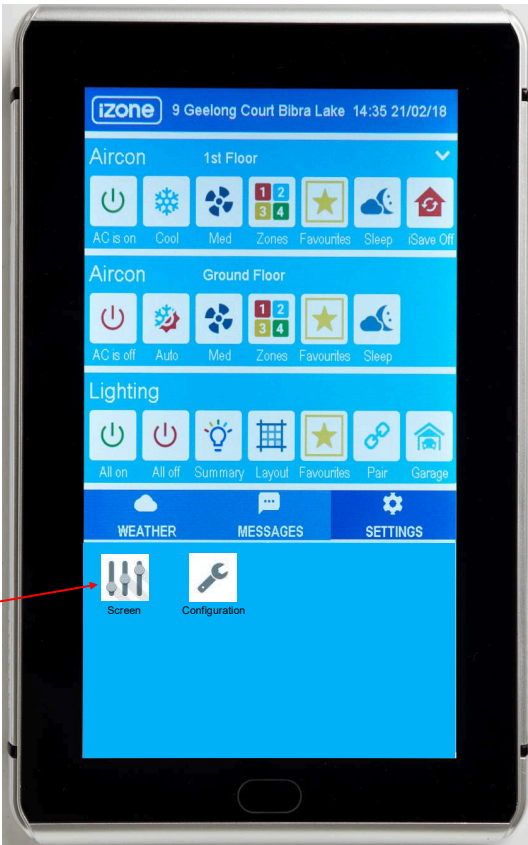

Press Classic Display if you
want to change to "Classic"
style of graphics.

This image is an example only.
Your screen may display differently
depending on the system type,
what options are selected and the
configuration settings entered by
your installing contractor.

Press Landscape if you want
to stay in "Modern" style but
change to landscape format


4.0 System configuration

WARNING ! Only qualified iZone installers should configure the iZone System. Incorrect configuration could result in damage to your air conditioning unit and system.

Classic Graphics

To configure your system click on the System Config icon on the home page.



Enter the system password **“wamfud”** and press the enter button. The enter button must always be touched to save changes. 

You will now be in the System Configuration area.

Modern Graphics

To configure your system press Settings > Configuration > Configure Air Conditioner (#)

Enter the system password **“wamfud”** and press the enter button. You will now be in the System Configuration area.


The following configuration instructions are all displayed in the Classic Graphics mode. The Modern Graphics mode has all the same configuration options but are displayed differently. If you are unsure how to configure the system using the Modern Graphics it is recommended that you change the Graphics to Classic mode, complete the configuration, then change the display back to the Modern Graphics mode.

Enter the system password **“wamfud”** and press the enter button. You will now be in the System Configuration area.

4.1 Configuration main menu

Note:

Information on the configuration screen may vary depending which devices are connected to the system and which model of iZone you have

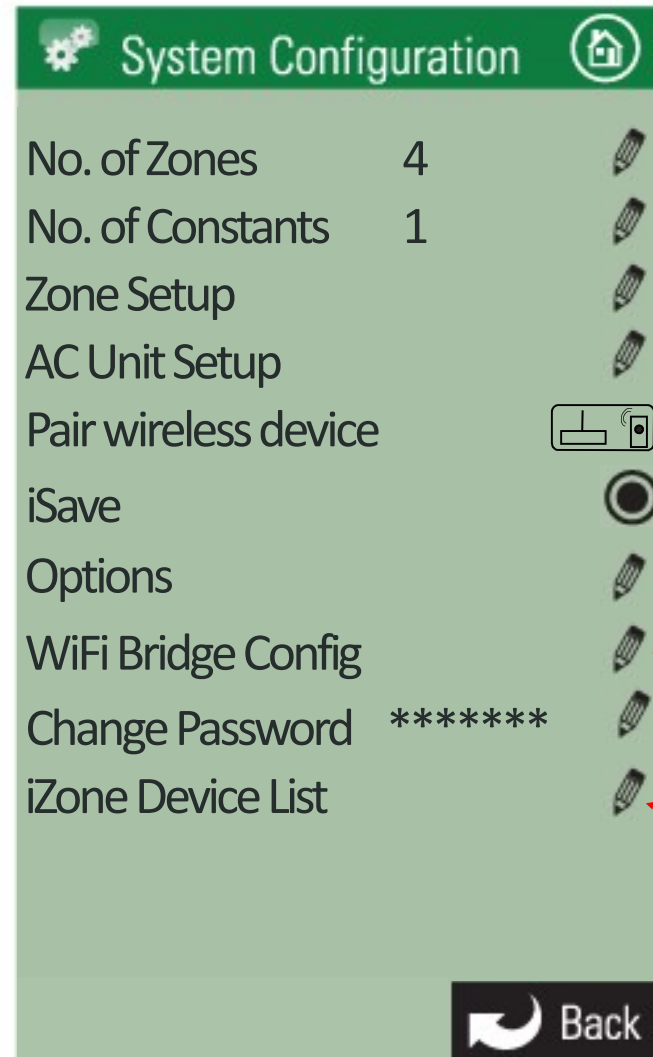

Touch here to edit the number of zones installed.

Touch here to edit the number of variable electronic constant zones required.

Touch here to set up and configure each zone (see 4.2).

Touch here to set up AC Unit Configuration (see 4.3).

Touch here to pair wireless devices

Touch here to enable iSave icons. iSave components must be installed and electronic hardware set up accordingly

Touch here to set up Options

Touch here if you need to manually configure the IP address of the WiFi Bridge.

Touch here to change the system password

Touch here to list the devices and software versions detected by this system

Touch here to go back to the Home screen

iZone

Inventive · Intelligent · Intuitive

4.2 Zone set up

If the zone has been named its name will show here

Zone Setup

Kitchen	Wireless
Passage	Const 1
Family	Touch
Master Bed	Wired
Jon Bed	Opn/Clsd
Study	iSense

Up

Down

Back

Touch here to go to the home screen

Indicates this zone is fitted with a wireless sensor. Touch here to change.

Indicates this zone is designated to be the first electronic constant zone.

Indicates this zone temperature is controlled via the sensor in a touch screen. Press here to change.

Indicates this zone is fitted with a wired sensor. Touch here to change.

Indicates this zone has been set up for Open / Close control only

Indicates this zone is set up for temperature control via an iSense controller

iZone
Inventive · Intelligent · Intuitive

4.2 Zone set up (cont)

Indicates this zone has been configured to be climate controlled via a Wireless Sensor

Press here to view or make changes to the wireless sensor status and configuration

The configuration of this zone can be changed by simply selecting the appropriate button. Please note the correct hardware must be fitted for the zone to work correctly

Kitchen

Manual Control

- ☐ Constant No
- ☐ Open / Closed

Climate Control

- ☒ Wireless Sensor
- ☐ This Touch Screen
- ☐ Wired Sensor
- ☐ iSense Controller
- ☐ Other Touch Screen

Next **Previous** **Back**

iZone

Inventive · Intelligent · Intuitive

4.2.1 Sensor configuration

The screenshot shows the 'Kitchen' sensor configuration screen in the iZone app. The screen has a green header with a gear icon and a home icon. The main content area is light green and contains the following text and icons:


- Pair wireless device**: Text with a wireless device icon to its right.
- Sensor battery status : Good**: Text.
- Signal strength : 100%**: Text.
- Change Rf Channel 1**: Text with a pencil icon to its right.
- Calibrate Sensor - 0.2 C**: Text with a pencil icon to its right.
- Balance air max: 80%**: Text with a pencil icon to its right.
- Balance air min: 0%**: Text with a pencil icon to its right.
- Back**: A button with a circular arrow icon and the text 'Back' at the bottom right.

Annotations with red arrows point to various elements:


- Indicates the status of the wireless signal strength from the sensor in this zone. It can take up to 10 minutes of normal operation to get an accurate reading. To speed up the process press the Off / Auto button on the sensor 5 times.** (Points to 'Signal strength : 100%')
- Displays the Radio frequency channel the system has been configured to. This channel can be changed if RF interference is being experienced. If the channel is changed all wireless devices need to be paired** (Points to 'Change Rf Channel 1')
- Hold down the "Pairing Button" on the iZone wireless device. (see 4.2.2). Then press here to pair the device to your iZone system** (Points to the wireless device icon next to 'Pair wireless device')
- Indicates the status of the battery in the sensor in this zone** (Points to 'Sensor battery status : Good')
- Press here to change the Rf Channel** (Points to the pencil icon next to 'Change Rf Channel 1')
- Press here to adjust the calibration of this sensor (See 4.2.3)** (Points to the pencil icon next to 'Calibrate Sensor - 0.2 C')
- Press here to adjust the maximum air balance for this zone. This adjustment is separate to the users % +/- adjustment** (Points to the pencil icon next to 'Balance air max: 80%')
- Press here to adjust the minimum air balance for this zone. This adjustment is separate to the users % +/- adjustment** (Points to the pencil icon next to 'Balance air min: 0%')
- Touch here to go back and save any changes.** (Points to the 'Back' button)

iZone
Inventive · Intelligent · Intuitive

4.2.2 Pairing and configuring iZone RF Sensors

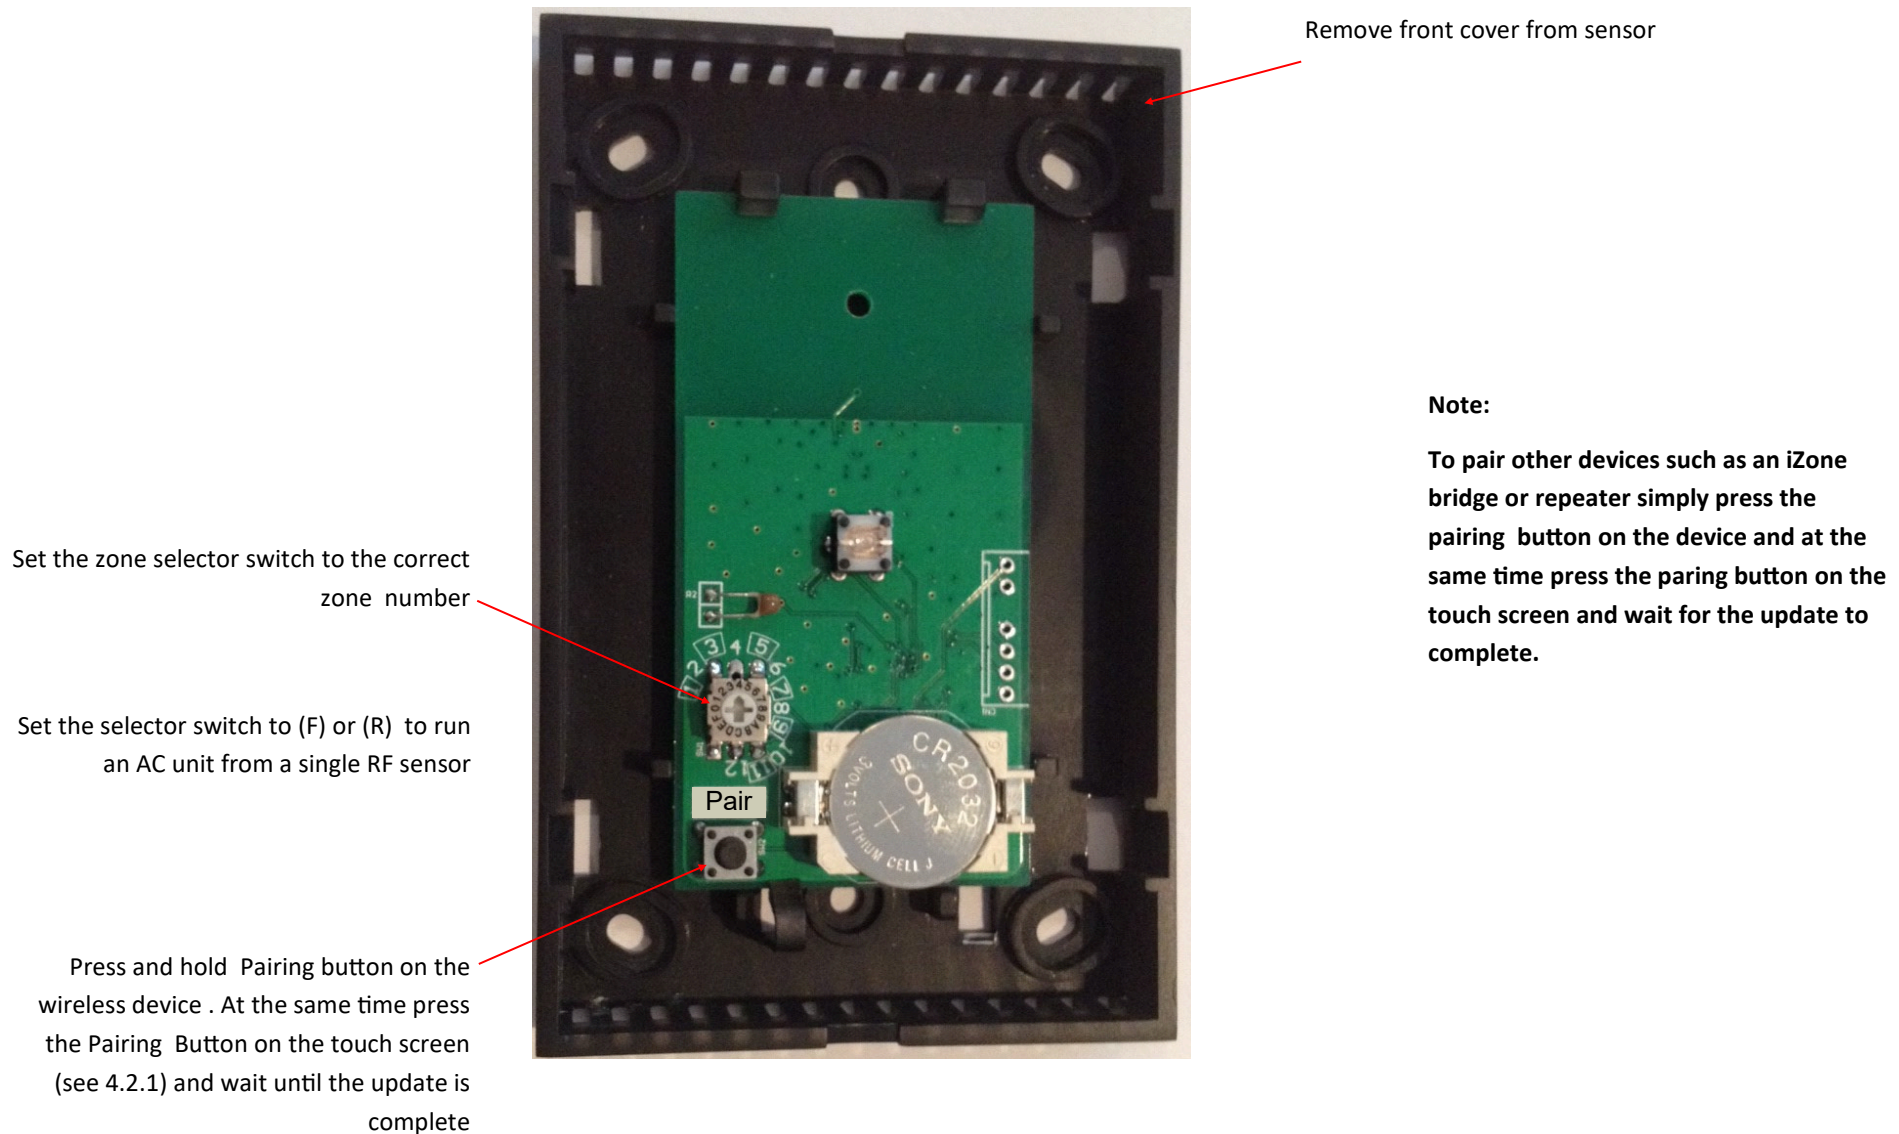

4.2.3 Sensor Calibration

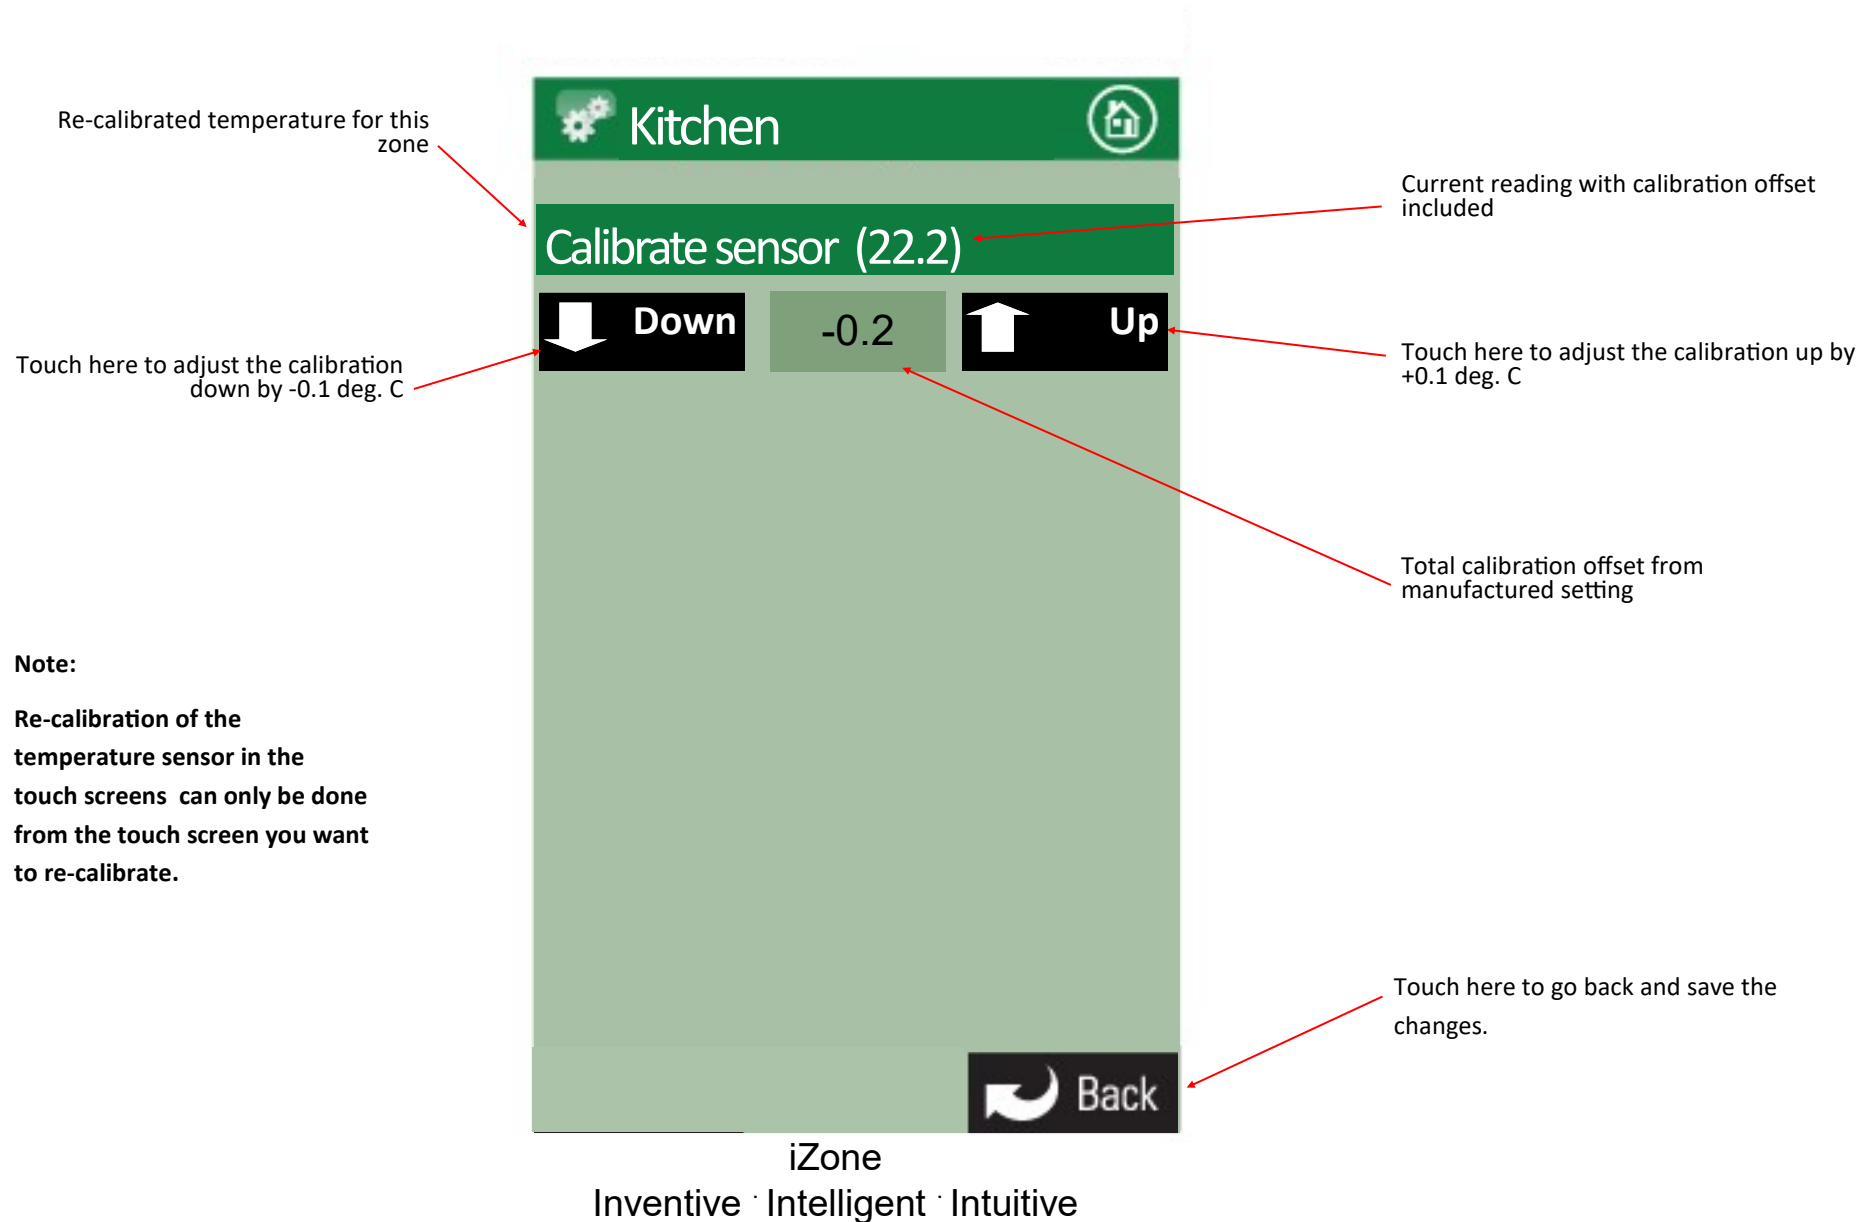

4.2.4 iSense controller configuration

Press and hold the “iSense” button to enter the Occupancy Strategy configuration menu. Follow the prompts to select the most appropriate strategy for your room or use the Custom Setup option to design your own strategy

Note:

When iSense has been activated movement is required in the range of the occupancy sensor to keep the zone operating. The use of the iSense feature in bedrooms, when the occupants are asleep, is not recommended.



Indicates the iSense has been activated on this controller.

Press and hold the “Airflow” button to configure the controller. Here you can configure the correct Zone to control and you can calibrate the sensor if required

System reset button under here

4.3 AC unit configuration


Select method of controlling the AC unit.

- R/Air will control using the unit's return air sensor.
- Master will control the AC unit from the colour touch screen or zone sensor that has been selected as the Master.
- Zones will automatically control the AC unit from the temperature controlled zones (high select).
- R/F Sensor is selected if you are controlling an AC unit with no zones from a single iZone RF sensor. The R/F sensor selector switch must be set to (F) or (R) .

Touch here to enable / disable this feature

Touch here to enable / disable this feature

Indicates the current dead band required to automatically switch from Cooling to Heating. This dead band +/- 1.75°C from the controlling sensor's setpoint.

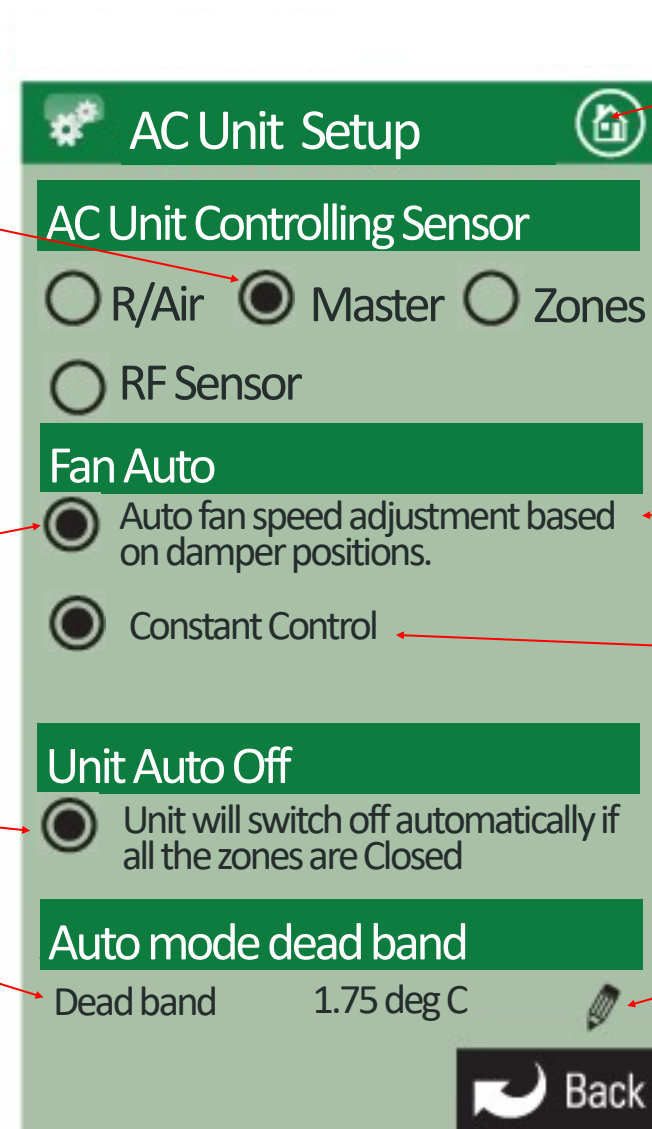

The image shows a mobile application screen titled "AC Unit Setup". At the top, there is a green header bar with a gear icon on the left and a home icon on the right. Below the header, the screen is divided into several sections. The first section is "AC Unit Controlling Sensor", which has four radio button options: "R/Air", "Master" (which is selected), "Zones", and "RF Sensor". The second section is "Fan Auto", which has two radio button options: "Auto fan speed adjustment based on damper positions." (which is selected) and "Constant Control". The third section is "Unit Auto Off", which has one radio button option: "Unit will switch off automatically if all the zones are Closed" (which is selected). The fourth section is "Auto mode dead band", which shows "Dead band" as "1.75 deg C" and has a pencil icon to its right. At the bottom right of the screen is a "Back" button with a circular arrow icon.

Touch here to go to the home screen.

To configure Fan Auto see (4.3.1)


Advanced constant control will use area in lieu of a set number of zones to control the constant zone or by-pass damper

Touch here to adjust the deadband

Touch here to go back and save the changes.

iZone
Inventive · Intelligent · Intuitive

4.3.1 Fan auto configuration

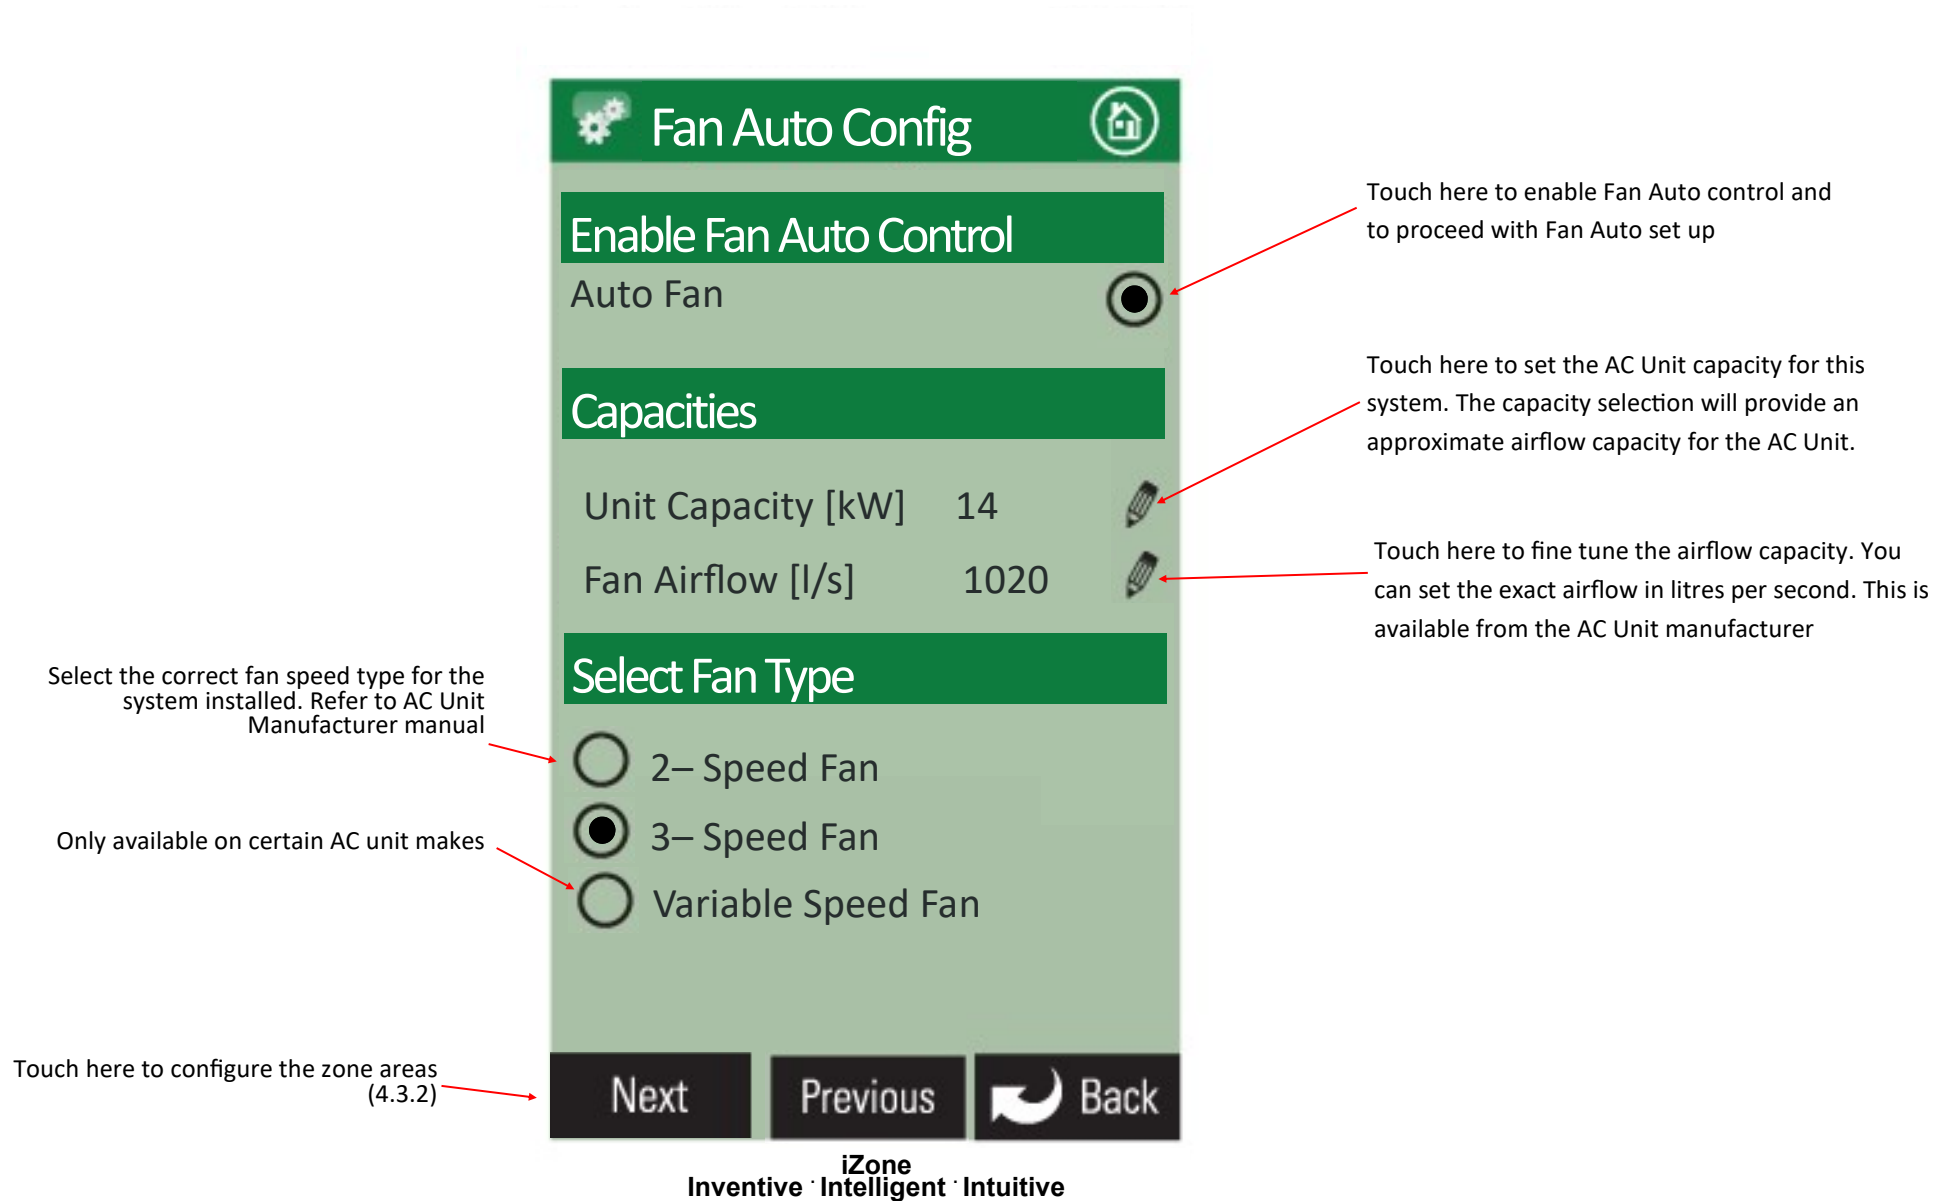

4.3.3 Master Slave Setup

Important Notes:

This is an Advanced setting and should only be attempted by suitably qualified iZone technicians.

These setting will only work with certain makes and models of AC units. Contact iZone to check if your system is suitable.

The AC system controls may require additional PCBs, master / slave adjustments or controller addressing for these functions to operate.

Airstream does not accept responsibility if these setting do not work correctly on your particular system

AC Unit Setup

Unit Info

Auto detect AC unit

Panasonic

Fault History

Master / Slave Settings

On/Off

Mode

Fan

Setpoint

iZone

Other

Back

Indicates a Panasonic AC unit module has been automatically detected on this system

Press here if you want to manually search for the correct unit.

Touch here to view the fault history for this AC unit.

System can be turned On and Off via the iZone controller and another non iZone controller connected to the Panasonic unit

System mode can be changed by the iZone controller and another non iZone controller connected to the Panasonic unit

System fan speed can only be controlled by the iZone controller

System setpoint can only be controlled by a non iZone controller connected to the Panasonic unit

Touch here to go back and save the changes.

System On/Off control

System mode control

System fan speed control


System setpoint adjustment

iZone
Inventive · Intelligent · Intuitive

4.4 System Options (Display, Taglines & Filter Maintenance)

Note:

Information on the configuration screen may vary depending which devices are connected to the system and which model of iZone you have

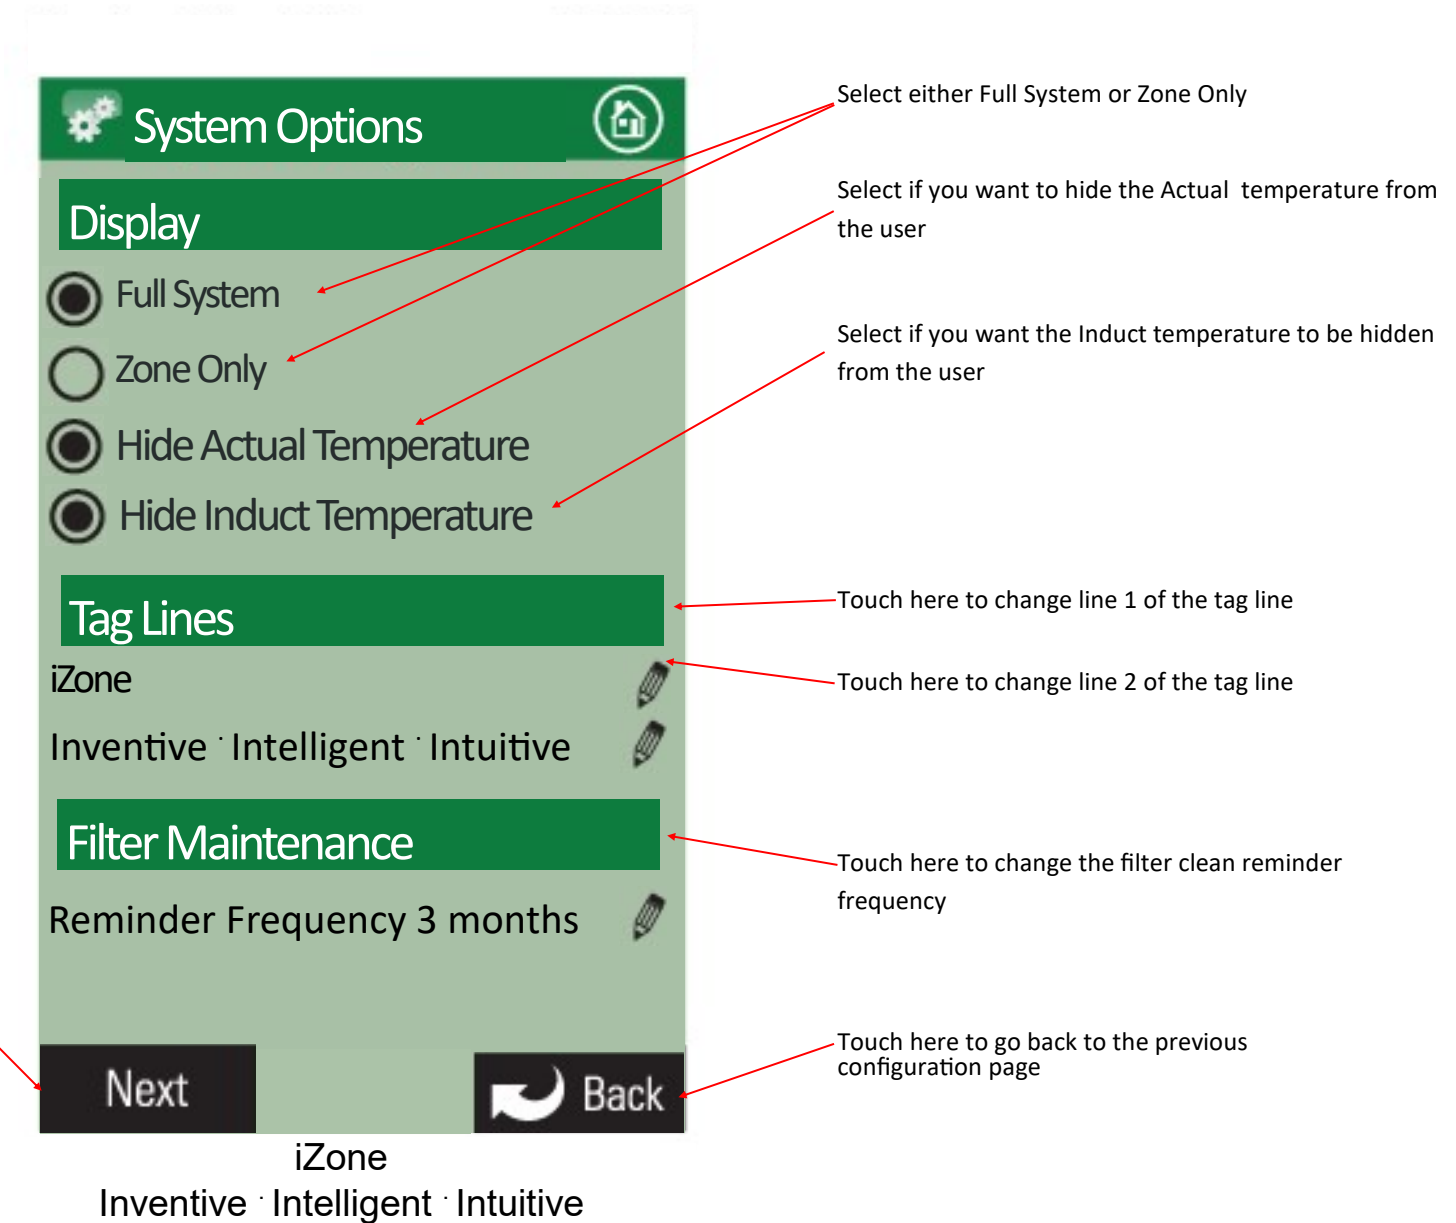

4.4 System Options (Locks & Non Standard Damper Motors)

Note:

Information on the configuration screen may vary depending which devices are connected to the system and which model of iZone you have


Select here for non standard dampers such as Belimo.

You will need to type in the drive time in seconds from fully closed to fully open.

Please note this will change the timing for all motors in the system so you cannot have a mix of different motors on the same system when using this feature.

The damper fault detection is ignored when this mode is used.

Select here to reverse the operation of all dampers

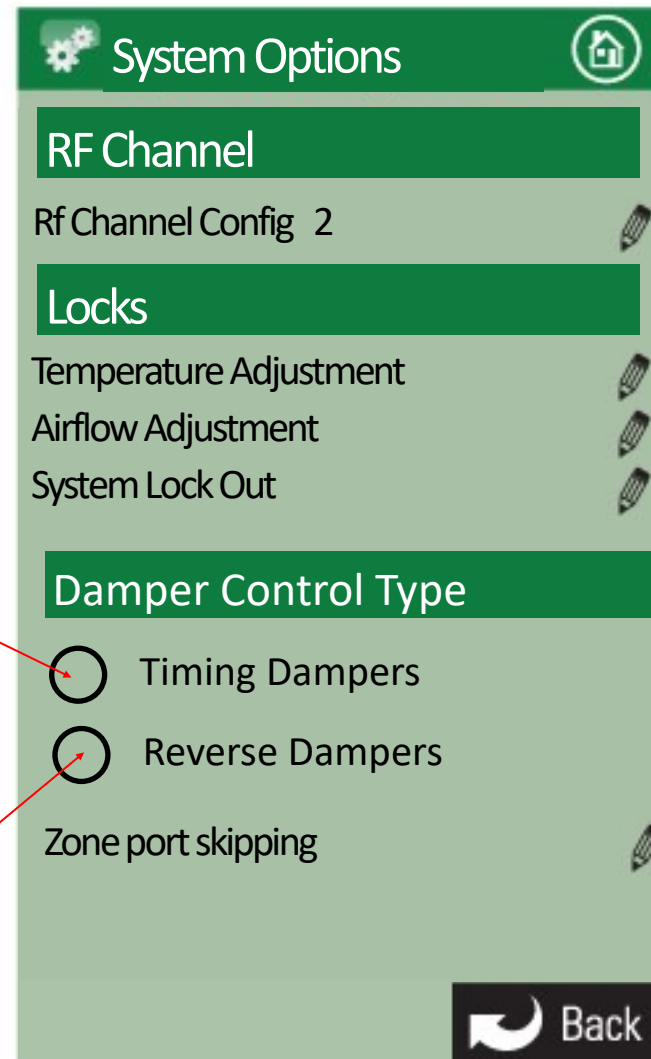

Press here to change the system RF channel. Currently set on Channel 2. **Warning!!** If you change the channel number you will need to re-pair all the RF devices connect to this system including, sensors, bridge, lights, power etc.

Touch here to set limits for set point adjustment and to lock this setting

Touch here to lock airflow adjustment. You can lock minimum airflow only or both minimum and maximum air flow adjustments


Touch to lock the AC Unit. You will need to enter a PIN number and then the number of days you want the system to operate for, until it is automatically locked off. Do not forget your PIN. Service charges will apply for a technician to attend site to unlock your system.

Press here to skip a zone port on the C225 module.

Touch here to go back to the previous configuration page

iZone
Inventive · Intelligent · Intuitive

4.5 Wifi bridge configuration

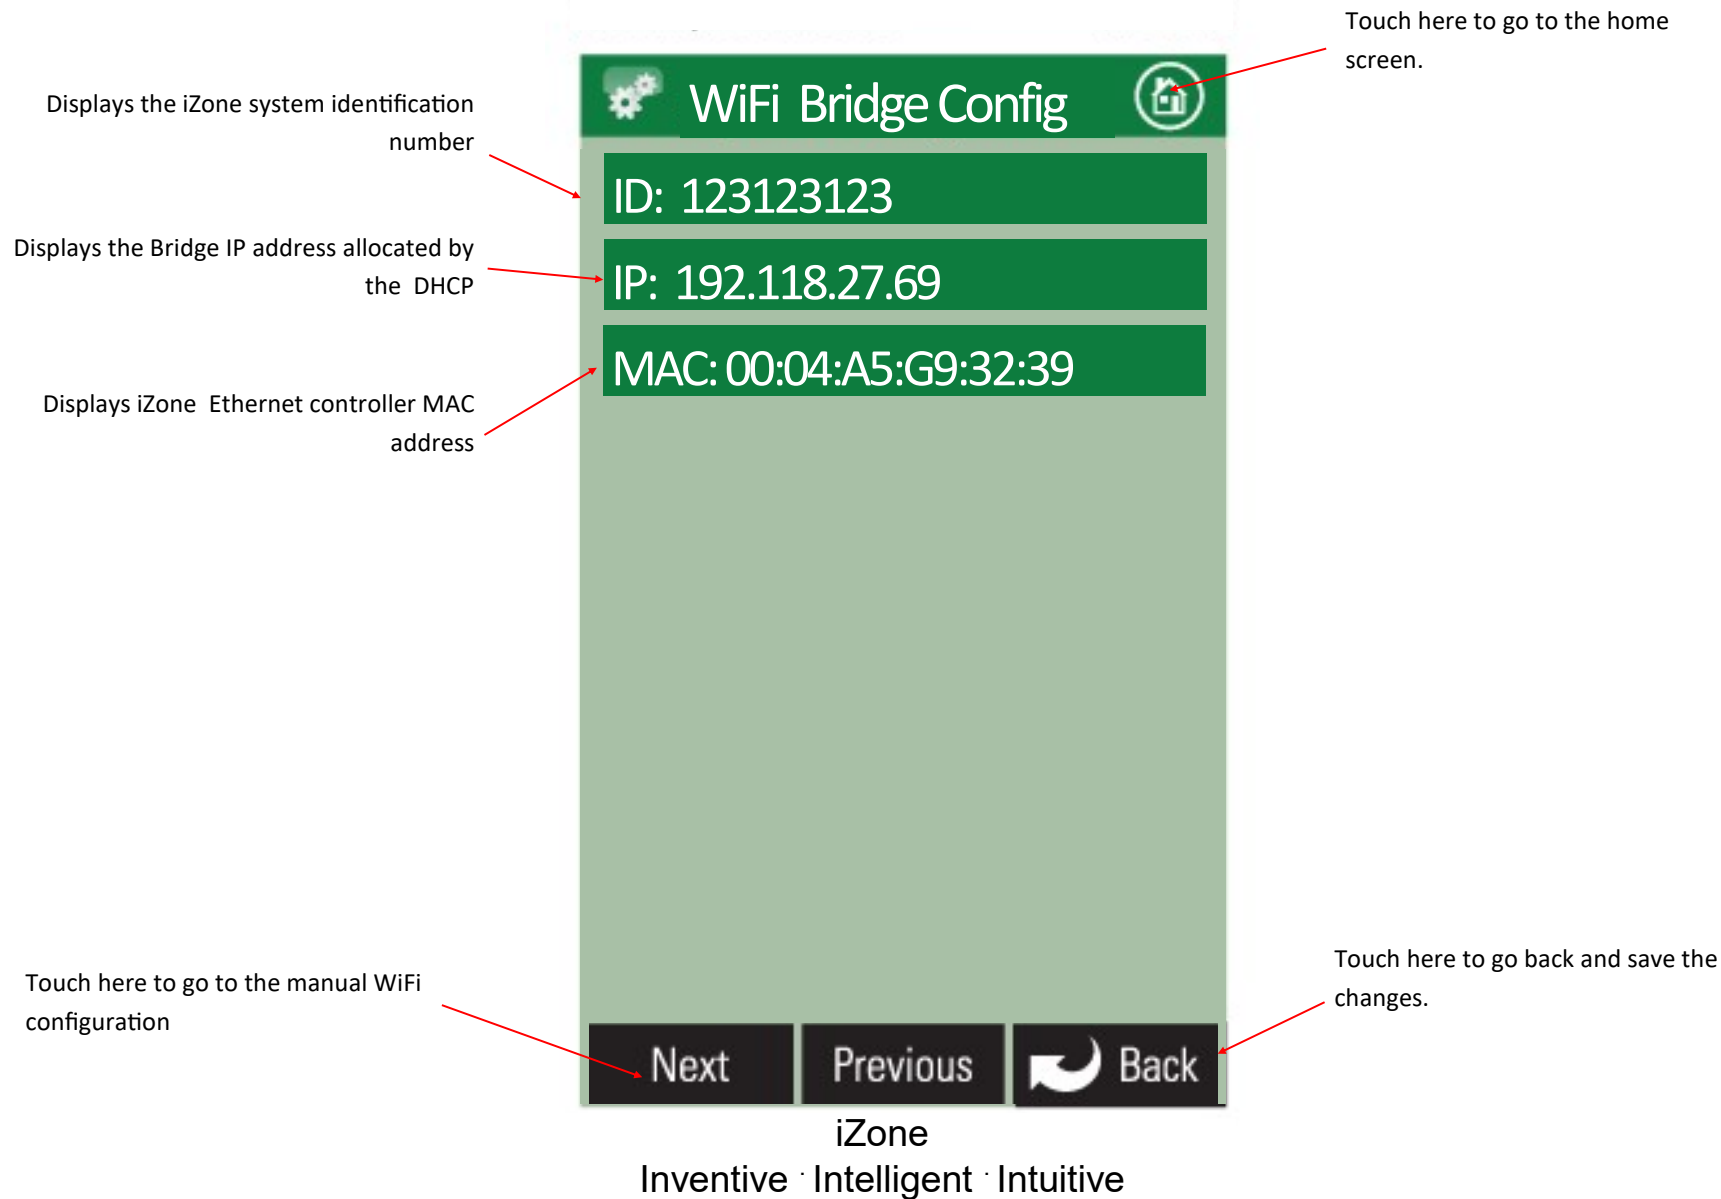

4.5.1 Manual IP Configuration

WiFi Configuration

Select either Auto or Manual Configuration. If manual is selected you will need to know the IP, Subnet Mask, Default Gateway, Primary DNS Server and Secondary DNS Server addresses if applicable. If you require manual configuration please contact your IT specialist to assist you.

☐ Auto Configuration

☒ Manual Configuration

IP Address

Subnet Mask

Default Gateway

Primary DNS Server


Secondary DNS Server

Apply **Previous** **Back**

iZone
Inventive · Intelligent · Intuitive

4.5.2 WiFi connection

A green symbol indicates the iZone system is now connected to WiFi and ready to use

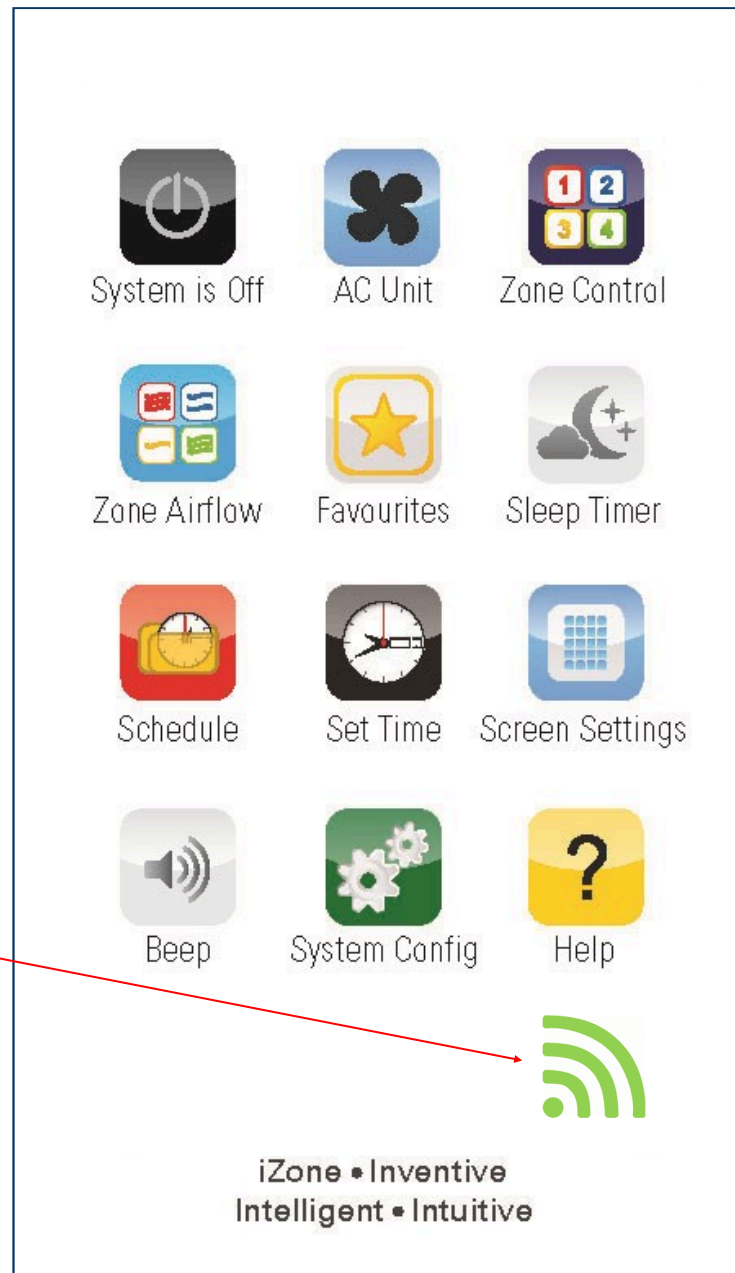

A grey symbol indicates the Bridge is connected to the iZone system but is not connected to the local computer network



4.5.3 Smart Phone or Tablet - System Requirements

Smartphone or Tablet

- You will need a smartphone or tablet. The following platforms are supported: Apple & Android.

System Requirements

iOS SOFTWARE REQUIREMENTS

- Compatible with iPhone, iPod touch, and iPad. iOS 6.0 and higher.

ANDROID SOFTWARE REQUIREMENTS

- Requires Android: 2.1 and higher.

WiFi modem or network switch

- You will also need a compatible WiFi modem or network switch with a spare RJ 45 access port. Some WiFi modems, firewalls and security settings are not compatible with the iZone bridge and will need to be changed or replaced to enable the iZone Home App to run.

Download the iZone Home App

- You will need an account with the manufacturer of your

phone to enable you to download Apps from their respective store.

- Apple—Apple App Store
- Android—Google Play Store
- Login to the respective store.
- To search for the iZone Home App type “iZone Home” into the stores search menu.
- Select iZone Home and download the iZone Home App.



4.5.4 Smart Phone or Tablet - Equipment Required and Configuration

Equipment

- See 2.24 & 2.25 For details of equipment required and wiring diagram.

Configuration

- Power up the WiFi Bridge
- Press the System Config button on the touchscreen
- Enter the system password “wamfud”



Pair the wireless bridge to the iZone system

- Press and hold the blue button on the side of the Bridge. At the same time press the “Pair Wireless Device” button on the touchscreen



Pair Wireless Devices



- Wait a few seconds. Press the home button on the touch screen.
- The grey WiFi symbol should appear at the bottom of the home screen.




- Connect the RJ 45 cable from the Bridge to the modem / router. The symbol will change to 100% green.



4.5.5 Smart Phone or Tablet configuration - Using your App


Using your iZone App in your local WiFi area

- Download the iZone Home App
- Press the iZone button on your phone or tablet.

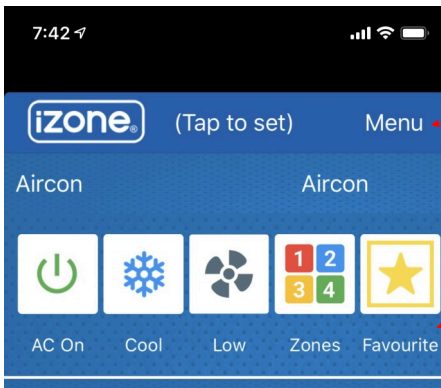


Press Menu on the top right hand corner access other items.
See below

Whiles in your local WiFi area, (The same one the iZone Bridge is connected to) you can control your systems and devices directly from the App

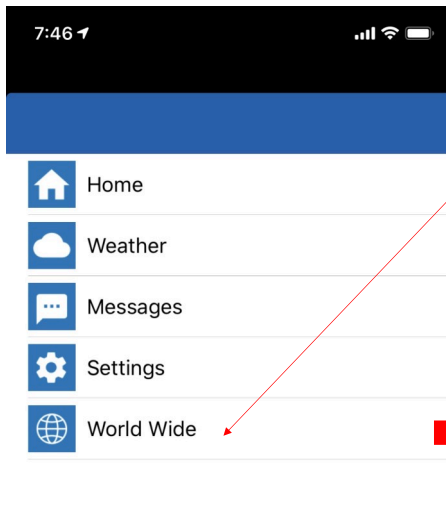

To set up for 4G and other 3 party access like Alexa and Google Home press here and complete the registration

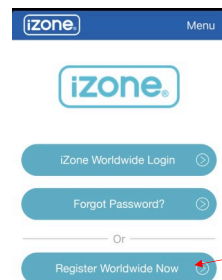

Press here

- You can only have access to the system from outside your local WiFi range after you have successfully registered your system on World Wide.
- To register your system you must :
 - Be inside the WiFi area your system is connected to.
 - On the App press > Menu > Worldwide > Register Worldwide Now.
 - We recommend you complete all the fields making sure you get the Suburb, State and Postcode 100% correct to ensure the correct weather data is displayed on your Nexus screen and App
- You must agree to the Worldwide Terms.
- The App will display all the systems it finds in this WiFi area and will simultaneously register all devices displayed.
- Make sure you remember your password as you will need it when you login via World Wide
- When you login to World Wide there is an option to save your username and password (Login & Remember Me). We recommend you select this option to make it faster and easier to login to your system remotely.
- Do not use iZone World Wide when you are in your WiFi zone unless you have turned off the WiFi on your smart phone or tablet.

4.5 Setting up your iZone app (continued)

- c. Install and pair additional repeater modules as required to ensure full and reliable coverage across the whole building.
- d. Once your devices are up and running you can test your remote login. To do this you need to simulate being outside your WiFi area:
 - On your smart phone go to settings and turn your WiFi **OFF**
 - Open the iZone App
 - Type in your email address and your password
 - We recommend you press “Login & Remember Me” to avoid having to type in the email address and password in future.
 - Select the system you are controlling
 - Try switching a device on or off
- e. Don't forget to switch your WiFi back on.

4.6 Home automation integration

iZone systems can be integrated into almost any home automation system that has an Ethernet interface. The WiFi bridge is fitted with an Ethernet connection.

There are different options to choose from such as a home automation interface module or you can even write your own interface code.

Contact us to discuss your requirements at <http://www.izone.com.au>

4.7 iZone Naked 400 remote - Configuration


Note:

Zone 1 will be set as the default constant zone when Auto configured.

Hint:

Configure in this order:

1. **Pair the remote to the CPU first.**
2. **Force Auto configuration**
3. **Test air flows to each zone and fit zone labels onto the back of the remote.**

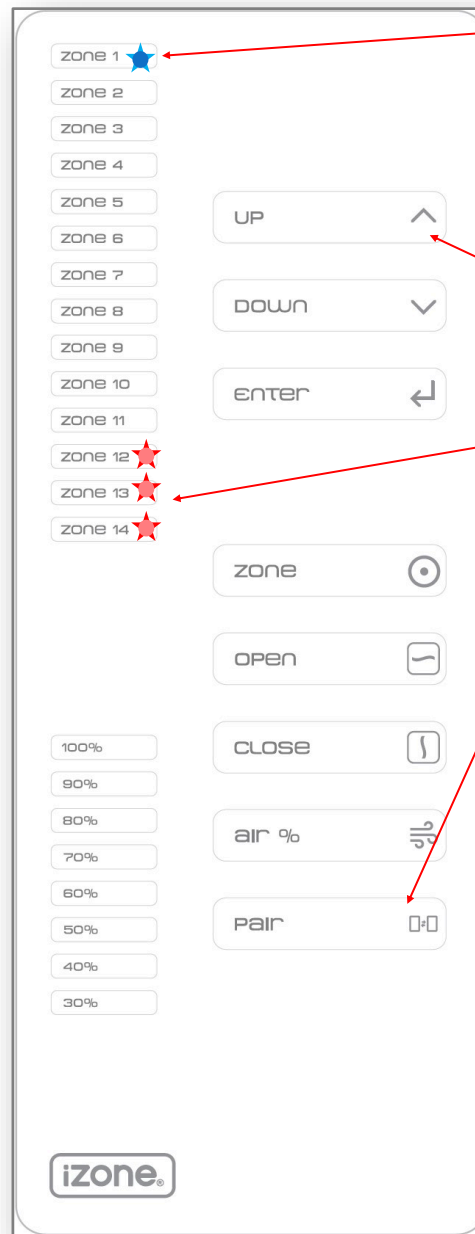

1. To pair the remote to the system . Press and hold the pair button on the remote and at the same time press the pair button on the C225 module. Zone 1 will flash blue rapidly. You can also press the AC pair button on a touch screen if one is fitted to the system.

4. To force the system to Auto configure:

- a) Press and hold the Up button then press and release the pair button.
 - b) Zones 12, 13, & 14 will flash rapidly indicating the system is Auto configuring.
- a) It will take around 5 minutes to complete Auto configuration. If you press any button and Zones 12, 13, & 14 are still flashing rapidly this indicates the system is still configuring.

4.8 iZone Naked 410 remote - Configuration


Note:

Zone 1 will be set as the default constant zone when Auto configured.

Hint:

Configure in this order:

- 1. Pair the remote to the CPU first.**
- 2. Then set the dial in the zone sensors to the correct zone number.**
- 3. Pair each sensor to the system.**
- 4. Force Auto configuration**
- 5. Test air flows to each zone and fit zone labels onto the back of the remote.**
- 6. Test sensors by pressing the sensor button to ensure the correct zone is set to Climate control.**

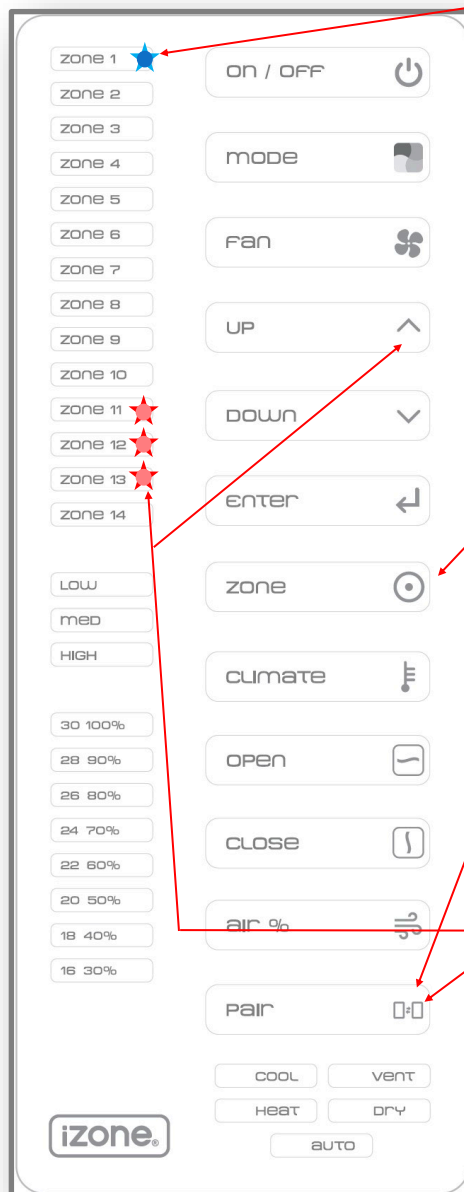

1. To pair the remote to the system .
Press and hold the pair button on the remote and at the same time press the pair button on the C225 module . Zone 1 will flash blue rapidly. You can also press the AC pair button on a touch screen if one is fitted to the system.

3. To pair a wireless sensor to the system:



- Set the dial inside the sensor to the correct zone number. Press and hold the pair button in the sensor
- On the remote—Press and hold the zone button then press the pair button. The blue LED on the sensor will flash rapidly to indicate it is pairing.


4. To force the system to Auto configure:

- Press and hold the up button then press and release the pair button.
- Zones 12, 13, & 14 will flash rapidly indicating the system is Auto configuring.
- It will take around 5 minutes to complete Auto configuration as it needs to receive data from each of the zone sensors



5.0 User manual (shown in Classic style)


5.1 iZone 400 & 405 home

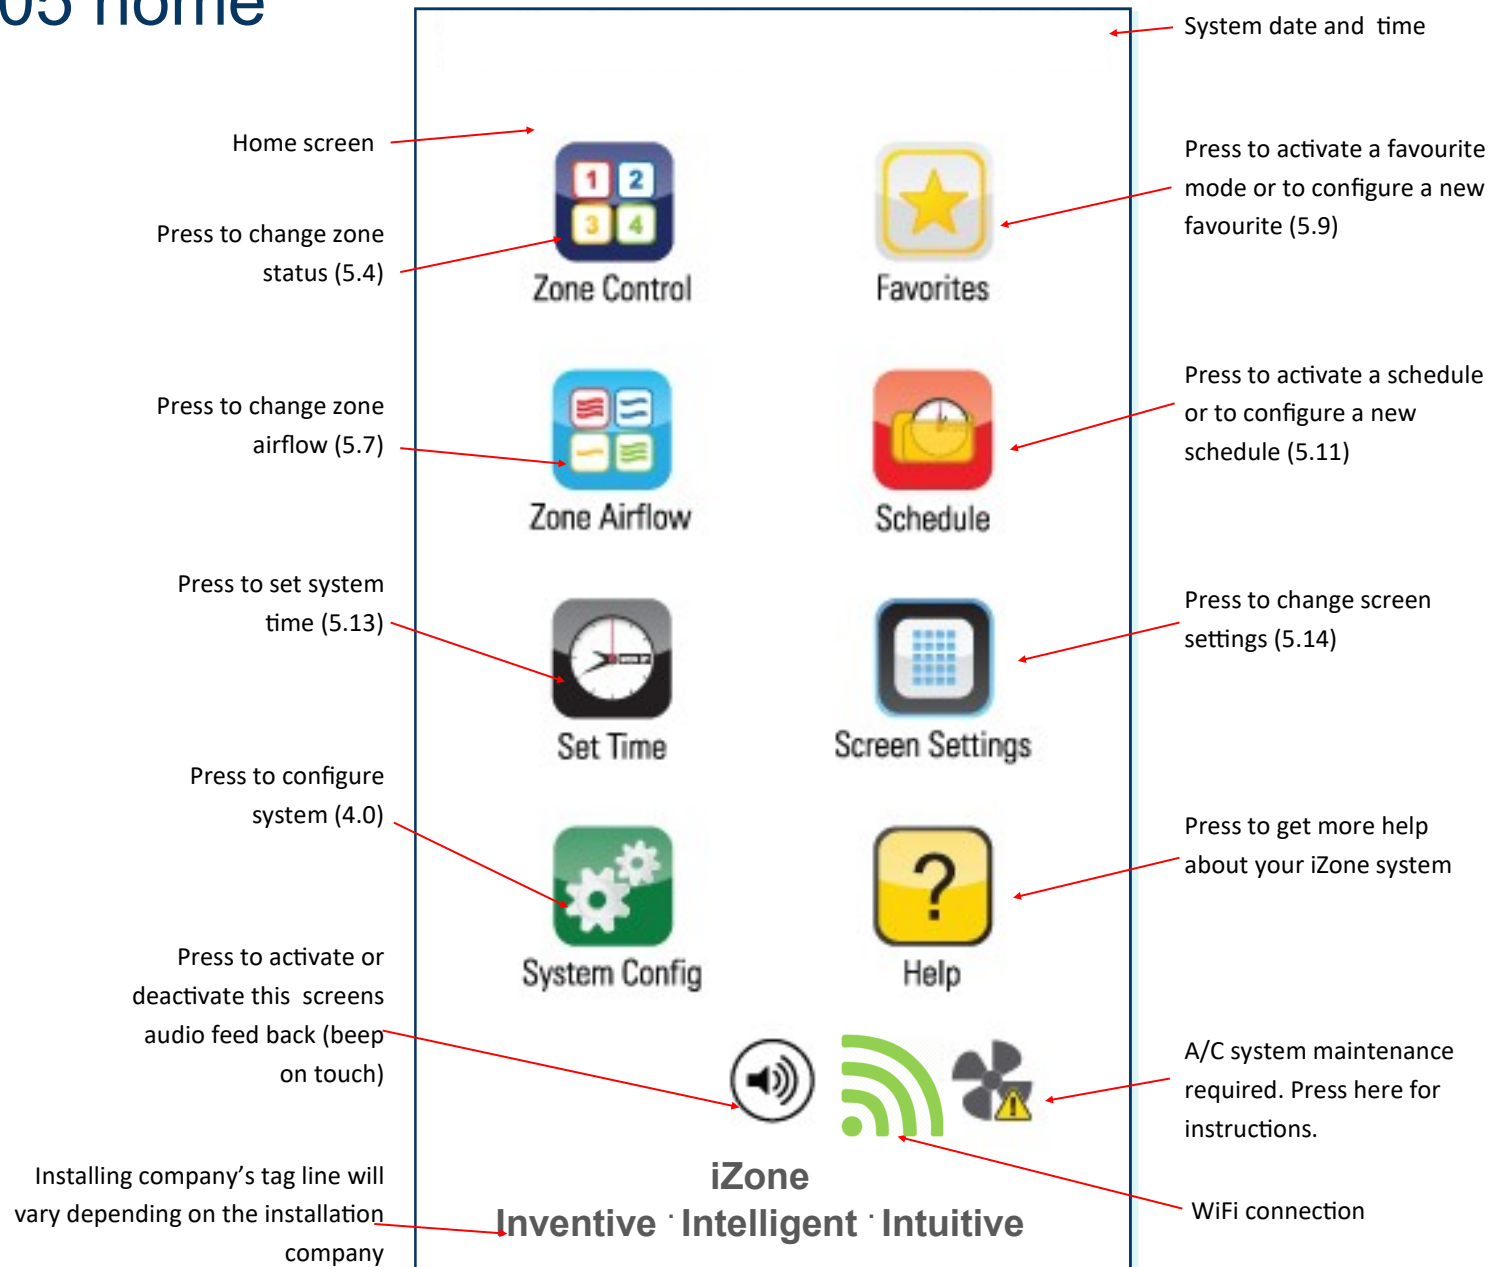- To get back to the Home screen at any time press. 
- When entering names or values using the keyboard it is easier to use a thin object such as a toothpick. Do not use sharp, hard objects as they may damage the screen. The enter button must always be pressed to save the changes you have made. 
- Some functions may have been locked by your installer to ensure the commissioned values are not changed. To make changes to these values contact your installation company.




5.2 iZone 410 - 435 home screen

- To get back to the Home screen at any time press. 
- When entering names or values using the keyboard it is easier to use a thin object such as a toothpick. Do not use sharp, hard objects as they may damage the screen. The enter button must always be pressed to save the changes you have made. 
- Some functions may have been locked by your installer to ensure the commissioned values are not changed. To make changes to these values contact your installation company.

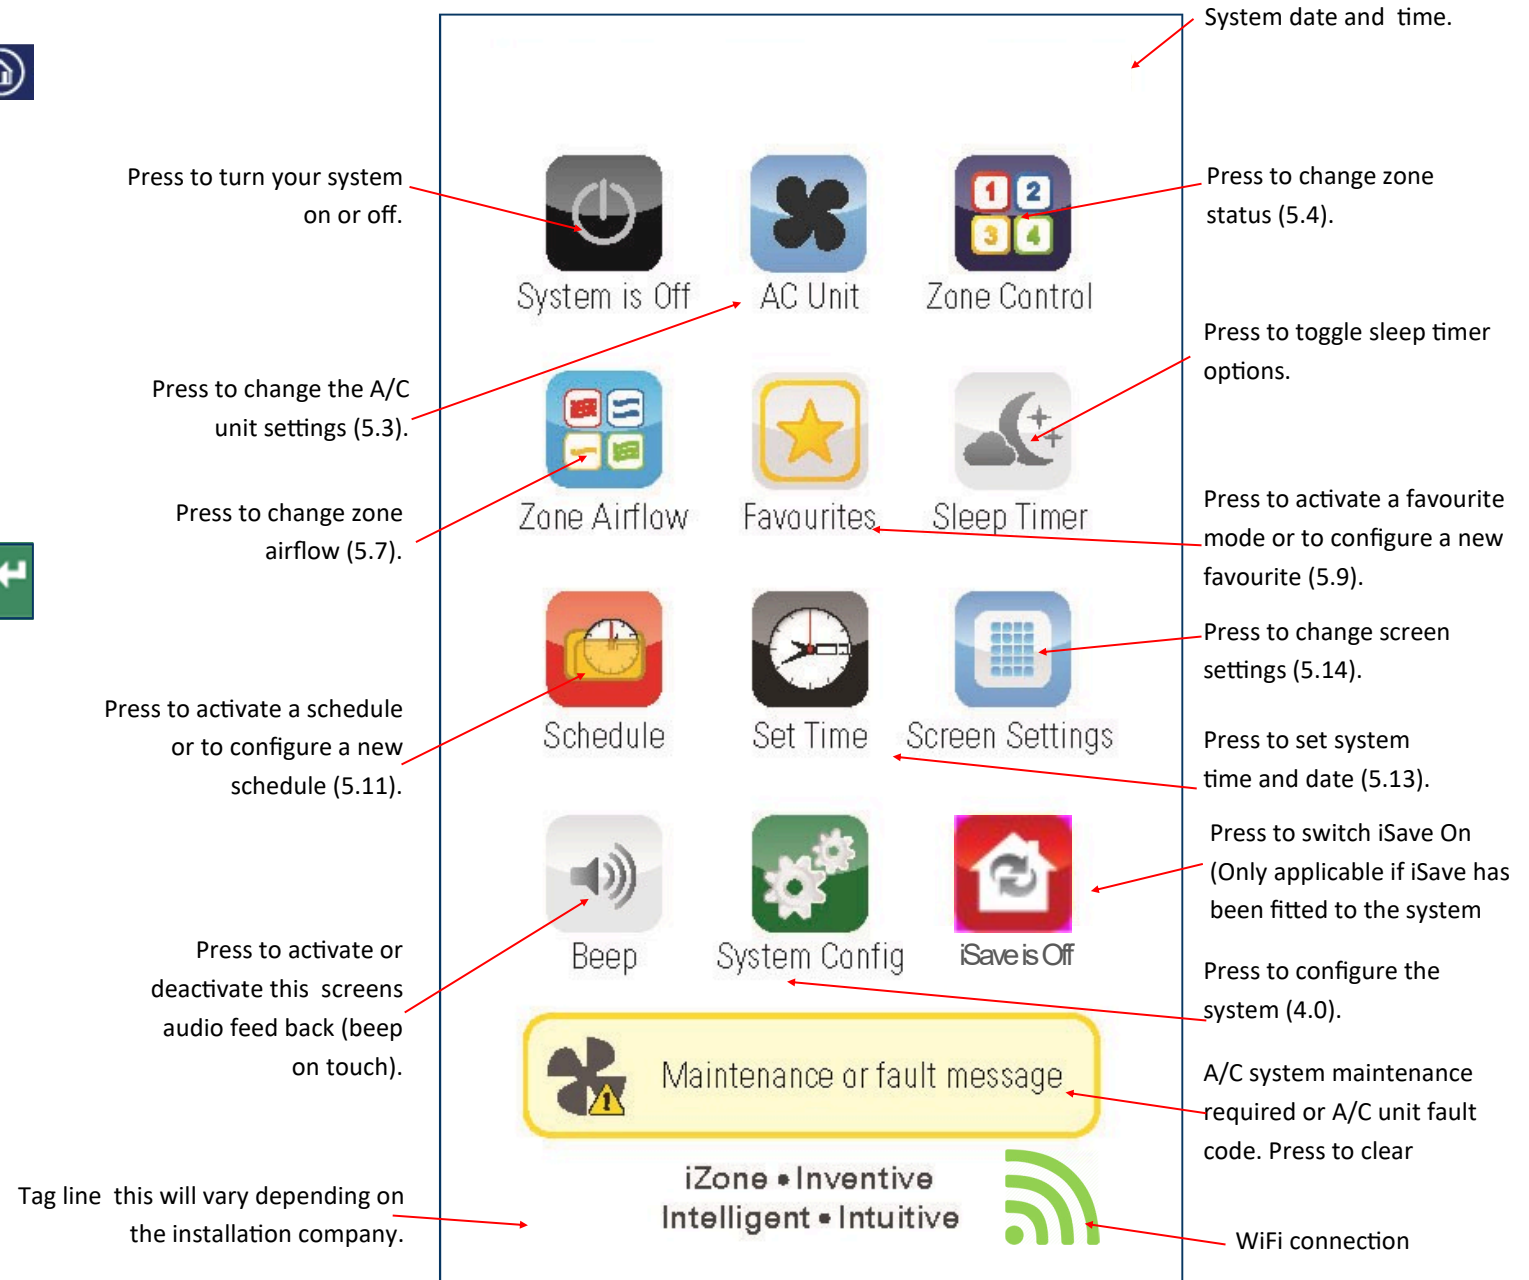

5.3 AC unit control

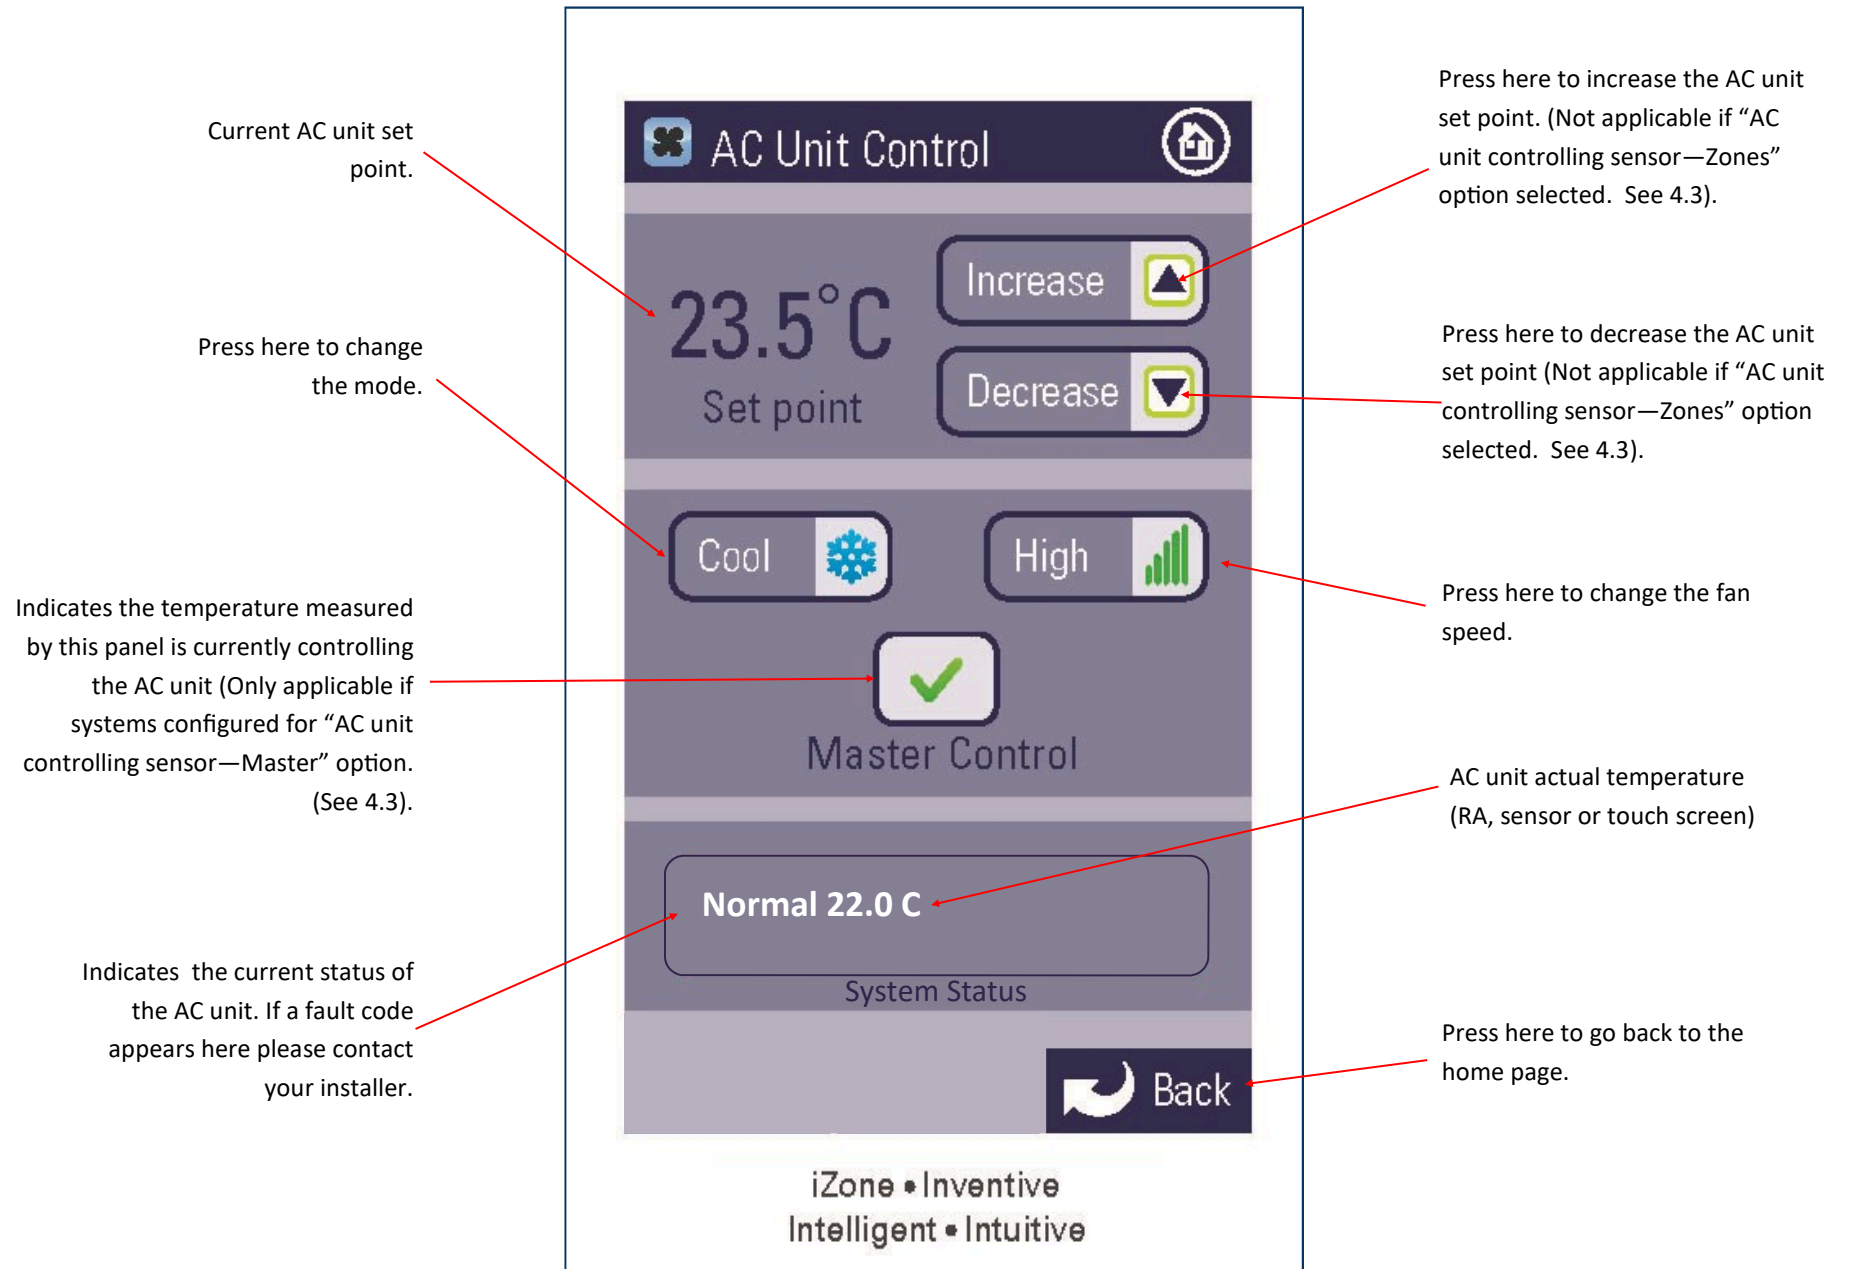

5.4 Zone control

Indicates this zone is currently in climate control mode.

Zone Name. Press to edit zone name and other zone settings (5.5).

Indicates this zone is currently fully open.

Indicates this zone is currently closed.

Indicates the hall is an electronic constant and it is currently active.

Scroll up or down to see more zones.

1

2

3

4

Zone Summary

Zone 1

Auto

Living room

Closed

Dining room

Auto

Kitchen

Open

Master bedroom

Auto

John bedroom

Auto

Study

Closed

Hall

Const

Up

Down

Back

iZone
Inventive · Intelligent · Intuitive

Indicates Zone 1 is in climate control mode Press here to change the Set point. (5.6).

Indicates this zone is closed. Press here to open the zone.

Indicates this zone is open. Press here to close the zone.

Indicates there could be a fault with this damper. Contact your installer.

Indicates this zone is currently being overridden by the system and is being used as a constant because too many zones are closed.

Press here to go back to the home page

5.5 Edit zone names & settings

The screenshot shows the 'Dining Room' zone settings screen. The interface includes a header bar with the zone name and a home icon. Below this, the system zone number and name are displayed. The current zone status is shown, along with maximum and minimum airflow set points. The room area is also displayed. The status of the zone is indicated as 'Constant Zone Inactive'. At the bottom, there are navigation buttons for 'Next', 'Previous', and 'Back'. The iZone logo and tagline 'Inventive · Intelligent · Intuitive' are at the very bottom.

Current zone being edited.

System zone number and display name.

Current zone status.

Zone maximum and minimum air flow set points.

Status of this zone if it has been selected as an electronic constant.

Press to edit zone name.

Press to edit current zone status.

Press to change maximum and minimum airflow set points.

Room area (if Fan Auto function has been configured).

Next Previous Back

iZone
Inventive · Intelligent · Intuitive

5.6 Adjusting temperature controlled zones

Indicates current zone being adjusted.

Indicates current temperature set point required for this zone.

Press here to fully open this zone.

Press here to allow iZone to automatically control the temperature in this zone.

Indicates the actual temperature in this zone (as measured by iZone).

Scroll up or down to see more zones.

Dining Room

23.5°C
Setpoint

Open

Climate

23.5°C
Actual Temp

Next

Indicates RF strength from sensor serving this zone is acceptable (only if RF sensor is installed.)

Indicates battery in the sensor serving this zone requires replacement. (only if RF sensor is installed)

Press here to increase the current zone set point temperature.

Press here to decrease the current zone set point temperature.

Press here to close this zone.

Press here to select this zone as the master (only available if configured for Master AC unit control).

Indicates the current temperature of the air inside the air conditioning system ductwork.

Press here to go back to the zone summary.


22.5°
In Duct Temp

Previous

Back

iZone
Inventive · Intelligent · Intuitive

5.7 Zone airflow summary

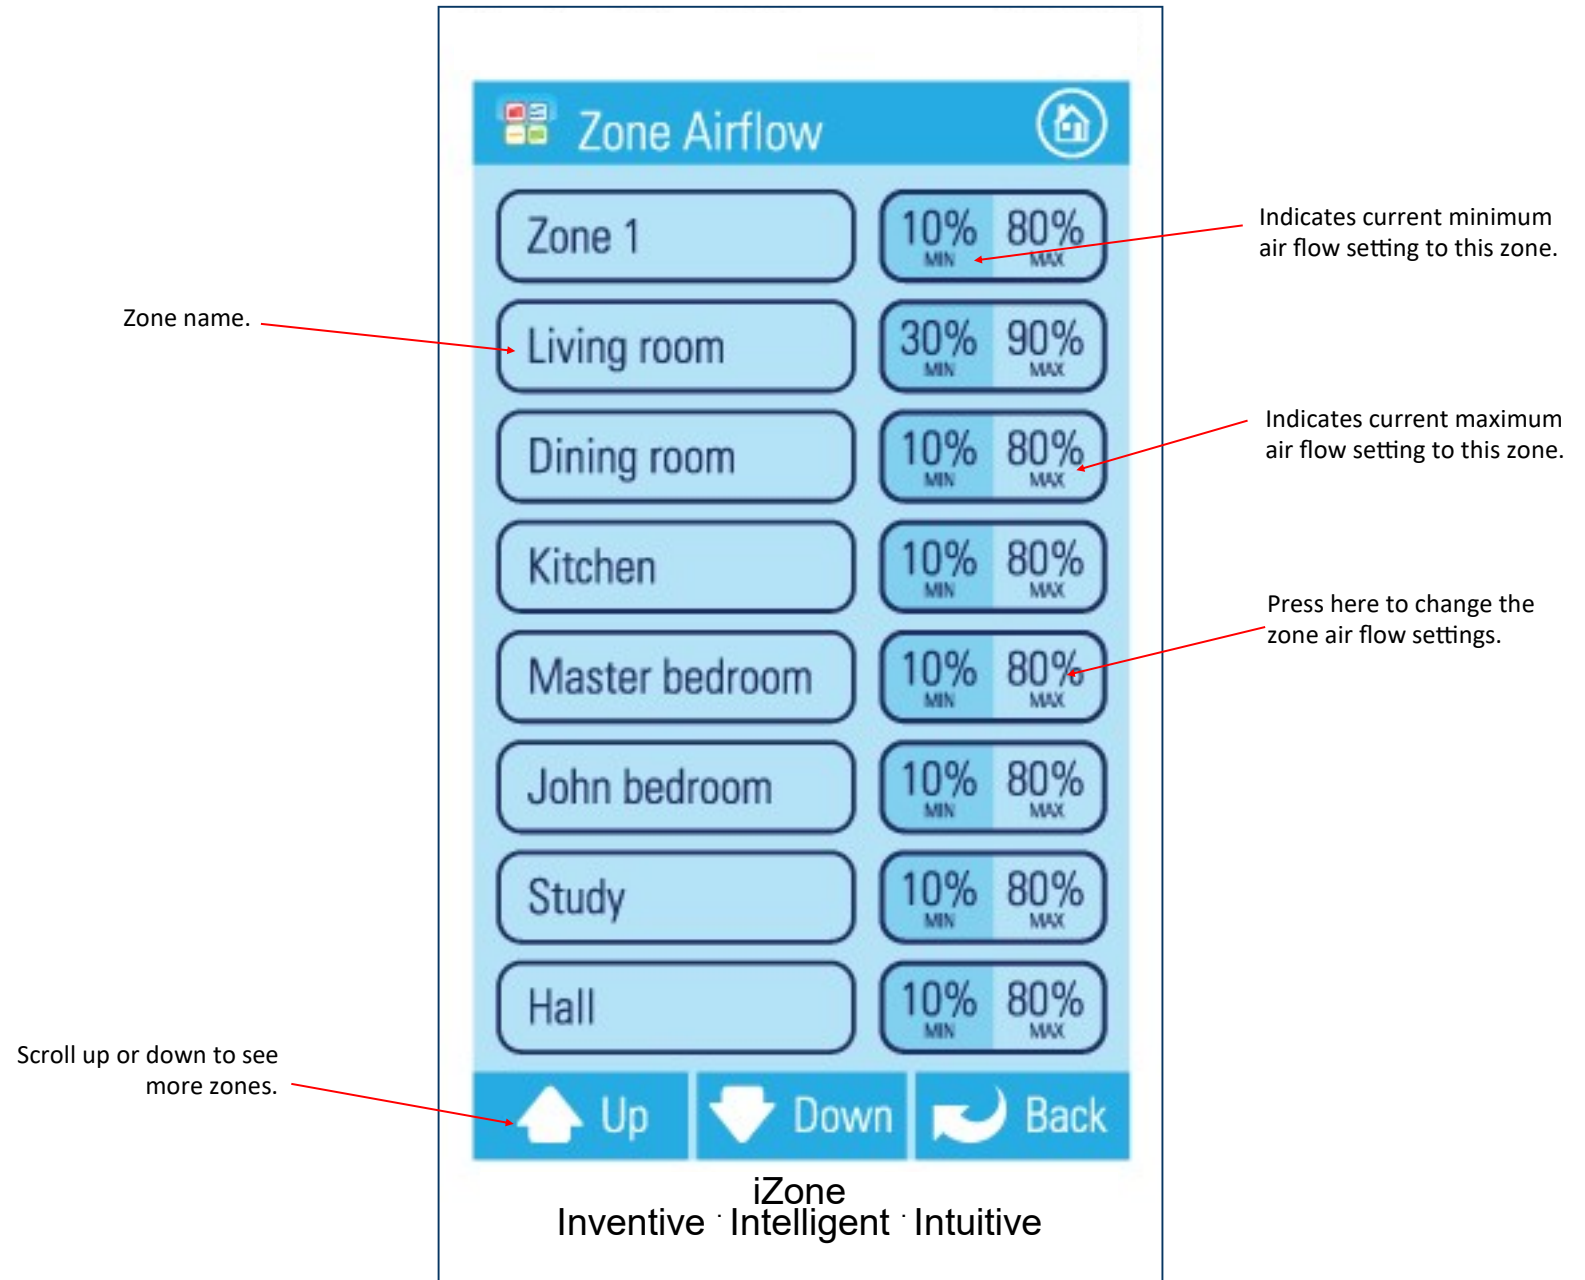

5.8 Changing zone airflows

Please note: It is possible to lock the maximum and minimum airflow settings in the configuration menus. If your screen does not display as indicated here and you require to make changes to airflows please contact your installer to activate your display.

Indicates current zone that you are changing the airflow to.

Indicates the current maximum airflow setting for this zone.

Press here to increase the maximum airflow to this zone.

Press here to decrease the maximum airflow to this zone.

Indicates the current minimum airflow setting for this zone.
(This is usually set at 0%).
Min Airflow will not display if this adjustment has been locked.

Press here to increase the minimum airflow to this zone.

Press here to decrease the minimum airflow to this zone.

Scroll up or down to see more zones.

Press here to go back to the airflow summary.

Living Room

90%
Max Airflow

Increase

Decrease

30%
Min Airflow

Increase

Decrease

Next Previous Back

iZone
Inventive · Intelligent · Intuitive

5.9 Favourites


Press the favourite you would like and iZone will automatically change all the zones settings for this favourite.

Indicates this favourite has not been used.

Press here to setup and edit favourites



5.10 Assigning and editing favourites

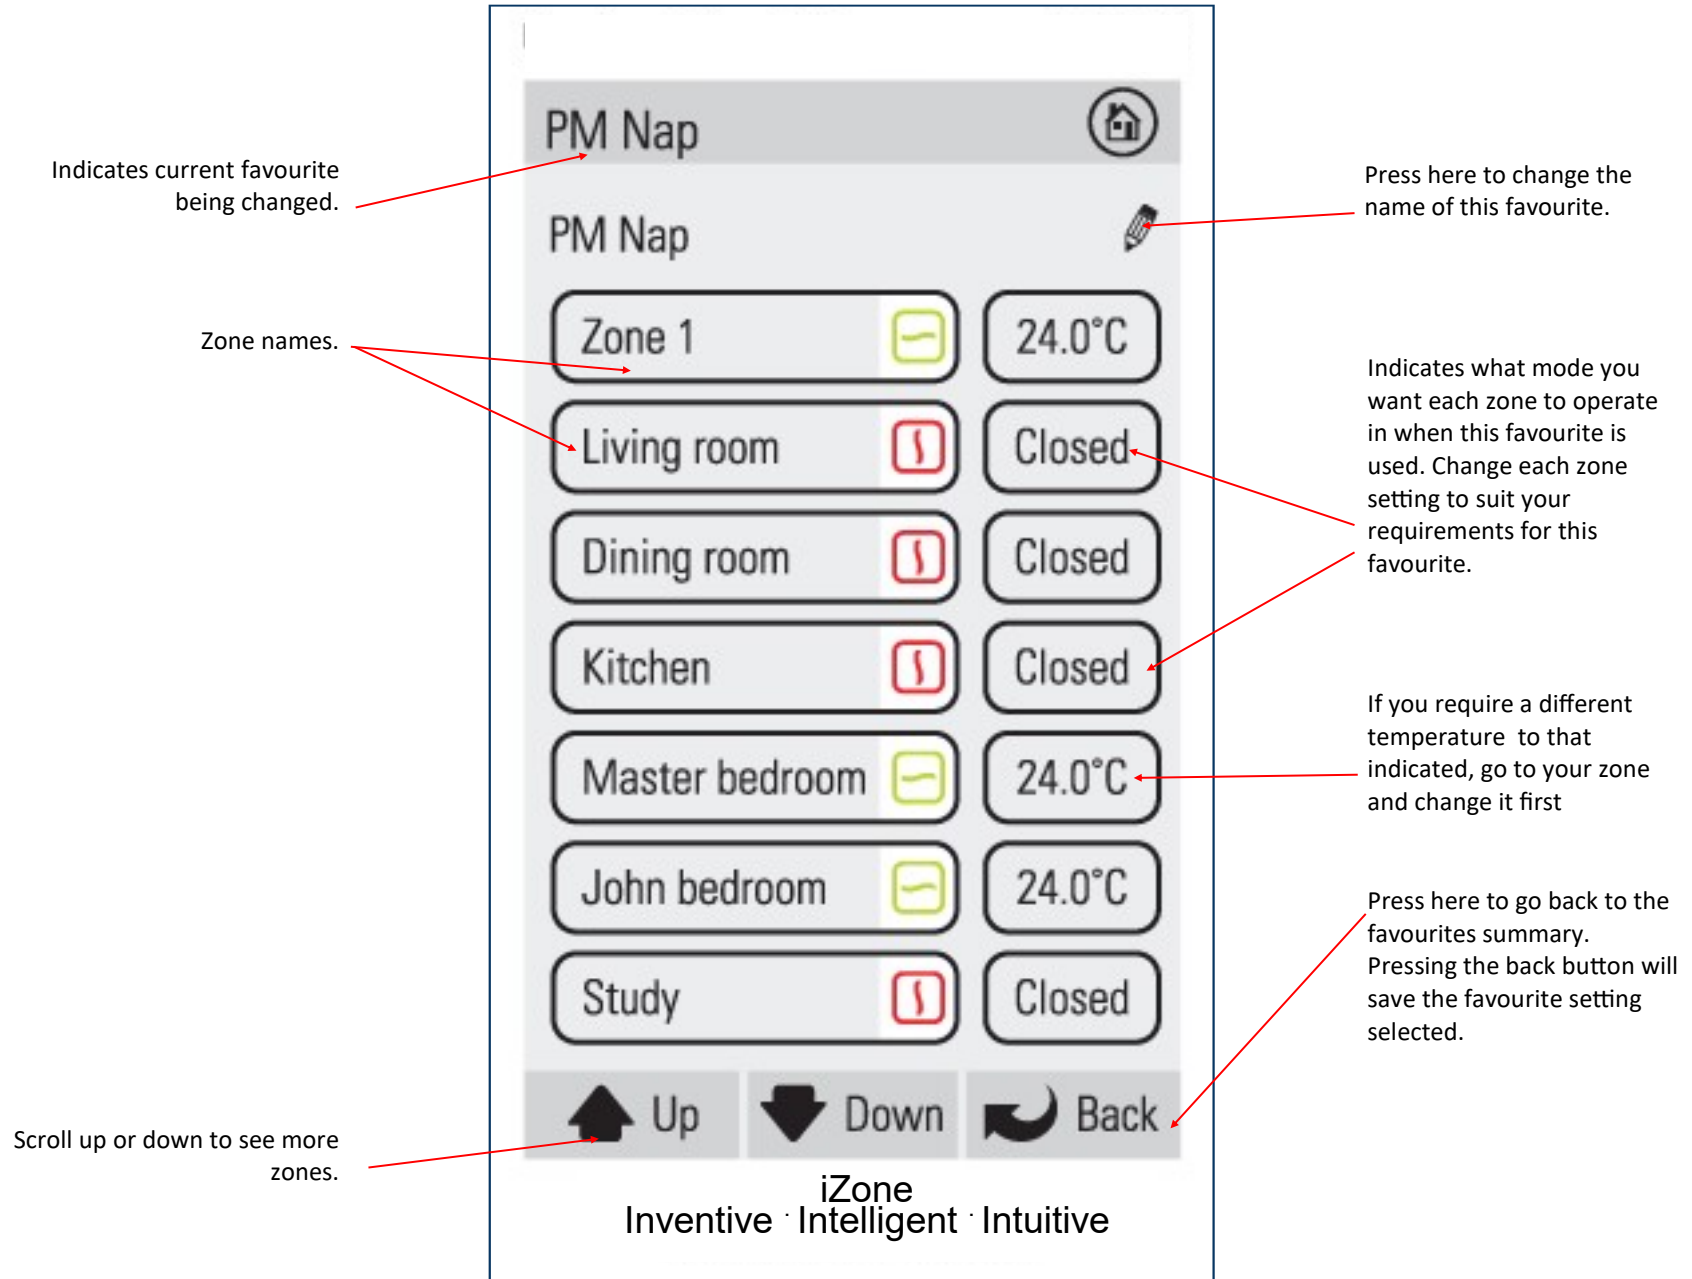

5.11 Schedules

The screenshot shows a mobile application interface titled "Set Schedule". It features a grid of nine star-shaped buttons, each representing a different room or activity. The buttons are arranged in three rows and three columns. The first row contains "PM Nap" (blue star), "Watch TV" (pink star), and "Wake" (green star). The second row contains "All Bedrooms" (red star), "Meals & Living" (orange star), and "Dinner Party" (dark blue star). The third row contains "Living, Dining, Kitchen" (yellow star), "User assign" (green star), and "User assign" (dark grey star). Each button has a small clock icon in the top right corner, indicating that a schedule can be set for that favourite. The "PM Nap" button is highlighted with a red arrow pointing to it from the text "Any of your favourites can be set to automatically start at any time of your choosing. Press here to enable the time based schedule for favourite (PM Nap)." The "Watch TV" button is highlighted with a red arrow pointing to it from the text "Indicates an automatic time schedule has been enabled for this favourite." The "Dinner Party" button is highlighted with a red arrow pointing to it from the text "Indicates no automatic time schedule has been enabled for this favourite." At the bottom of the screen, there are two red buttons: "Edit schedules" (with a gear and pencil icon) and "Back" (with a curved arrow icon). A red arrow points to the "Edit schedules" button from the text "Press here to set up or edit a schedule on any favourite". Below the buttons, the text "iZone Inventive · Intelligent · Intuitive" is displayed.

Any of your favourites can be set to automatically start at any time of your choosing. Press here to enable the time based schedule for favourite (PM Nap).

Indicates an automatic time schedule has been enabled for this favourite.

Indicates no automatic time schedule has been enabled for this favourite.

Press here to set up or edit a schedule on any favourite

Edit schedules **Back**

iZone
Inventive · Intelligent · Intuitive

5.12 Setting and editing a schedule

Indicates current schedule that you are changing or setting.

Indicates the start time for this schedule.

Indicates the stop time for this schedule.

Indicates the days this schedule will not run. Press the day you want the schedule to apply to.

Press next to see the next schedule.

PM Nap

24Hr Time Format

START-08:00

STOP-17:30

Mon Tue Wed Thu Fri Sat Sun

Delete this schedule

1	2	3	4	5	6	7	8	9	0
Q	W	E	R	T	Y	U	I	O	P
A	S	D	F	G	H	J	K	L	
Z	X	C	V	B	N	M	,	.	/
			Space						

Next

Previous

Back

iZone
Inventive · Intelligent · Intuitive

Indicates the days this schedule will apply. Press to stop the schedule running on this day.


Press here to clear this schedule.

Press the key pad to change the time. Remember it is in 24 hour format so for 2:30 am type in 0230.

Press the enter button to save your new setting.

Press here to go back to the schedule summary.

5.13 Setting the time

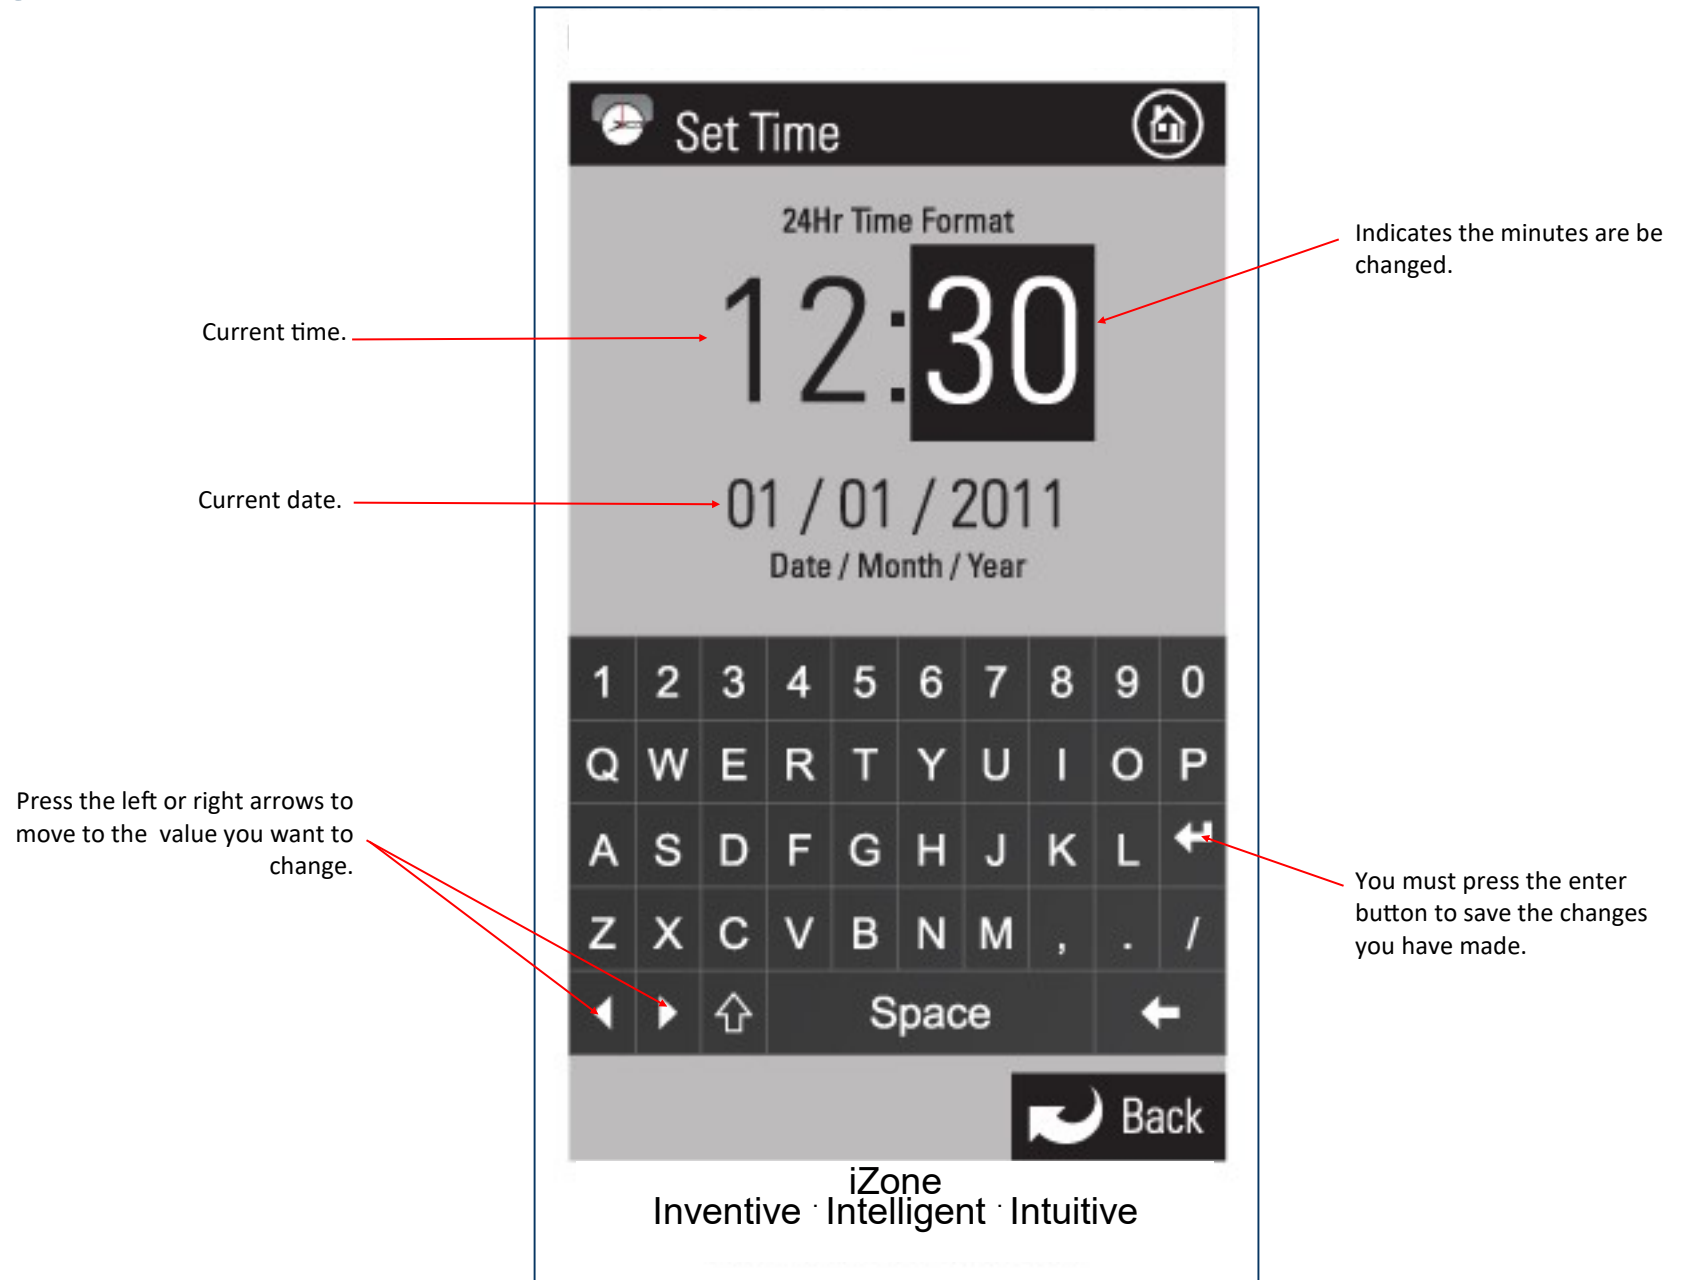

5.14 Changing the home screen colour

The screenshot shows the 'Screen Settings' menu with a home icon in the top right. The 'Screen Adjustments' section contains three sliders: 'Brightness', 'Contrast', and 'Saturation', each with a blue knob and minus/plus end caps. The 'Background Select' section displays a grid of ten color swatches. At the bottom, there are radio buttons for 'Modern' and 'Landscape' styles, a 'Back' button with a curved arrow, and the iZone logo with the tagline 'Inventive · Intelligent · Intuitive'.

Slide left / right to adjust the screen brightness.

Slide left / right to adjust the screen saturation.

Slide left / right to adjust the screen contrast.

Press the colour you would like for your home screen. Fine adjustments to the shade, tone, hue can be made using the brightness, contrast and saturation slides.

Press here to change the graphics from Classic to Modern style.

Press here to change the graphics from Classic Portrait to Classic Landscape.


Press here to go back to the home screen.

Modern
Landscape


Back

iZone
Inventive · Intelligent · Intuitive

5.15 iSense controller

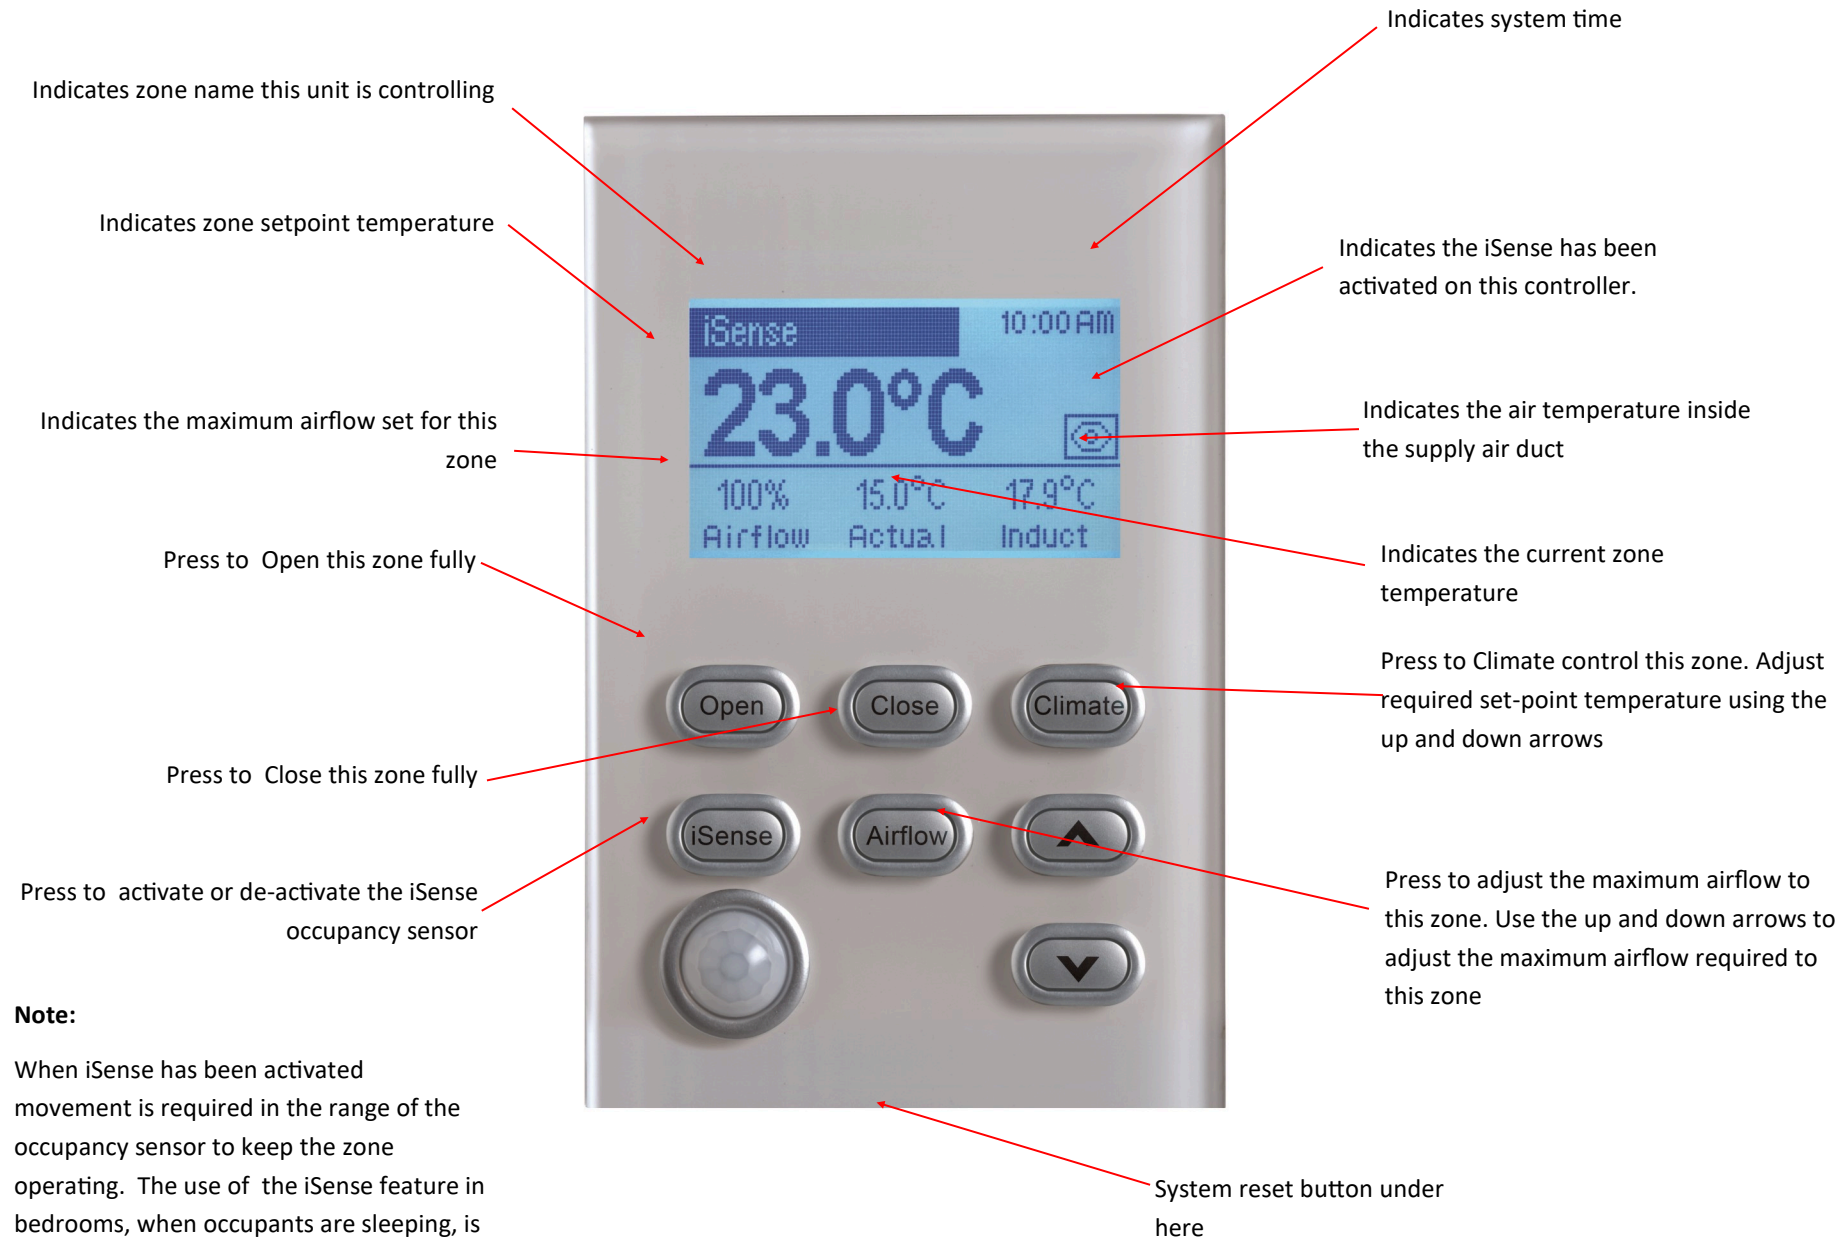

5.16 iZone Naked 400 remote - User manual

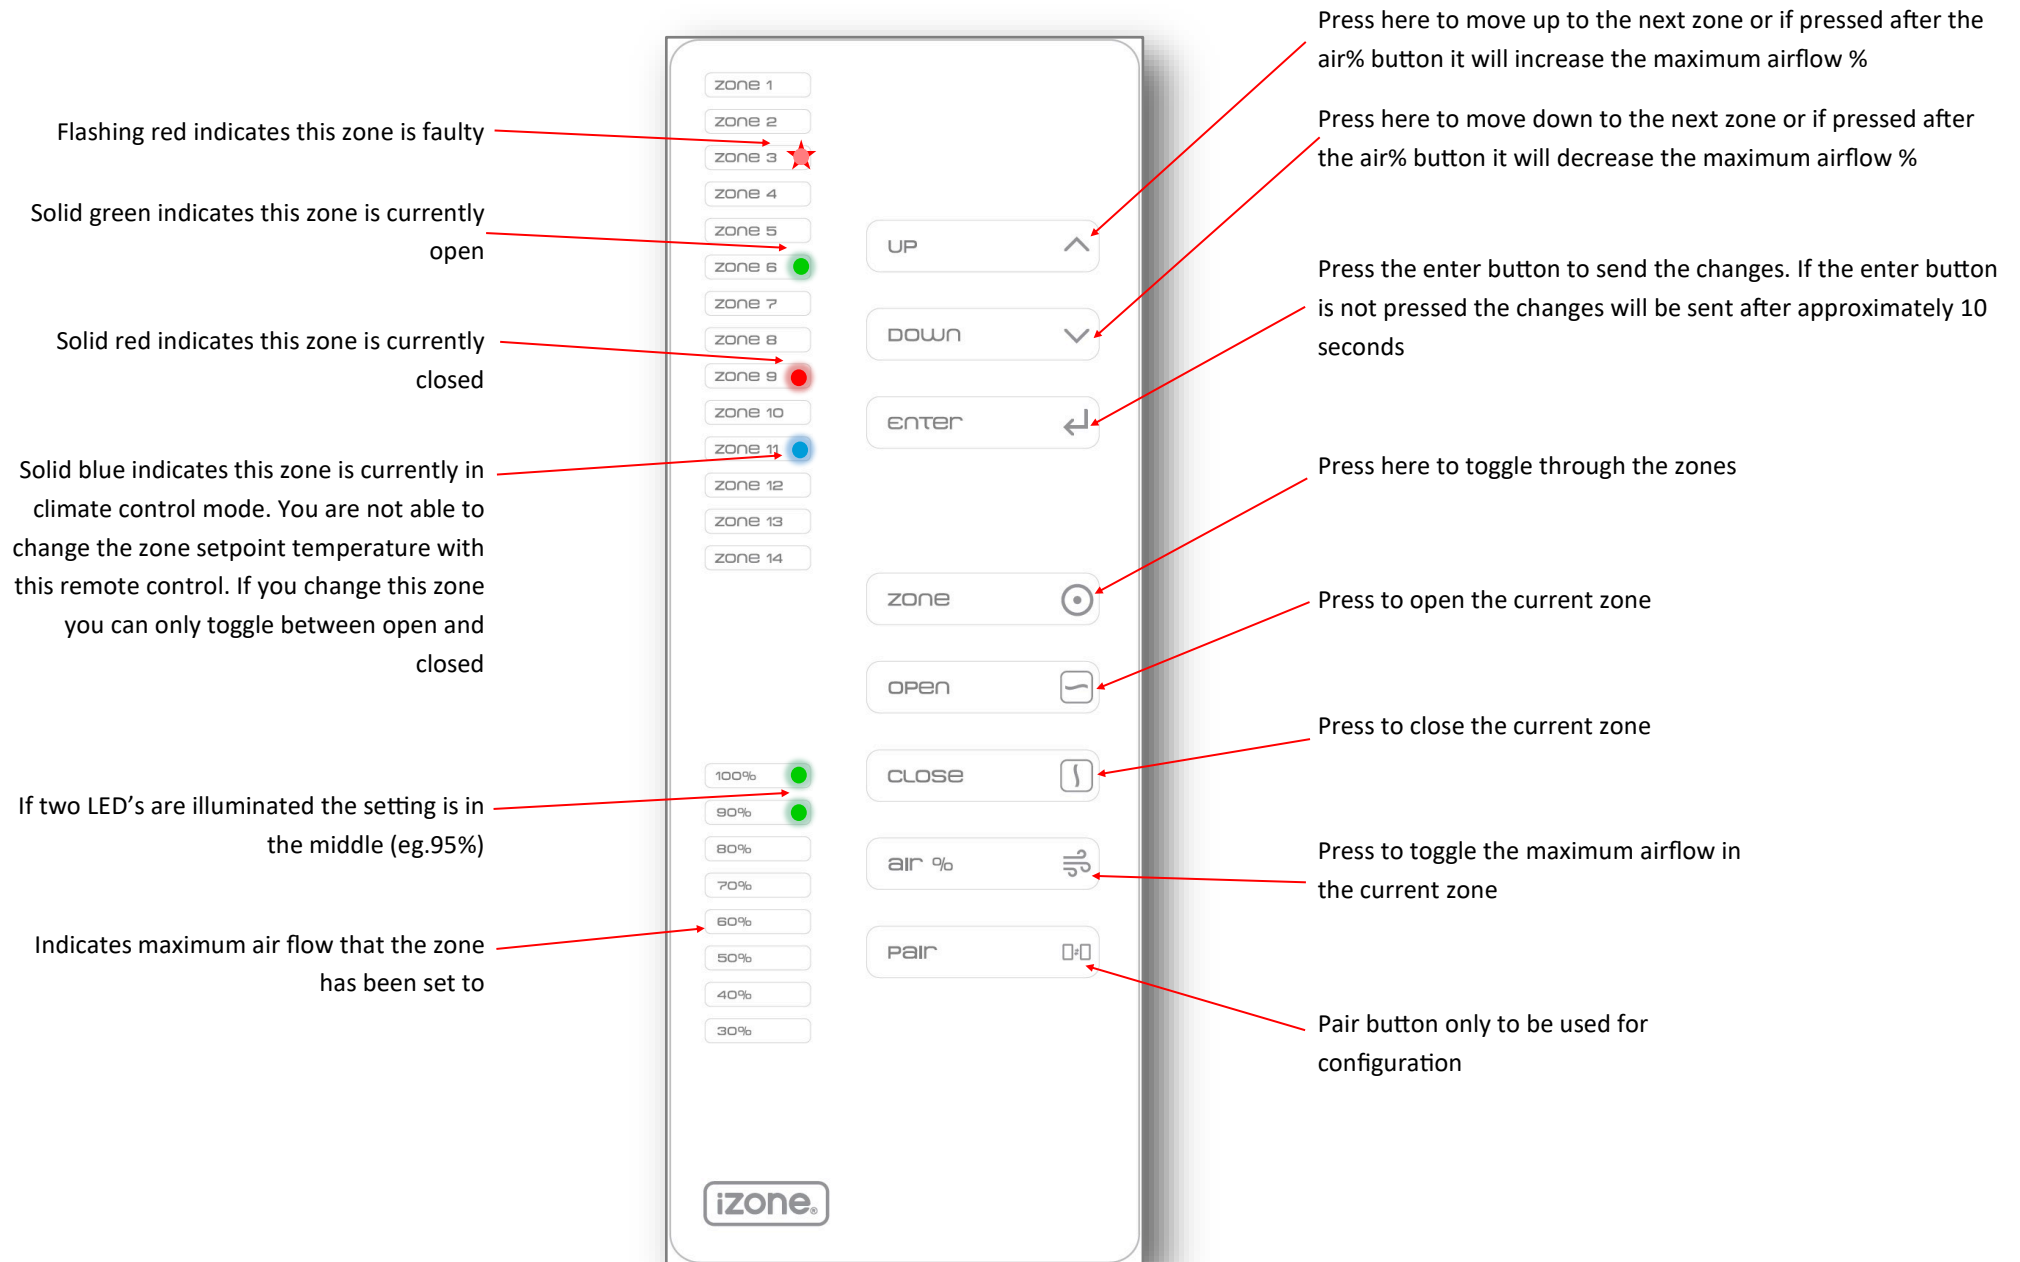

5.17 iZone Naked 410 remote - User manual



6.0 Warranty registration

Your system is supplied with a standard 2 year warranty.
To extend your warranty you are required to complete this warranty registration form and email, fax or post it to Airstream along with a copy of your invoice. For terms and conditions please see Airstream's warranty policy at www.izone.com.au

Full Name:

Contact Phone number including area code: Email address :

iZone System ID number (if applicable): If you have more than one iZone system, please include additional registration forms.

Address where the system is installed:

Date of purchase: / /

Installation Company:

Proof of Purchase attached: ☐
Yes / No Signature Date

Post, fax or email your registration to :
Airstream Components
9 Geelong Court, Bibra Lake,
WA 6163
Fax: 08 9494 1346
Email: info@izone.com.au

6.1 Airstream product warranty policy

This document sets out the warranties that are provided by Airstream Components WA Pty Ltd ACN 146 196 778 ("**Airstream**") in relation to each Product.

Definitions

In this document:

"**Australian Consumer Law**" means the law set out in Schedule 2 of the *Competition and Consumer Act 2010* (Cth) and any corresponding provisions of state or territory fair trading legislation.

"**Customer**" means the party that acquired the Product from Airstream for that party's use or, if the party who acquired the Product from Airstream was an authorised distributor, reseller or dealer, the party who acquired the Product from the distributor, reseller or dealer.

"**iZone Tablet**" means the product known as the "iZone Tablet".

"**Product**" means:

- an iZone Tablet; or
- other product manufactured by or for Airstream.

"**Site**" means the place at which the Product is located.

"**Third Party Goods**" means a product (including batteries) or item of equipment manufactured by a third party which is supplied with, or fitted to, a Product.

"**Warranty**" has the meaning given in clause 2.1.

"**Warranty Claim Form**" means the warranty claim form available on the Website.

"**Warranty Period**" means:

- for an iZone Tablet, one (1) year;
- for a Product (excluding an iZone Tablet) that has not been registered in accordance with clause 3, two (2) years; or
- for a Product (excluding an iZone Tablet) that has been registered in accordance with clause 3, eight (8) years,

from the date of purchase by the Customer.

"**Website**" means the Airstream website at www.izone.com.au.

Warranty

Subject to clauses 4 and 5, Airstream expressly warrants that each Product is free from operational defects in workmanship and materials for the Warranty Period ("**Warranty**").

The benefits of the Warranty are in addition to all other rights and remedies which the Customer may have under Australian Consumer Law and any other law in relation to the Product to which the Warranty relates.

Each Product comes with guarantees that cannot be excluded under Australian Consumer Law.

Extended Warranty

In order to receive an extended eight (8) year Warranty for a Product ("**Extended Warranty**") the Customer must register the Product by completing, and providing to Airstream, the registration form supplied in the

Product user manual or downloaded from the Website ("**Registration**").

Registration must be completed within sixty (60) days of the Product being purchased by the Customer.

Exclusions to Warranty

The Warranty does not cover Third Party Goods.

Subject to any statutory provisions to the contrary, the Warranty does not extend to cover damage to furniture, carpets, walls, ceilings, foundations, vehicles, or any other consequential loss arising either directly or indirectly due to the malfunction of the Product.

If a third party installer knowingly installs a defective Product, the Warranty will be strictly limited to the resupply of that Product and shall not include any labour costs.

Repair or Replace

During the Warranty Period, Airstream will, subject to clause 6, replace or repair any defective Product or defective component of a Product without, subject to clause 8, charge provided that the defect does not constitute damage that has arisen from:

- faulty, improper, incorrect or incomplete adjustment, operation or installation of the Product;
- any modification of the Product, without the written approval of Airstream, including tampering with or any attempt to disassemble the Product;
- inadequate or improper maintenance of the Product;
- misuse or abuse;
- normal wear and tear;
- failure for any reason to follow the instructions for use given in any user manual applicable to the Product;
- act of God;
- fire, flood, collision or other trauma; or
- insects or animals.

Warranty Claim Procedure

To obtain the benefit of the Warranty the Customer must:

contact Airstream within the Warranty Period or within seven (7) days of the discovery of the defect, whichever is the earlier;

complete and send to Airstream the Warranty Claim Form accompanied by proof of purchase of the Product.

On receipt of the Warranty Claim Form and proof of purchase of the Product, Airstream will contact the Customer to determine the extent of the issue or defect with the Product.

If there is an issue or defect with the Product that is covered by the Warranty then Airstream will at its sole option:

require the Customer, at the Customer's expense, to have the defective Product, or defective component part, delivered to Airstream; or

provided the Site is located in the Perth metropolitan area, send an Airstream service technician to the Site to effect repairs to or replacement of the Product, save that the reasonable travel expenses (including travelling time) of the technician must be paid by the Customer.

In order to complete repairs or replacement of a Product in accordance with clause 6.3(b), Airstream requires safe and ready access to the Site and each Product including where required via scaffolding and access panels. If Airstream considers access to the Site or Product to be unsafe or not readily available, Airstream will not commence or will cease all work to repair or replace the Product. All costs incurred in the obtaining of safe and ready access to the Site and Product shall be payable by the Customer.

Any services requested by the Customer outside of the scope of the Warranty will be charged to the Customer in accordance with the following schedule of charges ("**Charges**"):

Description	Charges
Call out fee plus first hour on Site	\$165.00 plus GST
Hourly labour rate after first hour on Site	\$100.00 plus GST
Replacement parts for Product and deliveries	As per Airstream's current price list

The Charges are subject to variation by Airstream from time to time.

Airstream will replace, or conduct repairs to, a Product as soon as practicable but will not be liable for any loss or damage caused by any delay.

Assignment

The Customer may not assign or otherwise transfer the Warranty.

Airstream may at its sole discretion transfer or assign the Warranty.

Transportation Costs and Risk During Transit

All transportation charges incurred in returning a defective Product, or any defective component parts of a Product, to Airstream for repair or inspection, and the cost of returning them to the Customer must be paid by the Customer.

The Customer assumes the risk of, and shall be responsible for, any loss of or damage to any Product during transit. For this reason, Airstream recommends that the Customer take out shipment/postage insurance.

Third Party Warranties

Third Party Goods may be covered by independent manufacturer warranties. It is the Customer's responsibility to familiarize itself, himself or herself with these warranties. No additional warranty is provided by Airstream for Third Party Goods.

7.0 Further assistance

1. If you require warranty or maintenance on your air conditioning system or iZone system you should contact your installation company.
2. If you want to add more zones or temperature control to any zone you should contact your installation company.
3. If you require assistance from the manufacturer contact:

Airstream Components
9 Geelong Court
Bibra Lake
Western Australia 6163

Email: support@izone.com.au
Phone: +61 8 9418 6631
www.izone.com.au

